


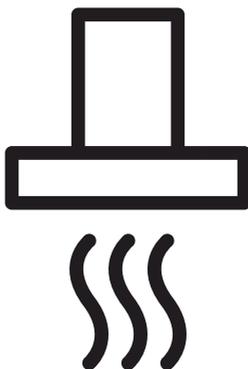

Hood

User manual



HCP61310I HCP91310I
HCP61310IH HCP91310W
HCP61310W HCP91310IH
HCP61310B

EN-BG-BS-CZ-DE-ET-FR-HR-HU-LT-LV-MK-NL-PL-PT-RO-SK-SL-SQ-SR



01M-8861583200-0121-12 01M-8861623200-0121-12
01M-8861593200-0121-12 01M-8865173200-0121-12
01M-8861613200-0121-12 01M-8863853200-0121-12
01M-8861603200-0121-12

Please read this guide first!

Dear Customer,

Thank you for choosing a BEKO product. We would like you to achieve the optimal efficiency from this high quality product which has been manufactured with state of the art technology. Please make sure you read and understand this guide and supplementary documentation fully before use and keep it as a reference. Include this guide with the unit if you hand it over to someone else. Observe all warnings and information herein and follow the instructions.

Keep in mind that this user guide may apply to several product models. The guide clearly indicates any variations of different models.

Symbols and their meanings

These symbols are used throughout this guide:

	Important information and recommendations regarding the use of the appliance.
	CAUTION: Warnings on personal injury or property damage.
	Electric shock warning.
	Risk of fire warning.
	Electric shock protection rating



This product has been manufactured at modern facilities respectful to the environment without harming nature.

CONTENTS

ENGLISH	04-12
БЪЛГАРСКИ	13-25
BOSANSKI	26-36
ČESKY	37-47
DEUTSCH	48-60
EESTI	61-71
FRANÇAIS	72-82
HRVATSKI	83-93
MAGYAR	94-104
LIETUVIŲ K	105-115
LATVIAN	116-126
МАКЕДОНСКИ	127-139
NEDERLANDS	140-150
POLSKI	151-163
PORTUGUÊS	164-175
ROMÂNĂ	176-188
SLOVENSKÝ	189-199
SLOVENŠČINA	200-210
SHQIPTARE	211-221
СРПСКИ	222-236

1 Important safety and environmental instructions

1.1 General Safety

Important Safety Instructions Read Carefully And Keep For Future Reference This section contains safety instructions that will help protect from risk of fire, electric shock, exposure to leak microwave energy, personal injury or property damage. Failure to follow these instructions shall void any warranty.

- Beko products comply with the applicable safety standards; therefore, in case of any damage on the appliance or power cable, it should be repaired or replaced by the dealer, service center or a specialist and authorized service alike to avoid any danger. Faulty or unqualified repair work may be dangerous and cause risk to the user.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses
 - By clients in hotels, and other residential type environments;
 - Bed and Breakfast type environments.
- Operate the appliance for its intended purpose only as described in this manual.
- The manufacturer cannot be held liable for damages resulting from improper installation or misuse of the product.
- This appliance can be used by children aged from 8 years and above and persons

with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not be allowed play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of your product must be at least 50 cm for electric hobs and 65 cm for gas hobs.
- If the instructions for installation for the gas hob specify a greater distance, this has to be taken into account.
- Make sure that your mains power supply complies with the information supplied on the rating plate of the appliance.
- Never use the appliance if the power cable or the appliance itself is damaged.
- Prevent damage to the power cable by not squeezing, bending, or rubbing it on sharp edges. Keep the power cable away from hot surfaces and naked flame.
- Use the appliance with a grounded outlet only.

WARNING: Do not connect the appliance to the mains until the installation is fully complete.

1 Important safety and environmental instructions

- Place the appliance in a way so that the plug is always accessible.
 - Do not touch the lamps if they have operated for a long time. They can burn your hands since they will be hot.
 - Follow the regulations set out by competent authorities on discharge of the exhaust air (this warning is not applicable for use without chimney).
 - Operate your appliance after putting a pot, pan etc. on the hob. Otherwise, high heat may cause deformation in some parts of your product.
 - Turn off the hob before taking the pot, pan etc. from it.
 - Do not leave hot oil on the hob. Pans with hot oil may cause self combustion.
 - Pay attention to your curtains and covers since oil may catch fire while cooking food such as fries.
 - Grease filter must be replaced at least monthly. Carbon filter must be replaced at least every 3 months.
 - Product shall be cleaned accordance with user manual. If cleaning was not carried out in accordance with user manual, there may be fire risk.
 - Do not use non-fire-resistant filtering materials instead of the current filter.
 - Only use the original parts or parts recommended by the manufacturer.
 - Do not operate the product without the filter and do not remove the filters while the product is running.
 - In the event of be started any flame, de-energize your product and cooking appliances.
 - In the event of be started any flame, cover the flame and never use water to extinguish.
 - Unplug the appliance before each cleaning and when the appliance is not in use.
 - The negative pressure in the environment should not exceed 4 Pa (4 x 10 bar) while the hood for electric hob and appliances running on another type of energy but electricity operate simultaneously.
 - In the environment where the appliance is being used, the exhaust of devices running on fuel oil or gas, such as room heater must be absolutely isolated or device must be hermetical type.
 - When connecting the chimney, use pipes with a diameter of 120 or 150 mm. Pipe connection must be as short as possible and have as few elbows as possible.
- Danger of choking!** Keep all the packaging materials away from children.
- CAUTION:** Accessible parts may become hot when used with cooking appliances.
- The product outlet must not be connected to air channels that include other smoke.
 - The ventilation in the room may be insuf-

1 Important safety and environmental instructions

efficient when the hood for electric hob is used simultaneously with the devices operating on gas or other fuels (this may not apply to appliances that only discharge the air back into the room).

- Objects placed on the product may fall. Do not place any objects on the product.
- Do not flambe under the your product.

WARNING: Before installing the Hood, remove the protective films.

- Never leave high naked flames under the hood when it is in operation
- Deep fat fryers must be continuously monitored during use; overheated oil can burst into flames.

1.2 Compliance with the WEEE Directive and Disposing of the Waste Product:

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role

in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package Information





Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.


2 General Appearance

2.1 Overview

(Figure 1)

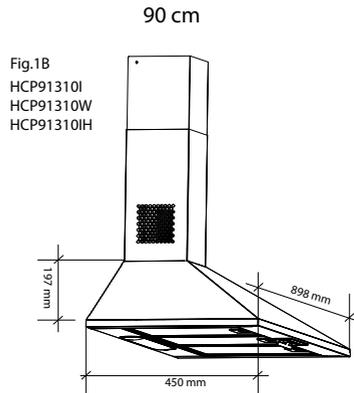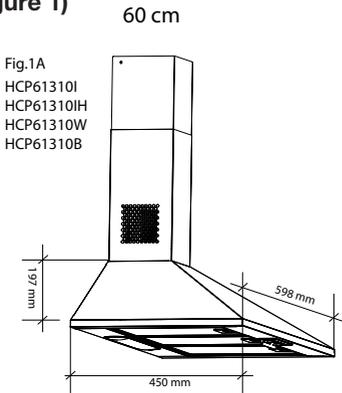

(Figure 2)

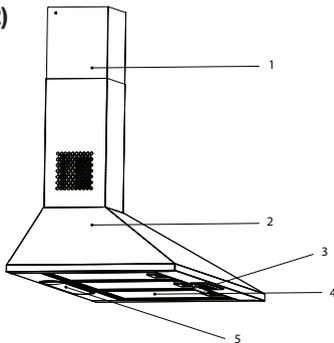


1. Chimney
2. Body
3. Control Panel
4. Aluminium Grease Filter
5. Lighting

2.2 Technical Data

Model	HCP61310I - HCP61310IH - HCP61310W - HCP61310B HCP91310I - HCP91310W - HCP91310IH
Supply voltage	220-240V ~ 50 Hz
Lamp Power (W)	2 x 3
Motor Power (W)	90
Flow rate (m ³ /h) – 3. Level	395
Insulation Class of Motor	Class F
Insulation Class	Class II

3 Operation of the Appliance

3.1 Controlling the Appliance

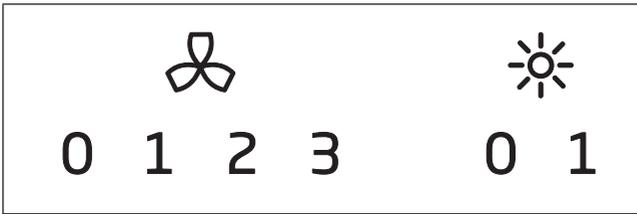

To turn off the lamp, set the lamp switch () to '0' position.

To turn on the lamp, set the lamp switch () to '1' position.

To turn off the motor, set the motor switch () to '0' position.

You can run the motor minimum at speed level 1 and maximum at speed level 3 depending on the cooking vapour intensity.

3.2 Efficient Use with Regard to Energy Saving

- When using your appliance, adjust the speed settings according to vapour and odour intensity, in order to save energy.
- Use low speeds (1-2) under normal conditions, and high speeds (3) in intense odour and vapour.
- The hood is equipped with lamps in order to illuminate the cooking area.

Using them for environmental lighting shall cause unnecessary energy expenditure and insufficient lighting.


3.3 Operating Instructions

- Your appliance contains a motor that has various speeds.
- For better performance, we recommend using low speeds under normal conditions and high speeds in cases of strong odours and intense vapour.

3 Operation of the Appliance

3.4 Replacement of Lamp


Make the electrical connections of the appliance. Your appliance is equipped with a 3 W spot LED lamp. For replacing the lamps, push downwards on the holder from its behind, turn it counter-clockwise, and take it out downwards. Apply the above operation in reverse to install new lamps (Figure 3).

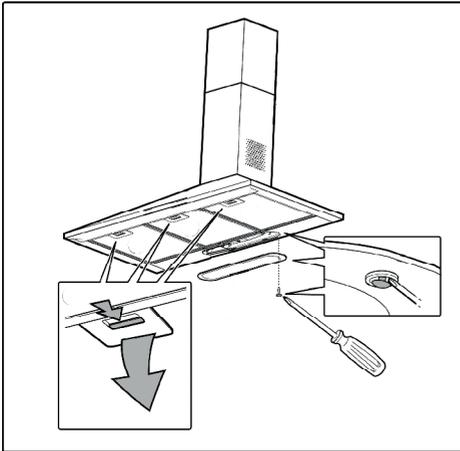

(Figure 3)

Bulb	
Bulb Power (W)	3
Holder / Socket	E14
Bulb Voltage (V)	220 - 240
Size (mm)	100 x 35
ILCOS Code	DRBB/F-3-220-240-E14-35/100

3.5 Operation with Flue Connection

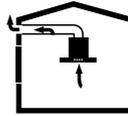

- Vapour is extracted through the flue duct, which is fastened to the connection head on the hood.
- The diameter of the flue duct must be the same as the connection ring. In horizontal settings, the pipe has to have a slight upward slope (around 10°) so that the air can exit the room easily.



3.6 Operation without Flue Connection

- Air is filtered through the carbon filter and recirculated in the room. Carbon filter is used when it is impossible to use a flue in the house.
- In flueless use, remove the flaps inside the flue adapter.
- Remove the aluminium grease filter. To install the carbon filter, fit the filter to the tabs by centring it on the plastic piece on both sides of the fan body. tighten it by turning right or left.
- Replace aluminium grease filter.


4 Cleaning and Maintenance



Before cleaning and maintenance, unplug the appliance or turn off the switch.

4.1 Cleaning of Aluminium Grease Filters

This filter retains the oil particles in the air. Aluminium grease filters may change colour as they are washed; this is normal and does not require replacing your filters.

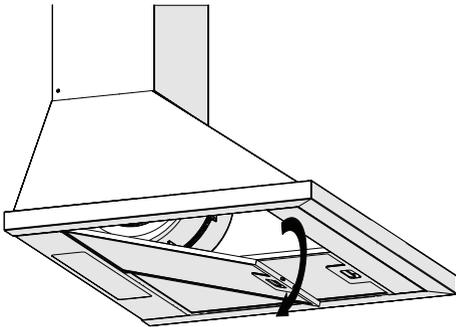

(Figure 4)

- Push the aluminium grease filter lock forward.
- Then pull it slightly down and pull it out (Figure 4). Otherwise, you can bend the filter. Wash and rinse aluminium grease filters with liquid detergent and replace aluminium filters to their sockets by carrying out the steps specified above in reverse order. This filter retains the oil particles in the air.



You may also wash your aluminium grease filters in the dishwasher.




CAUTION

In case of normal use, clean your filter once in a month.

4.2 Replacement of Carbon Filters

Odour removing filters contain charcoal (Active carbon). Aluminium grease filters must be installed in the product, regardless of whether or not charcoal filters are used.

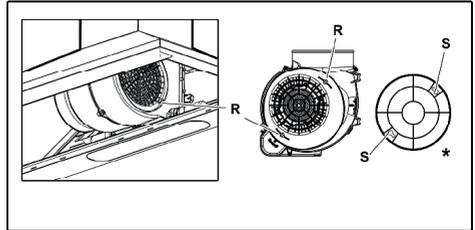

(Fig. 5)

- Remove the aluminium grease filters (Figure 4).
- Remove the filter by turning the pins from S level to R level clockwise. (Figure 5).
- Install the new filter by implementing the above procedure in reverse order.
- Install the aluminium grease filters.



CAUTION

Carbon filter shall never be washed.



CAUTION

Replace carbon filters once every 3 months.



CAUTION

You can obtain the charcoal filter from authorized service dealers.

5 Installation Of Appliance



WARNING!

Before installation, read safety information in the User Manual

- Distance must be measured from the surface of grate for gas cookers, from surface of glass for electric cookers.



WARNING!

Failure to install with screws and stabilizers in accordance with these instructions may result in electric shock.




NOTE

Please refer to page 235 for the installation guide

For the installation of the hood, please contact the nearest Authorized Service.

It is the customer's responsibility to prepare the location and electrical installation of the hood.

5.1 Position of the Appliance

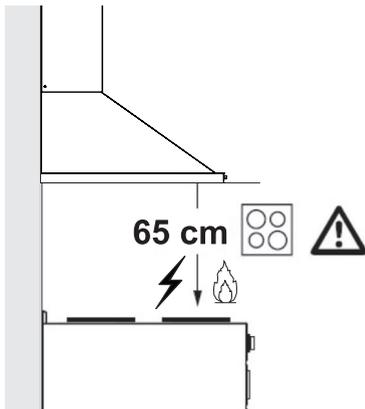

(Figure 6)

- Distance between the cooker and the cooker hood must be considered prior to assembly. This distance should be 65 cm (Figure 6).

6 Troubleshooting

Troubleshooting	Root Cause	Help
Appliance is not working.	Check your fuses.	Fuse may be blown, inspect and restore it.
Appliance is not working.	Check the electrical connection.	Mains voltage shall be between 220 and 240 V.
Appliance is not working.	Check the electrical connection.	Check if other appliance in your kitchen operate.
Illumination light does not operate.	Check the electrical connection.	Mains voltage shall be between 220 and 240 V.
Illumination light does not operate.	Inspect the lamp switch.	Lamp switch shall be at "on" position.
Illumination light does not operate.	Inspect the lamps.	The lamps of the appliance shall illuminate.
Air inlet of the appliance is inadequate.	Inspect the aluminium filter.	Under normal operating conditions, aluminium grease filter shall be cleaned at least once in a month.
Air inlet of the appliance is inadequate.	Check the air discharge flue.	The air discharge flue shall be at "on" position.
Air inlet of the appliance is inadequate.	Inspect the carbon filter.	The filters of the appliances with carbon filters shall be replaced once in every 3 months under normal conditions.