

CONGA

POPSTAR

CONGA POPSTAR 3000 X-TREME ANIMAL PRO

Aspirador de trineo/Canister vacuum cleaner



cecotec

Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instrukcja obsługi
Návod k použití

No deje el producto sin supervisión mientras esté en uso. Desenchúfelo de la fuente de alimentación cuando acabe de usarlo o cuando abandone la habitación.

No intente reparar el producto por sí mismo. Contacte con el Servicio de Asistencia Técnica oficial de Cecotec.

La limpieza y el mantenimiento del producto deben realizarse de acuerdo con este manual de instrucciones, para asegurar el correcto funcionamiento de este. Apague y desenchufe el producto antes de limpiarlo.

Guarde el producto y su manual de instrucciones en un lugar seco y seguro cuando no vaya a ser usado.

No se acepta ninguna responsabilidad sobre daños o lesiones personales que tengan como origen un uso inadecuado del producto o el incumplimiento de este manual.

El aparato no debe ser usado por niños desde 0 hasta 8 años.

Este electrodoméstico puede ser usado por niños de 8 años y mayores de 8 años si están continuamente supervisados.

Este aparato puede ser usado por personas con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimiento si están supervisados o han recibido instrucción concerniente al uso del aparato de una forma segura y entienden los riesgos que este implica.

Supervise a los niños para asegurarse de que no jueguen con el producto. Es necesario dar una supervisión estricta si el producto está siendo usado por o cerca de niños.

Mantenga el aparato y su cable fuera del alcance de los niños de edad inferior a 8 años.

La limpieza y el mantenimiento de usuario no deben ser realizados por niños.

SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users. All safety instructions should be closely followed when using the appliance.

Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.

Do not immerse the cord, plug, or any non-removable part of the appliance in water or any other liquid. nor expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.

Never immerse the appliance in water. Do not reach into the water!

Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.

Do not move the product or pull from it from its cord. Do not use the cable as handle. Do not push the cord against corners or sharp edges. Do not pass the product over the power cord. Keep the cord away from hot surfaces.

Hold the plug while winding the cord-winder. Wind the cord carefully. Wind the cord carefully.

Do not use the appliance if its cord, plug, or housing is damaged, nor after it malfunctions or has been dropped or damaged in any way.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

Turn off and unplug the appliance from the mains supply when not in use and before cleaning it. Pull from the plug, not the cord, to disconnect it from the outlet.

This product is designed only for household use. It is not

suitable for commercial or industrial use. Do not use outdoors. Do not use the appliance in confined spaces with explosive or toxic vapours.

Keep the vacuum cleaner away from the heat sources.

Be careful when vacuuming on stairs.

Do not use the product to vacuum liquids, nor burning or hot objects. Do not vacuum sharp objects, toner dust, or plaster.

Do not try to exceed the capacity of the container. Stop using the appliance once the dust container is full and empty it accordingly.

Do not put any objects into the openings of the appliance. Do not use the appliance if its openings are blocked. Do not restrict the airflow through the appliance. Keep all openings free of dust, lint, hair, and anything that may reduce the airflow.

If the suction openings of the unit, the flexible tube or the chrome telescopic tube are blocked, switch off the vacuum cleaner and remove the blocking substance before starting the unit again.

Do not use the appliance if the accessories or parts are not properly fastened.

Do not use any accessory that has not been recommended by Cecotec, as they might cause injuries or damage.

Keep hair, clothes, fingers and other body parts away from openings and moving parts of the product.

Do not leave the appliance unattended while in use. Unplug it from the power supply when you finish using it and before leaving the room.

Do not try to repair the product by yourself. Contact the official Technical Support Service of Cecotec.

To ensure the correct operating of the device, cleaning and maintenance tasks must be carried out according to this instruction manual. Always turn off and unplug the appliance

before cleaning.

Store the appliance and its instruction manual in a safe and dry place when not in use.

No liability is accepted for any eventual damage or personal injuries derived from misuse or non-compliance with this instruction manual.

The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.

This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Close supervision is necessary when the appliance is being used by or near children. Keep this appliance and its power cord out of reach of children under the age of 8.

Cleaning and maintenance tasks must not be carried out by children.

INSTRUCTIONS DE SÉCURITÉ

Veuillez lire les instructions suivantes avec attention avant d'utiliser l'appareil. Gardez bien ce manuel pour de futures références ou pour tout nouvel utilisateur.

Veuillez suivre ces instructions de sécurité très attentivement lorsque vous utilisez l'appareil.

Assurez-vous que le voltage du réseau coïncide avec le voltage spécifié sur l'étiquette de classification de l'appareil et que la prise possède une connexion à terre.

Ne submergez ni le câble, ni la prise ni aucune autre partie fixe

1. PARTS AND COMPONENTS

Fig. 1

1. Transport handle
2. Flexible tube
3. Air inlet adjustment
4. Telescopic tube
5. Suction base
6. Flexible tube connector
7. Dust tank
8. ON/OFF switch
9. Cord-winding button
10. Accessory for furniture
11. Accessory for corners
12. Accessory for fabrics
13. Mini AirBrush accessory for upholstery
14. Articulated bristle brush

2. BEFORE USE

Remove all packaging elements.

Inspect all parts of the appliance for visual damage. Unwind the power cord completely and inspect it for damage. Do not use the vacuum cleaner if it or its cord have been damaged or are not working properly. In case of damage, contact the official Technical Support Service of Cecotec for advice, repairs or returns.

Make sure you have read and understood all instructions and warnings in this instruction manual. Pay particular attention to the safety instructions on previous pages.

Attach the flexible tube to the air intake channel. Push until the tube locks with a click.

Fig. 2

Insert the end of the handle of the flexible tube into the telescopic tube.

Fig. 3

Extend the telescopic tube by sliding the plastic button and pulling from the upper part of the tube. Adjust its length to your liking.

Fig. 4

Insert the telescopic tube into the floor brush.

Fig. 5

Unplug the appliance from the mains supply before assembling or removing any accessory.

3. OPERATION

Once all parts are in place, unwind a reasonable length of the cord and plug the appliance into a grounded wall outlet. A mark on the power cord marks the ideal length. Do not pull the power beyond the red mark.

Fig. 6

Fig. 7

Press the On/Off button to turn the vacuum cleaner on.

Fig. 8

Adjust the suction power by adjusting the air outlet located on the flexible tube.

Use the most appropriate accessory depending on the kind of cleaning:

2-position suction base: Extended bristles for hard floors/retractable bristles for carpets.

Fig. 9

Accessory for furniture: Perfect for vacuuming on wardrobes, chairs, tables, etc. without damaging them.

Accessory for garments: For all kind of garments and upholsteries (sofas, armchairs, etc.).

Accessory for corners: Vacuum the dirt on corners and sockets.

Mini AirBrush accessory for upholstery: Removes pet hair from sofas, couches, etc.

Articulated bristle brush: Achieve a deep cleaning in every corner.

Once finished, unplug the appliance and use the cable-winding button to rewind the cord into the appliance. Use one hand to press the button and guide the power cord with the other.

Note: There is a safety switch inside the vacuum cleaner to prevent the unit from being run at high vacuum rates. If the vacuum is too high, the safety switch will be turned on. In this case, it can diminish the vacuum rate and protect the motor from being damaged.

4. CLEANING AND MAINTENANCE

Press the release button on top of the dirt container and remove it from the main body of the appliance.

Press the button on the lower end of the container to open its lid and empty its contents.

Fig. 10

Clean the vacuum cleaner's surface with a damp cloth. Do not use abrasive cleaning agents as they could damage the product.

Use the handle on top of the appliance to carry it.

Cleaning the filter

Press the release button on top of the dirt container and remove it from the main body of the appliance.

Hold the tank and open the top cover.

Remove the filter.

Fig. 11

If the filter is so dusty that suction does not return to 100 %, then it is recommended to rinse it under running water and leave it to dry over 24 hours before attaching it to the vacuum cleaner.

You can clean the filter carefully with a dry cloth to remove the dirt stuck to the filter.

5. TECHNICAL SPECIFICATIONS

Product reference: 05557

Product: Conga PopStar 3000 Ultimate Animal Pro

800 W, 220-240 V~, 50-60 Hz

IP X0

Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

7. TECHNICAL SUPPORT AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.

The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.

Faults deriving from the normal wear and tear of its parts, due to use.

The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at +34 963 210 728.

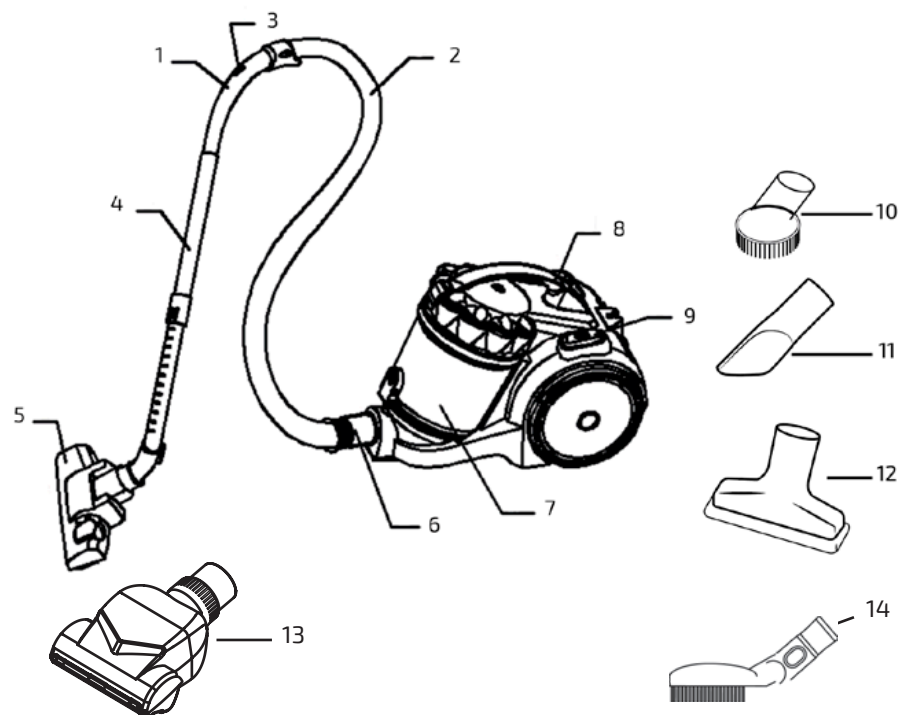 


Fig./Img./Abb./Afb./ Rys./Obr. 1

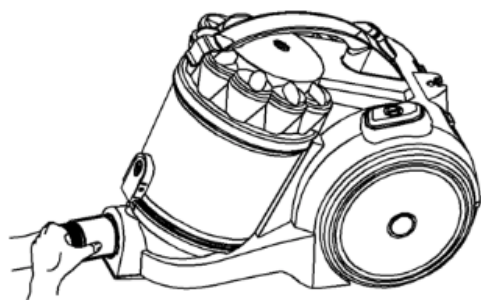 


Fig./Img./Abb./Afb./ Rys./Obr. 2

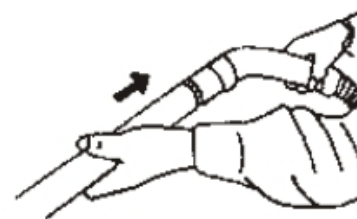 


Fig./Img./Abb./Afb./ Rys./Obr.3

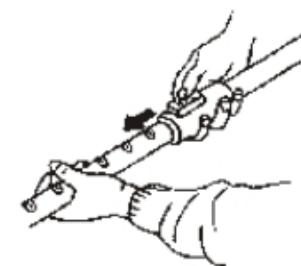 


Fig./Img./Abb./Afb./ Rys./Obr.4

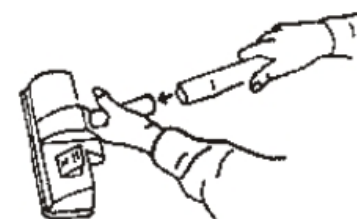 


Fig./Img./Abb./Afb./ Rys./Obr.5

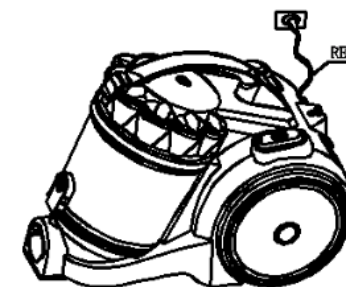 


Fig./Img./Abb./Afb./ Rys./Obr.6

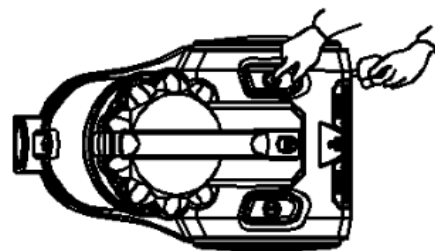 


Fig./Img./Abb./Afb./ Rys./Obr.7

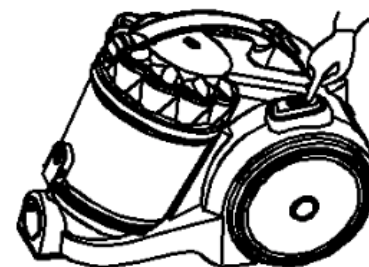 


Fig./Img./Abb./Afb./ Rys./Obr.8

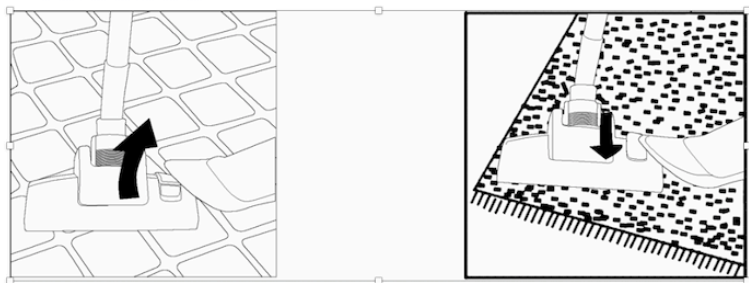 


Fig./Img./Abb./Afb./ Rys./Obr.9

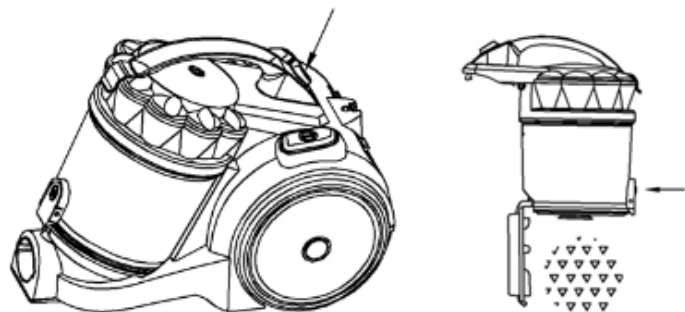 


Fig./Img./Abb./Afb./ Rys./Obr.10

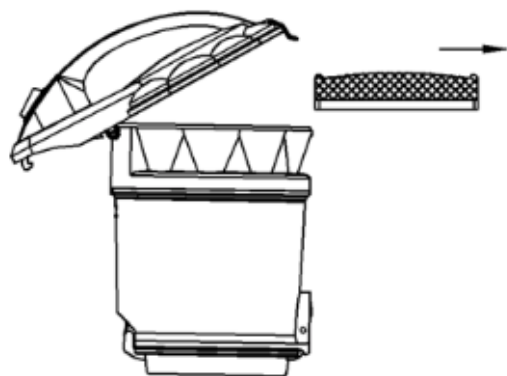 


Fig./Img./Abb./Afb./ Rys./Obr.11

www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

PEEA01200918