

cecotec

**StrongTitanium 19000 XXL/
ExtremeTitanium 19000 XXL**

Licudadora orbital/Centrifugal juicer



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instructiehandleiding

ÍNDICE

1. Piezas y componentes	04
2. Instrucciones de seguridad	09
3. Antes de usar	10
4. Montaje del producto	10
5. Funcionamiento	12
6. Limpieza y mantenimiento	13
7. Resolución de problemas	14
8. Especificaciones técnicas	15
9. Reciclaje de electrodomésticos	16
10. Garantía y SAT	16

INDEX

1. Parts and components	04
2. Safety instructions	17
3. Before use	18
4. Product assembly	18
5. Operation	20
6. Cleaning and maintenance	21
7. Troubleshooting	22
8. Technical specifications	23
9. Disposal of old electrical appliances	24
10. Technical support service and warranty	24

SOMMAIRE

1. Pièces et composants	04
2. Instructions de sécurité	25
3. Avant utilisation	26
4. Montage du produit	26
5. Fonctionnement	29
6. Nettoyage et entretien	29
7. Résolution des problèmes	30
8. Spécifications techniques	32
9. Recyclage des électroménagers	32
10. Garantie et SAV	33

INHALT

1. Teile und Komponenten	04
2. Sicherheitshinweise	34
3. Vor dem ersten Gebrauch	35
4. Montage	35
5. Betrieb	37
6. Reinigung und Wartung	38
7. Fehlerbehandlung	39
8. Technische Spezifikationen	41
9. Entsorgung von alten Elektrogeräten	41
10. Garantie und kundendienst	42

INDICE

1. Parti e componenti	04
2. Istruzioni di sicurezza	43
3. Prima dell'uso	44
4. Montaggio del prodotto	44
5. Funzionamento	47
6. Pulizia e manutenzione	47
7. Risoluzione di problemi	48
8. Specifiche tecniche	50
9. Riciclaggio degli elettrodomestici	50
10. Garanzia e sat	50

ÍNDICE

1. Peças e componentes	04
2. Instruções de segurança	52
3. Antes de usar	53
4. Montagem do produto	53
5. Funcionamento	55
6. Limpeza e manutenção	56
7. Resolução de problemas	57
8. Especificações técnicas	58
9. Reciclagem de eletrodomésticos	59
10. Garantia e SAT	59

INDEX

1. Onderdelen en componenten	04
2. Veiligheidsinstructies	60
3. Voor gebruik	61
4. In elkaar zetten	61
5. Werking	64
6. Schoonmaken en onderhoud	64
7. Probleemoplossing	65
8. Technische specificaties	67
9. Recyclage van kleine huishoudelijke elektrische apparaten	67
10. Garantie en technische ondersteuningsservice	67

9. RECICLAJE DE ELECTRODOMÉSTICOS



La directiva europea 2012/19/UE sobre Residuos de Aparatos Eléctricos y Electrónicos (RAEE) especifica que los electrodomésticos no deben ser reciclados con el resto de los desperdicios municipales. Dichos electrodomésticos han de ser desechados de forma separada, para optimizar la recuperación y reciclaje de materiales y, de esta manera, reducir el impacto que puedan tener en la salud humana y el medioambiente.

El símbolo del contenedor tachado le recuerda su obligación de desechar este producto de forma correcta. Si el producto en cuestión cuenta con una batería o pila para su autonomía eléctrica, esta deberá extraerse antes de ser desechado y ser tratada a parte como un residuo de diferente categoría.

Para obtener información detallada acerca de la forma más adecuada de desechar sus electrodomésticos y/o las correspondientes baterías, el consumidor deberá contactar con las autoridades locales.

10. GARANTÍA Y SAT

Este producto tiene una garantía de 2 años desde la fecha de compra, siempre y cuando se conserve y envíe la factura de compra, el producto esté en perfecto estado físico y se le dé un uso adecuado tal y como se indica en este manual de instrucciones.

La garantía no cubrirá:

- Si el producto ha sido usado fuera de su capacidad o utilidad, maltratado, golpeado, expuesto a la humedad, sumergido en algún líquido o sustancia corrosiva, así como cualquier otra falta atribuible al consumidor.
- Si el producto ha sido desarmado, modificado o reparado por personas no autorizadas por el SAT oficial de Cecotec.
- Si la incidencia ha sido originada por el desgaste normal de las piezas debido al uso.
- El servicio de garantía cubre todos los defectos de fabricación durante 2 años en base a la legislación vigente, excepto piezas consumibles. En caso de mal uso por parte del usuario el servicio de garantía no se hará responsable de la reparación.

Si en alguna ocasión detecta una incidencia con el producto o tiene alguna consulta, póngase en contacto con el Servicio de Asistencia Técnica oficial de Cecotec a través del número de teléfono **+34 96 321 07 28**.

2. SAFETY INSTRUCTIONS

Read these instructions thoroughly before using the appliance. Keep this instruction manual for future reference or new users.

1. Make sure that the mains voltage matches the voltage stated on the rating label of the appliance and that the wall outlet is grounded.
2. The blades inside the product are very sharp, handle them carefully. Take extreme precaution during cleaning, maintenance or while emptying the container.
3. Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the official Technical Support Service of Cecotec in order to avoid any type of danger.
4. Always turn off and disconnect the appliance from the power supply before assembling, disassembling, cleaning it or if it is not going to be used for a long period of time. Pull from the plug and not the cord to disconnect it.
5. This appliance is intended for household use only. Do not use outdoors.
6. Do not introduce any utensil or body parts inside the product during operation in order to reduce risk of injuries to persons or damage to the product.
7. Do not use fruits or vegetables with bone, pips or thick skin. Remove any of these before introducing them in the product.
8. Operate it in strict accordance with the following working times:
 - Continuous operation shall not exceed 1 min;
 - The device must be stopped for 2 mins after completing functions;
 - The device must be stopped for 15-20 minutes after 3 cycles of continuous operation and then restarted after once the motor has cooled down. This method will help extending its service life.
9. Do not repair or remove any fixed part of the product. Contact the Technical Support Service of Cecotec for help or advice.
10. Always make sure all the detachable parts are properly placed and fixed before operating it. If any of the parts is damaged, do not use it.
11. After using the device, make sure to turn off and disconnect the product from the power supply.
12. The appliance is not intended to be used by children under the age of 8. It can be used by children over the age of 8, as long as they are given continuous supervision.
13. This appliance can be used by children aged 8 and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
14. Supervise young children to make sure that they do not play with the appliance. Close

supervision is necessary when the appliance is being used by or near children.

 
3. BEFORE USE

- Take the product out of the box and remove all packaging materials.
- Make sure all parts and accessories are present and in good conditions. If not, contact immediately the Technical Support Service of Cecotec.
- Clean thoroughly all the product's parts that come into contact with ingredients before operating it for the first time.


4. PRODUCT ASSEMBLY

This juicer is designed with a double safety system and can only operate when all parts are properly installed.


Follow the steps below to assemble and operate it correctly.

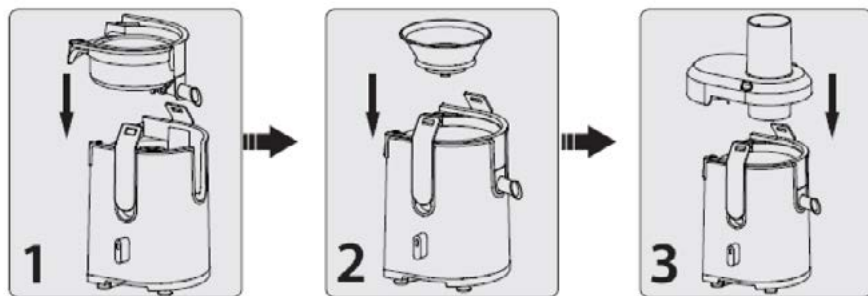

 1. Turn the power-level knob to position "0" and place the centre bowl inside the main body as shown in figure 1.
2. Place the filter inside the centre bowl as shown in figure 2 and make sure the filter is properly installed on the motor gear.
3. Put the ingredients inlet on the main body as shown in figure 3 and close it following the direction indicated on it.
4. Use the clamps to close the product. The product will not be able to operate unless it is completely and safely closed.

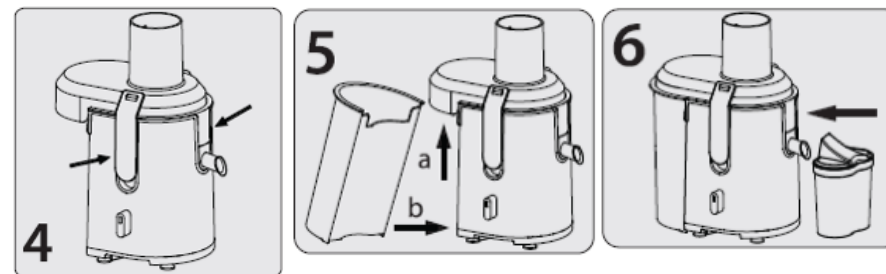

 5.
 - Slightly tilt and place the pomace cup under the centre bowl's outlet.
 - Push the pomace cup's bottom part towards the main body in order to install it properly.
6. Place the juice container under the juice spout.

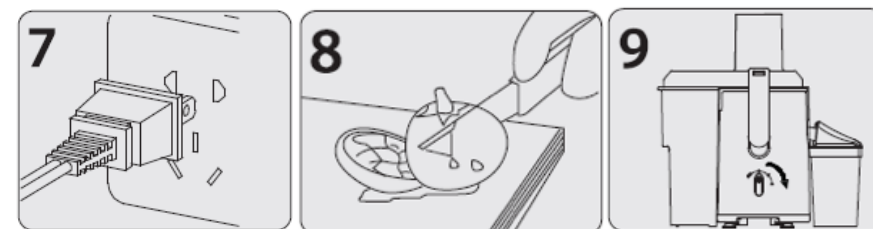

7. Make sure the power level knob is set at "0" and connect the product to a power supply.
8. Clean, peel (in case it has shell) and remove fruit and vegetable pips. Then, cut them into pieces according to the inlet size.
9. Use the power level knob to select the desired operating power level depending on the type of fruit or vegetable (refer to the "Tips" section).

NOTE: to lengthen the juicer's service life, do not operate it continuously for more than 1 minute.

10. Introduce the cut fruits and vegetables through the ingredients inlet's inlet and use the pusher to gently press them down (do not use too much force, otherwise this could affect the quality of the end result).



WARNING:

- If the pomace outlet is blocked or the pomace or juice container is full, disconnect the device from the power supply and clear or clean them before using it again.
 - Do not put fingers or other objects inside the inlet.
11. After finishing processing fruits and vegetables, switch the juicer off and disconnect it from the power supply. Wait until the filter has stopped rotating before removing the juice container.

NOTE: fresh-fruit juice shall be drunk immediately, since its taste and nutritional value will be affected if exposed to air for a while.

TIPS

- Use fresh fruits and vegetables since they contain more juice. Specific preferred fruits are: pineapple, beetroot, celery stick, apple, cucumber, carrot, spinach, melons, tomato, mandarin orange, grape, etc.
- It is unnecessary to remove thin peels and skins. Only thick peels (e.g. those of oranges, pineapples or beetroots) need to be removed. Seeds (e.g. those of oranges) shall also be removed.
- As fresh apple juice will quickly turn into brown, you can add a few drops of lemon juice to slow down this colour turning process.
- Leaves and stems (e.g. lettuce) could be extracted in the Juicer for juice.
- It is inadvisable to put fruits containing starch, such as banana, pawpaw, avocado, fig, mango, into the Juicer for juice extraction.

5. OPERATION**POWER LEVEL KNOB**

- "P": Pulse mode (turbo).
- "0": Off
- "1": Low. This mode is used specially to process soft fruits and vegetables, for example: watermelon, strawberry, tomato etc.
- "2": High. This mode is used to process all fruits and vegetables.

NOTE: see the "Tips" section for further information on suitable fruits and vegetables.

6. CLEANING AND MAINTENANCE

 
- After cleaning the device, make sure you dry it thoroughly before storing it.
- After using the product, store it in a dry, safe place. Avoid direct exposure to sun light.
- Make sure it is stored in a place out of the reach of children.
- Clean the juicer immediately after each use. Do not immerse the product's main body in water or other liquids
- Disconnect the product from the power supply before cleaning the product's surface. Use a soft, dry cloth to clean it. The rest of the parts can be washed with water.
- Do not wash the detachable parts with water over 60 °C. Use warm water with some soap and clean them with a cleaning brush, then, rinse with water.

Follow the instructions below for correct cleaning:

1. Take the pomace cup out.
2. Remove the pusher.
3. Use the clamps on the sides to open the product.
4. Remove the ingredients inlet, the filter and the centre bowl

NOTE: add cleaning agent to water and use a cleaning brush to clean the filter and then rinse it with clean water.

5. To remove the filter, grab the edge with both hands and lift it up.
6. Grab both sides of the centre bowl with both hands and lift it up to remove it.

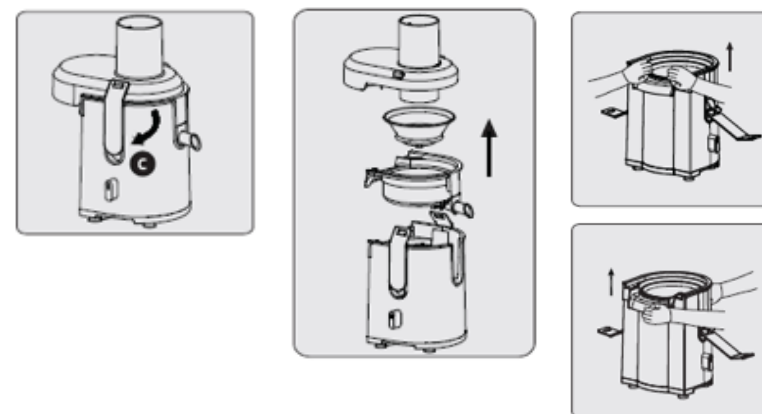

7. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
After connecting it to the power supply, the product does not switch on.	1. The centre bowl is not installed properly. 2. The ingredients inlet is not installed properly. 3. The safety push button does not work.	1. Place the centre bowl in its place. 2. Place the ingredients inlet in its place. 3. Replace Ingredients inlet; 4. Make sure all the parts of the product are installed correctly.
The product's motor emits unusual smells during the first uses.	This is due to the residual rests from manufacturing.	If the smell remains after several uses, contact the Technical Support Service of Cecotec.
The product stops during operation.	1. The voltage is not adequate. 2. There is too much amount of food inside the product. 3. The pusher has been pressed down with too much force. 4. The motor has overheated and the device has stopped as a safety measure.	1. Make sure the voltage suits the rating label on the product. 2. Disconnect the device from the power supply and take out any excess food. 3. Lightly press the pusher. 4. Switch it off for 20-30 minutes before using it again.
Fruit contains much pomace.	1. The filter is damaged. 2. There is too much pomace built up in the centre bowl.	1. Replace the damaged filter. 2. Replace the centre bowl.

Small quantity of juice comes out from the spout.	1. There is too much pomace built up in the centre bowl. 2. The pusher has been pressed down with too much force.	1. Clean the centre bowl. 2. Lightly press the pusher.
The device vibrates too much or produces loud and unusual noises.	1. The filter is not installed properly. 2. The juicer is not placed on a stable, flat surface. 3. The voltage is too high. 4. There are too many fruits/vegetables in the product.	1. Place the filter in its place. 2. Place the juicer on a stable, flat surface. 3. Make sure the voltage suits the rating label on the product. 4. Remove any excess fruits or vegetables.
The product is obstructed.	The cutter or sieve is obstructed by ingredients.	Disconnect the product from the power supply, remove the foods causing the obstruction and cut them into smaller pieces.

8. TECHNICAL SPECIFICATIONS

Model: StrongTitanium 19000 XXL
Product reference: 04110
800 W, 220-240 V, 50 Hz
Maximum Power: 1300 W
Made in China | Designed in Spain

Model: ExtremeTitanium 19000 XXL
Product reference: 04111
800 W, 220-240 V, 50 Hz
Maximum Power: 1300 W
Made in China | Designed in Spain

9. DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), specifies that old household electrical appliances must not be disposed of with the normal unsorted municipal waste. Old appliances must be collected separately, in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation to dispose of the appliance correctly. If the product has a built-in battery or uses batteries, they should be removed from the appliance and disposed of appropriately.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

10. TECHNICAL SUPPORT SERVICE AND WARRANTY

This product is under warranty for 2 years from the date of purchase, as long as the proof of purchase is submitted, the product is in perfect physical condition, and it has been given proper use, as explained in this instruction manual.

The warranty will not cover the following situations:

- The product has been used for purposes other than those intended for it, misused, beaten, exposed to moisture, immersed in liquid or corrosive substances, as well as any other fault attributable to the customer.
- The product has been disassembled, modified, or repaired by persons, not authorised by the official Technical Support Service of Cecotec.
- Faults deriving from the normal wear and tear of its parts, due to use.
- The warranty service covers every manufacturing defects of your appliance for 2 years, based on current legislation, except consumable parts. In the event of misuse, the warranty will not apply.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact Cecotec Technical Support Service at **+34 963 210 728**.

2. INSTRUCTIONS DE SÉCURITÉ

Veuillez lire attentivement les instructions suivantes avant d'utiliser le produit. Gardez bien ce manuel pour de futures références ou pour tout nouvel utilisateur.

1. Assurez-vous que le voltage du réseau coïncide avec le voltage spécifié sur l'étiquette de classification du produit et que la prise possède une connexion à terre.
2. Les lames à l'intérieur du produit sont très aiguisées, manipulez-les avec soin. Faites bien attention lors du nettoyage, de l'entretien ou lorsque vous videz un des récipients.
3. Inspectez le câble d'alimentation régulièrement pour rechercher des dommages visibles. Si le câble présente des dommages, il doit être réparé par le Service Après-Vente Officiel de Cecotec pour éviter tout type de danger.
4. Éteignez l'appareil et débranchez-le de la prise de courant avant de le monter, de le démonter, de le nettoyer ou si vous n'allez pas l'utiliser pendant longtemps. Tirez sur la fiche pour débrancher ; ne tirez pas sur le câble.
5. Ce produit a été conçu exclusivement pour un usage domestique. Ne l'utilisez pas en extérieurs.
6. N'introduisez pas d'ustensiles ni de parties du corps dans l'appareil alors qu'il est en marche afin de réduire le risque de lésions et pour ne pas abîmer le produit.
7. N'introduisez pas de fruits ni de légumes avec noyaux, pépins ou coques dures, retirez les parties les plus dures de ces ingrédients avant de les mixer.
8. Utilisez l'appareil en suivant rigoureusement les temps suivants :
 - N'utilisez pas le produit de manière continue pendant plus d'1 minute.
 - Laissez l'appareil reposer pendant 2 minutes après l'avoir utilisé.
 - Laissez l'appareil reposer pendant 20-30 minutes après 3 cycles de marche puis réutilisez-le une fois le moteur refroidi. Cela aidera à prolonger la vie utile du produit.
9. Ne réparez ni ne retirez aucune des pièces fixes du produit. Contactez le Service Après-Vente Officiel de Cecotec pour résoudre vos doutes ou pour toute réparation.
10. Assurez-vous que les parties démontables soient bien installées avant d'utiliser l'appareil. Si une des parties est abîmée, n'utilisez pas l'appareil.
11. Assurez-vous d'éteindre et de débrancher l'appareil de la prise de courant après l'avoir utilisé.
12. L'appareil ne doit pas être utilisé par des enfants de moins de 8 ans. Cet appareil peut être utilisé par des enfants de 8 ans et plus s'ils sont surveillés constamment.
13. Cet appareil peut être utilisé par des personnes aux capacités physiques, mentales ou sensorielles réduites, ou sans expérience ni connaissances si elles sont surveillées et/ou ont reçu les informations nécessaires à l'utilisation correcte de l'appareil et qu'elles ont bien compris les risques qu'il implique.
14. Surveillez les enfants pour vous assurer qu'ils ne jouent pas avec le produit. Une

www.cecotec.es

Grupo Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain