

cecotec

TOAST&TASTE 800 VINTAGE LIGHT BLUE/GREEN/YELLOW/BEIGE

TOAST&TASTE 800 VINTAGE INOX

Tostador / Toaster



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Handleiding
Instrukcja obsługi
Návod k použití

Instrucciones de seguridad	5
Safety instructions	8
Instructions de sécurité	10
Sicherheitshinweise	13
Istruzioni di sicurezza	16
Instruções de segurança	19
Veiligheidsvoorschriften	22
Instrukcje bezpieczeństwa	25
Bezpečnostní pokyny	28

ÍNDICE

1. Piezas y componentes	31
2. Antes de usar	31
3. Funcionamiento	31
4. Limpieza y mantenimiento	32
5. Especificaciones técnicas	32
6. Reciclaje de aparatos eléctricos y electrónicos	33
7. Garantía y SAT	33
8. Copyright	33

INDEX

1. Parts and components	34
2. Before use	34
3. Operation	34
4. Cleaning and maintenance	35
5. Technical specifications	35
6. Disposal of old electrical and electronic appliances	36
7. Technical support and warranty	36
8. Copyright	36

SOMMAIRE

1. Pièces et composants	37
2. Avant utilisation	37
3. Fonctionnement	37
4. Nettoyage et entretien	38
5. Spécifications techniques	38
6. Recyclage des équipements électriques et électroniques	39
7. Garantie et SAV	39
8. Copyright	39

INHALT

1. Teile und Komponenten	40
2. Vor dem Gebrauch	40
3. Bedienung	40
4. Reinigung und Wartung	41
5. Technische Spezifikationen	41
6. Recycling von Elektro- und Elektronikgeräten	42
7. Garantie und Kundendienst	42
8. Copyright	42

INDICE

1. Parti e componenti	43
2. Prima dell'uso	43
3. Funzionamento	43
4. Pulizia e manutenzione	44
5. Specifiche tecniche	44
6. Riciclaggio di apparecchiature elettriche ed elettroniche	45
7. Garanzia e supporto tecnico	45
8. Copyright	45

ÍNDICE

1. Peças e componentes	46
2. Antes de usar	46
3. Funcionamento	46
4. Limpeza e manutenção	47
5. Especificações técnicas	47
6. Reciclagem de produtos elétricos e eletrônicos	48
7. Garantia e SAT	48
8. Copyright	48

INHOUD

1. Onderdelen en componenten	49
2. Vóór u het apparaat gebruikt	49
3. Werking	49
4. Schoonmaak en onderhoud	50
5. Technische specificaties	50
6. Recycling van elektrische en elektronische apparatuur	51
7. Garantie en technische ondersteuning	51
8. Copyright	51

SPIS TREŚCI

1. Części i komponenty	52
2. Przed użyciem	52
3. Funkcjonowanie	52
4. Czyszczenie i konserwacja	53
5. Specyfikacja techniczna	53
6. Recykling urządzeń elektrycznych i elektronicznych	54
7. Gwarancja i Serwis pomocy technicznej	54
8. Copyright	54

OBSAH

1. Části a složení	55
2. Před použitím	55
3. Fungování	55
4. Čištění a údržba	56
5. Technické specifikace	56
6. Recyklace elektrických a elektronických zařízení	56
7. Záruka a technický servis	57
8. Copyright	57

SAFETY INSTRUCTIONS

Before using the appliance, read the following instructions carefully. Keep this instruction manual for future reference or new users.

- All safety instructions must be closely followed when using the appliance.
- This appliance is designed for domestic use only and is not intended for bars, restaurants, farmhouses, hotels, motels, and offices.
- The appliance is not intended to be used by children under the age of 8. The appliance can be used by children over the age of 8, as long as they are given continuous supervision.
- This appliance can be used by children aged 8 and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, as long as they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Keep this appliance and its power cable out of reach of children under the age of 8. Cleaning and maintenance should not be carried out by children without supervision.
- Supervise children to prevent them from playing with the appliance. Close supervision is necessary if the appliance is used by or near children.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
-  This symbol means 'caution, hot surface'. The accessible surfaces of the appliance may reach high temperatures during operation. Be careful not to burn yourself.
- Bread can burn, so the toaster should not be used near or under combustible materials such as curtains.

- Check the power cable regularly for visible damage. If the cable is damaged, it must be replaced by the official Cecotec Technical Support Service to avoid any danger.
- Place the appliance on an even, heat-resistant surface. Do not place the appliance near heat sources, places with high humidity levels, or combustible materials.
- Do not immerse the cable, plug, or any part of the appliance in water or any other liquid. Do not expose the electrical connections to water. Make sure your hands are dry before handling the plug or switching on the appliance.
- Ensure that the mains voltage matches the voltage specified on the appliance marking and that the mains plug is earthed.
- Do not use the appliance if the cable, plug, or frame is damaged or if it is malfunctioning, has been dropped, or damaged.
- Do not twist, bend, pull, or damage the power cable. Protect it from sharp edges and heat sources. Do not allow the cable to touch hot surfaces. Do not let the cable hang over the edge of the working surface or worktop.
- Do not leave the appliance unattended during operation. Unplug the appliance from the wall socket when you have finished using it, when you leave the room where it is located, when it is not being used, and before cleaning it. Pull from the plug, not the cable, to disconnect it from the outlet.
- This appliance is designed for toasting unseasoned bread only. Do not use it for any other purpose, and follow the instructions described in this manual. Do not toast moist foods or bread spread with butter, jam, glaze, or any other condiments in the toaster, as this may cause fire or smoke.
- Ensure there is enough space above the appliance and on both sides to provide proper air circulation.
- Do not cover the toaster with aluminium foil or similar materials.

- Do not insert objects (utensils, fingers, or any other foreign object) into the appliance, as this may cause fire, electric shock, or injury.
- If the appliance does not work properly or if you notice fire or smoke, switch it off immediately and unplug the appliance from the mains.
- Do not try to repair the appliance by yourself. Contact the official Cecotec Technical Support Service for advice.
- No liability is accepted for any possible damage or personal injury resulting from misuse of the appliance or non-compliance with these operating instructions.

INSTRUCTIONS DE SÉCURITÉ

Veuillez lire les instructions suivantes avec attention avant d'utiliser l'appareil. Gardez bien ce manuel pour de futures références ou pour tout nouvel utilisateur.

- Veuillez suivre ces instructions de sécurité très attentivement lorsque vous utilisez l'appareil.
- Cet appareil est conçu pour un usage domestique uniquement et ne doit pas être utilisé dans les bars, restaurants, fermes, hôtels, motels et bureaux.
- Cet appareil ne doit pas être utilisé par des enfants de moins de 8 ans. Cet appareil peut être utilisé par des enfants de 8 ans et plus s'ils sont surveillés constamment.
- Cet appareil peut être utilisé par des personnes aux capacités physiques, mentales ou sensorielles réduites, ou sans expérience ni connaissances si elles sont surveillées et/ou ont reçu les informations nécessaires à l'utilisation correcte de l'appareil et qu'elles ont bien compris les risques qu'il implique.
- Maintenez l'appareil et son câble hors de portée des enfants

1. PARTS AND COMPONENTS

Fig. 1

1. 2 38-mm toasting slots
2. Toasting level knob
3. Crumb tray
4. Stop button
5. Reheat button
6. Defrost button
7. Toasting lever

NOTE

The graphics in this manual are schematic representations and may not exactly match the appliance.

2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent damage to the appliance when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.
- Before using the toaster for the first time, it is important to perform a toasting process without bread. Do so 4 or 5 times. Push the toasting lever down until it latches into place.
- When the toasting is finished, the toasting lever automatically springs up. The toaster is now ready to be used.

Warning:

A slight odour and smoke might appear when using the appliance for the first time. This is due to manufacturing material residues and does not affect the operation of the appliance.

3. OPERATION

1. Insert the slice of bread into the slot.
2. Use the toasting-level knob to select the desired toasting level. There are 6 different levels, from 1 (the lowest toasting level) to 6 (the highest level).

Note

Recommendation: set level 3 (medium toasting) for brown results.

3. Push the toasting lever down until it latches into place. The Stop light indicator will turn on and the toasting process will start.
4. You can set the toasting level while the appliance is in operation. The toaster will automatically turn off once toasting time elapses, and the toast will be ready.
5. To toast frozen bread, waffles, or other pastry, use the Defrost button.
6. To toast bread that has previously been toasted, insert the bread in the toasting slot and select the desired toasting level. Then, pull the toasting lever and press the Reheat button. The Reheat indicator light will turn on too.
7. The defrost, toasting and reheat processes can be interrupted at any time by pushing the Stop button.

4. CLEANING AND MAINTENANCE

- Disconnect the appliance from the power supply and allow it to cool down before cleaning.
- Use a soft, damp cloth to clean the surface of the appliance.
- Do not immerse the appliance in water or other liquids. The appliance is not dishwasher safe.
- Do not use abrasive cleaners or scouring pads to clean the appliance.
- Slide the crumb tray out of the appliance and empty it.
- Clean the crumb tray regularly. Use a brush to remove the burnt bread remains.

5. TECHNICAL SPECIFICATIONS

Product reference: 03208 / 03209 / 03210 / 03211 / 03212

Product: Toast&taste 800 Vintage Light blue / Light Green / Light Yellow / Inox / Light Beige

Power: 850 W

Voltage: 220-240 V

Frequency: 50/60 Hz

Technical specifications may change without prior notification to improve product quality.

Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household waste. When this product reaches the end of its shelf life, you should dispose of the batteries/accumulators and take them to a collection point designated by the local authorities.

Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries.

Compliance with the above guidelines will help protecting the environment.

7. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

8. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

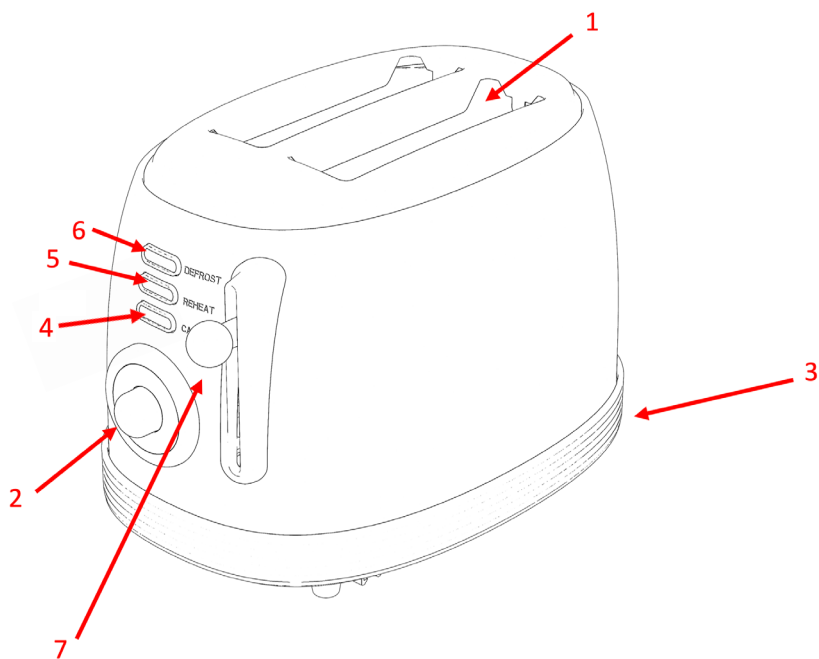


Fig./Img./Abb./Afb./ Rys. 1

www.cecotec.es

Cecotec Innovaciones S.L.
Av. Reyes Católicos, 60
46910, Alfafar (Valencia)
AP02230411