

**AIR FRYER**

# **USER MANUAL**

**MAD55000ADK**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details.  
The diagram above is just for reference. Please take the appearance of the actual product as the standard.



# LANGUAGES

**EN** English

**IT** Italian

**DE** German

**FR** France

**AL** Albanian

**SR** Serbian

**RO** Romanian

## THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

# CONTENTS

THANK YOU LETTER .....	01
SAFETY INSTRUCTIONS .....	02
SPECIFICATIONS .....	05
PRODUCT OVERVIEW .....	06
OPERATION INSTRUCTIONS .....	07
CLEANING AND MAINTENANCE .....	11
TROUBLESHOOTING .....	12
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	14
DISPOSAL AND RECYCLING .....	15
DATA PROTECTION NOTICE .....	16

EN

# SAFETY INSTRUCTIONS

## Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

## Explanation of Symbols

	<b>Danger</b> This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.
	<b>Warning of electrical voltage</b> This symbol indicates that there is a danger to life and health of persons due to voltage.
	<b>Warning</b> The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
	<b>Caution</b> The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
	<b>Attention</b> The signal word indicates important information (e.g. damage to property), but not danger.
	<b>Observe instructions</b> This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

EN

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

## IMPORTANT SAFEGUARDS

### SAFETY INSTRUCTIONS

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not immerse any part of the appliance in water or other liquid.
- Warning: Avoid spillage on the connector.
- Do not use outdoors.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, office and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - In bed and breakfast type environments.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and its cord out of reach of children.

EN

- Warning: Misuse may cause potential injury.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- Always put the ingredients to be fried in the basket, to prevent it from coming into contact with the heating elements.
- Do not cover the air inlet and the air outlet openings while the appliance is operating.
- Do not fill the pan with oil as this may cause a fire hazard.
- Never touch the inside of the appliance while it is operating.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance.
- Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
-  The surface are liable to get hot during use.

EN

# SPECIFICATIONS

<b>Product Model</b>	<b>MAD55000ADK</b>
Voltage	220-240V~
Frequency	50/60Hz
Power	1400-1600W




---

EN

# PRODUCT OVERVIEW

## Part Name

The product is subject to the actual product and configuration.

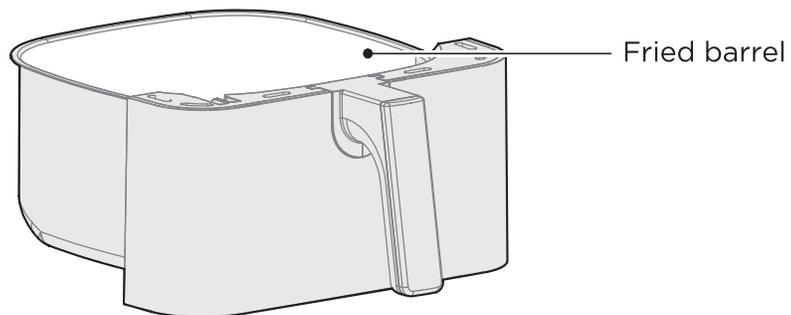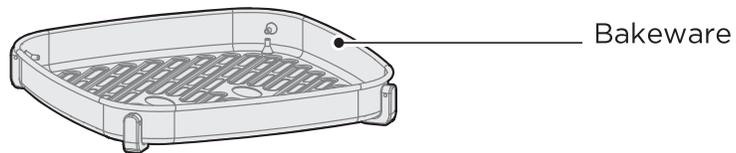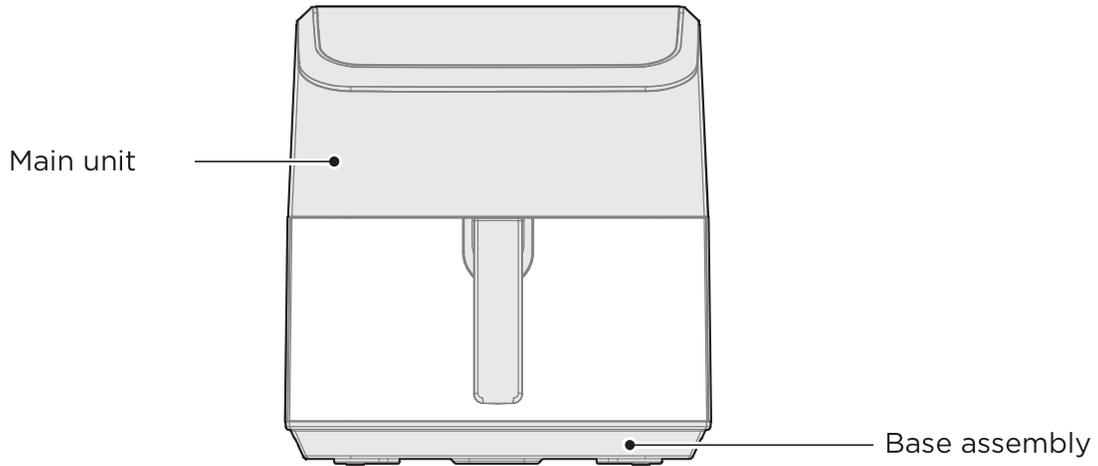


EN

### NOTE

The figure below is for reference only, and the details are subject to the actual objects in the packaging box.

# OPERATION INSTRUCTIONS

## Instructions for Use

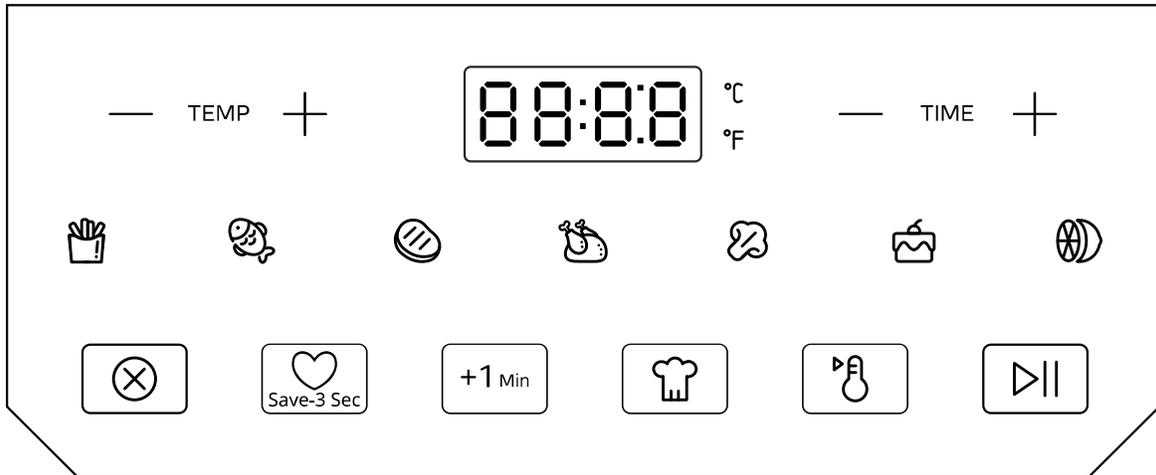

EN

Icon	Description
— TEMP +	• Temperature adjustment button, click temperature +, temperature - to adjust the temperature.
— TIME +	• Time adjustment button, click time +, time - to adjust the time.
	• French fries function gear, time and temperature can be adjusted.
	• Fish function gear, time and temperature can be adjusted.
	• Meat function gear, time and temperature can be adjusted.
	• Roast chicken function gear, time and temperature can be adjusted.
	• Vegetable function gear, time and temperature can be adjusted.
	• Cake function gear, time and temperature can be adjusted.
	• Fruit drying function gear, time and temperature can be adjusted.


Icon	Description
	<ul style="list-style-type: none"> <li>• Cancel button: Click the cancel button to cancel the current status and return to the standby display.</li> </ul>
	<ul style="list-style-type: none"> <li>• Favorite button: Click the favorite button to bring up the Favorites. 1) Press and hold the "Save 3 Sec" button 3s to save the temperature, time, and parameters of the currently selected menu as "Favorites". The digital tube will display the FAU for about 0.5 seconds, indicating that it has been saved. 2) Under the standby non-off screen, click the "Save 3 Sec" button to enter the "Favorites" menu function settings. 3) The default "Favorites" is 190°C for 19 minutes.</li> </ul>
	<ul style="list-style-type: none"> <li>• +1 minute button: 1) Under the standby display "----" and the cooking end state, press the "+1Min" button to directly enter the working state with a temperature of 200C and a time of 1 minute. 2) The digital tube first briefly displays the temperature value, and then enters the time countdown. When cooking is working or paused, press the "+1Min" button to increase the cooking time by 1 minute (or the minimum progressive unit of the menu) until the menu can set the maximum time value to no longer increase.</li> </ul>
	<ul style="list-style-type: none"> <li>• DIY button: Default time: 12 minutes, Default temperature: 180°C, time temperature adjustable.</li> </ul>
	<ul style="list-style-type: none"> <li>• Heat preservation button: Default time: 20 minutes, Default temperature: 75°C, time temperature adjustable.</li> </ul>
	<ul style="list-style-type: none"> <li>• Start/Pause button: 1) Used to start, pause the program; 2) In the off state, only the "Start/Pause" button flashes, click the "Start/Pause" button to enter the standby display.</li> </ul>

EN

1. Place the baking sheet in the frying barrel, and then add the ingredients; Push the barrel into the main unit, make sure that the barrel is fully pushed into the main unit;
2. In the off-screen state, only the  button blinks. Click it to enter the stand-by state. Click the desired menu function, and you can click TEMP+, TEMP-, TIME+, and TIME- to adjust the time and temperature. Click the  key to start the menu cooking, and the cooking countdown is displayed;
3. During cooking, click  to cancel the cooking state and return to standby; Click the  key to enter the cooking pause; Click TEMP+, TEMP-, TIME+, TIME- to enter the cooking menu parameter selection.
4. After the End of cooking, the digital tube display End,  button indicator flashing prompt, all other indicators off; At this point, the food can be extracted after drawing out the frying barrel.



Please carefully take it out. Do not put it on the desk flatwise so as to avoid being scalded by steam or tipping over the frying barrel which may lead to scalding by oil or high temperature food. In addition, the auxiliary tools (such as cooking tongs or spoon) are suggested to be used in the process of taking out food.

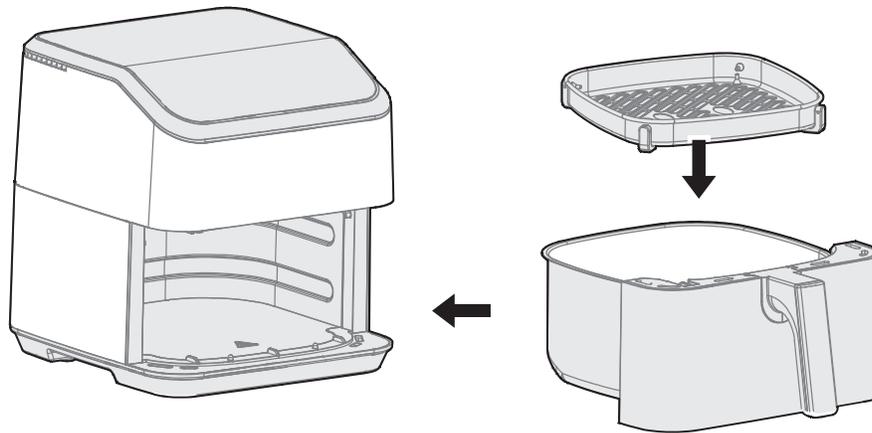

EN

## Menu Functions

Menu function	Temperature(°C)	Time (Min)
	180	18
	180	11
	200	9
	170	30
	170	8
	170	10
	100	90

## Preparation

The product should be stably placed on a flat table (Figure 1), so that the power cord has a sufficient length to be plugged into the socket, and the air around the product should be kept in circulation, and should not be close to flammable items.

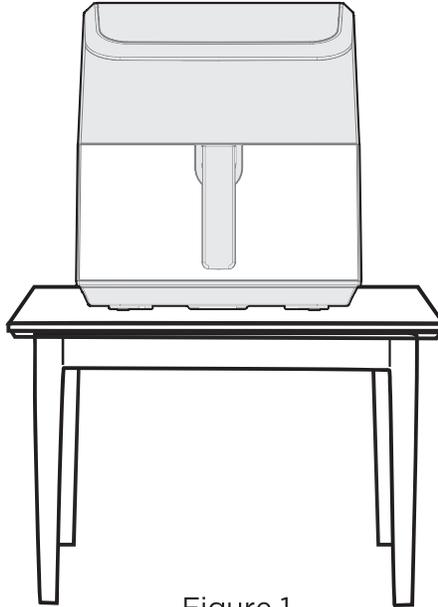


Figure 1

EN

## Menu Functions

- The first use requires 10 minutes of dry burning. A small amount of white smoke or odor may appear during the dry burning process, which is normal.
- Before the product works, please check whether the bakeware is in place to avoid malfunction.
- If you find that the product is malfunctioning, please stop using it and contact our service department immediately.
- Please use the bakeware and fried barrel together in the whole machine, and avoid using them separately.
- After using, unplug the power plug and allow the air fryer to cool completely before moving.

# CLEANING AND MAINTENANCE

- Please clean the air fryer to prevent it from being burned.
- After using, please clean the bakeware and fried barrel in time to avoid the damage of the coating due to the erosion of food residue oil.
- Do not use strong abrasive cleaners to prevent damage to the machine and your health.
- Use a soft, clean cloth to wipe the air fryer. Please do not use an over-wet cloth to clean the air fryer, to prevent water from entering the air fryer, which may cause short circuit and fire.
- Please do not use other cleaning equipment such as a dishwasher to clean the air fryer, otherwise it may cause damage and affect the use. Only fried barrel and bakeware can be put into the dishwasher.
- Use neutral detergent or clean water to clean the frying pans and drums.
- Please do not use hard and sharp items (such as wire balls, blades, etc.) to clean the bakeware and fried barrel to prevent scratching.
- Any other servicing should be performed by an authorized service representative.

EN

# TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The air fryer does not work.	• The appliance is not plugged in.	Put the main plug in an earthed wall socket.
	• You have not set the timer.	Press the timer knob to the required preparation time to switch on the appliance.
	• The pan is not put into the appliance properly.	Slide the pan into the appliance properly.
The ingredients fried with the air fryer are not done.	• The amount of ingredients in the basket is too big.	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly.
	• The set temperature is too low.	Press the temperature control key to the required temperature setting.
	• The preparation time is too short.	press the timer key to the required preparation time.
The ingredients are fried unevenly in the air fryer.	• Certain types of ingredients need to be shaken halfway through the preparation time.	Ingredients that lie on top of or across each other (e.g.fries) need to be shaken halfway through the preparation time.
Fried snacks are not crispy when they come out of the air fryer.	• You used a type of ingredients meant to be prepared in a traditional deep fryer.	Use oven ingredients or lightly brush some oil onto the ingredientsfor a crispier result.
I cannot slide the pan into the appliance properly.	• There are too much ingredients in the basket.	DO NOT fill the basket beyond in full, refer to the "Setting" table above.
	• The basket is not placed, in the pan correctly.	Push the basket down into the pan until you hear a click.

EN

Problem	Cause	Solution
White smoke comes out of the appliance.	<ul style="list-style-type: none"> <li>You are preparing greasy ingredients.</li> </ul>	When you fry greasy ingredients in the air fryer, a large amount of oil will leak into the pan. The oil produces white smoke and the pan may heat up more than usual. This does not affect the appliance or the end result.
	<ul style="list-style-type: none"> <li>The pan still contains grease residues from previous use.</li> </ul>	White smoke is caused by grease heating up in the pan. Make sure you clean the pan properly after each use.
French fries are fried unevenly in the air fryer.	<ul style="list-style-type: none"> <li>You did not use the right potato type.</li> </ul>	Use fresh potatoes and make sure they stay firm, during frying.
	<ul style="list-style-type: none"> <li>You did not rinse the potato sticks properly before you fried them.</li> </ul>	Rinse the potato sticks properly to remove starch from the outside of the sticks.
<b>EN</b> French fries are not crispy when they come out of the air fryer.	<ul style="list-style-type: none"> <li>The crispiness of the fries depends on the amount of oil and water in the fries.</li> </ul>	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

# TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions there of are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

EN

# DISPOSAL AND RECYCLING

## Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:  
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.




EN

## Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

## Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

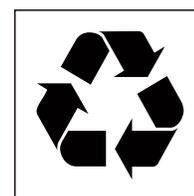

# DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.

EN

# WARRANTY / SERVICE

We congratulate you to your new device and are convinced that you will be satisfied and have your joy with this modern appliance.

However, if you recognize a reason for a complaint, please contact us:

Phone: +49 6196-90 20 - 0

Fax: +49 6196-90 20 -120

Email: [info-meg@midea.com](mailto:info-meg@midea.com)

Homepage: [www.midea.com](http://www.midea.com)

**In case of service:**

Phone: +49 6196-90 20 - 0

Fax .: +49 6196-90 20 -120

Email: [service-meg@midea.com](mailto:service-meg@midea.com)

In case of a technical fault, enter your exact address, telephone number, sales contract number and Device type (from the type plate of the device).

A precise fault description saves you time and money. For special questions, please contact the customer service center.

## Before calling for service:

Please check whether there is an operating error or a cause that has nothing to do with the function of your device.

Please observe the note in the user manual and check whether:

EN

- The power plug is connected
- The power plug may be damaged
- Electricity is available

## Warranty terms

This device has been manufactured and tested according to the most modern methods. The seller warrants for faultless material and proper manufacture for a period of 24 months from the date of sale to the end user. The unit is not suitable for commercial use.

The claim under guarantee lapses in the event of intervention by the Buyer or by a third party. Damage caused as a result of improper handling or operation, incorrect installation or storage, improper connection or installation as well as an act [...] of God or other external factors shall not be covered by this warranty.

When claims are submitted, the manufacturer reserves the right to make improvements to defective parts or to replace or exchange the device.

Only if it is not possible to achieve the intended use of the device by repairing or replacing the device, the buyer can demand a reduction of the purchase price or the cancellation of the purchase contract within 6 months from the date of purchase.

Claims for damages, including consequential damages, are excluded unless they are based on intent or gross negligence.

The guarantee claim exists only with submission of the product and the purchase receipt. This warranty is valid within Germany.

Importer by:

Midea Electrics Netherlands B.V.

Visiting address: Johan Cruijff Boulevard 65,

1101 DL Amsterdam

# Additional Conventional Warranty Conditions

- The products imported by Midea Italia s.r.l. (hereinafter "Midea") and marked with the trademark. "Midea" are covered by the legal warranty for lack of conformity, which is provided for in Articles 28-135 of the Consumer Code and for which the seller is liable in respect of goods sold in its sales outlets. For the period of two years from the time of purchase, the consumer may at any time benefit from the legal guarantee covering conformity defects existing at the time of delivery, and provided that the conformity defect is reported to the seller within two months from the date of discovery of the defect. On the basis of agreements with its vendors, Midea provides technical support services for products covered by the legal warranty through its network of Authorised Service Centres (hereinafter referred to as the "ASC");
- Furthermore, Midea Italia s.r.l. a sole shareholder with registered office in Milan, 20121, largo Guido Donegani 2 (hereinafter referred to as "Midea") offers an additional conventional warranty for a period of two years from the date of purchase on all Midea branded products (hereinafter referred to as the "Products") marketed by Midea itself in the territory of the Italian Republic (with the exclusion of the territory of the city of Venice and the smaller islands), in the territory of the Republic of San Marino and in the territory of the Vatican City, when installed and used in the same states and territories (hereinafter referred to as the "Territory") and when accompanied by the present Conventional Warranty Certificate (hereinafter referred to as the "CWC").

## Additional conventional warranty conditions

- This document contains the warranty conditions recognized by Midea Italia, s.r.l. (hereinafter "Midea") with reference to the Products marketed and installed in the Territory and accompanied by the CWC. These conventional warranty conditions respect the rights recognized to the consumer of D.Lgs.n.206/2005 and the following amendments and additions (hereinafter, the "Consumer Code") and by Articles 1519 bis et seq. of the Italian Civil Code and, in any case, do not limit, exclude or prejudice the consumer's right to benefit from the guarantee of conformity for which the seller is responsible.
- The Conventional Warranty offered by Midea (hereinafter the "Conventional Warranty") is effective and applicable only in respect of and in favour of the purchasers of the Products having the characteristics and quality of consumers, as defined and established by the Consumer Code (hereinafter the "Consumers"). The Conventional Warranty is therefore not effective, is excluded and cannot be invoked by the purchasers of the Products who are not Consumers and/or who use the Products within the scope of their professional and/or entrepreneurial and/or commercial activity.
- The Conventional Warranty is valid for 24 months from the date of purchase of the Product. In any event and irrespective of the date of purchase of the Product, the Conventional Warranty loses all effectiveness and is no longer valid 72 months after the date of manufacture of the Product, as determined by the serial numbers affixed to the Product.
- The Conventional Warranty shall only be considered effective and valid if the following conditions are simultaneously and comprehensively fulfilled:
  1. The Product is accompanied by an original CWC, delivered to the buyer at the time of delivery of the Product. The CWC must be presented at the time of the service request and to the service centre personnel at the time of the servicing.
  2. A suitable tax document is available certifying; (i) the date of purchase of the Product, (ii) the company name and correct identification of the seller and, (iii) the type and model of Product purchased, (iv) the quality of Consumer. The tax document of purchase must be shown at the time of the request for intervention and to the personnel of the service center at the time of the repair intervention,
  3. The labels affixed to the Product and indicating the model and characteristics of the equipment, as well as the serial numbers of the Product itself must be intact, not altered or made illegible.
  4. The Product shall be installed by a professional installer having all licenses and certifications required by law, and shall be installed and used in compliance with all regulations in force in the Territory of installation and in accordance with the provisions of the installation and use manuals enclosed with the Product itself
- Midea is not responsible for any loss of this certificate and is not required to issue duplicates.
- The Conventional Warranty, when effective, consists of the repair or replacement free of charge of Product components with defects or manufacturing faults.
- Midea may arrange for the replacement of the Product with a new one, or in the event of the unavailability of such Product, with another equivalent.
- The replacement of the Product does not modify or extend the validity of the Conventional Warranty, which always starts from the date of purchase of the original Product.
- Warranty services are provided by Midea through a network of Technical Assistance Centres (hereinafter referred to as the "TAC") authorised by Midea.
- The validity of the warranty is subject to the verification of the existence of defects or defects of the components constituting the Product, carried out by an authorised TAC.
- After the warranty period, the customer is responsible for all costs related to spare parts and labor necessary for the repair of the Product.

EN

## Exclusions

- By way of example but not limited to, some cases of ineffectiveness and exclusion of the coverage of the Conventional Warranty are listed:
  - a. The Conventional Warranty is ineffective and does not cover routine maintenance and periodic inspections such as; filter cleaning, filter replacement, heat exchanger cleaning and other activities to check and set the Product or to adjust or modify plugs or cables.
  - b. The Conventional Warranty is ineffective and does not provide cover in the event that it is established that periodic maintenance has not been carried out or has been carried out in an irregular manner, in accordance with the prescriptions and indications set out in the Product's instruction booklet and user manual.
  - c. The contractual warranty is ineffective and does not provide cover if the Product is used for non-domestic purposes, in any event, if it is used in the course of a commercial and/or entrepreneurial and/or professional activity.
  - d. The Conventional Warranty is ineffective and does not offer coverage in the event of loss of parts, accessories and components of the Product.
  - e. The conventional warranty does not cover direct damage and faults resulting from the use of the Product in a manner not specified in the instruction manual and the Product's user manual and in any case outside the Product's intended ratings, or from sudden changes in the mains voltage to which the Product is connected, as well as faults caused by liquid infiltration, fire, inductive/electrostatic discharges or discharges caused by lightning, surges or other phenomena external to the Product.
  - f. The Conventional Warranty is ineffective and does not offer coverage for direct or indirect damage caused by improper or negligent use of the Product or in the event of installation or storage of the Product outside the environmental conditions provided for its correct functioning, as indicated in the user manual that accompanies the Product.
  - g. The Conventional Warranty is ineffective and does not offer coverage for defects arising from the imperfect installation of the Product or, in any case, when the Product has not been installed by a professional installer equipped with all the licenses and legal certifications.
  - h. The Conventional Warranty is ineffective and does not offer coverage in case of use of the Product that does not comply with what is indicated in the user manual that accompanies the Product.
  - i. The Conventional Warranty is ineffective and does not offer coverage for damage resulting from leaks and spills of water or other liquids attributable to defects in the constituent components of the product.
  - j. The Conventional Warranty is ineffective and does not offer coverage for direct or indirect damage caused by negligence, weather events, falling materials, accumulation of ice in the units of the Product, accumulation of impurities or residues in the connecting pipes and connection of the Product, contact of the Product with liquids or moisture.
  - k. The Conventional Warranty is ineffective and does not offer coverage for direct or indirect damage caused by tampering by unauthorized personnel and by the use of components, spare parts or consumables not approved by Midea as suitable.
  - l. The Conventional Warranty is ineffective and does not provide coverage for damage resulting from the transport and handling of the Product, even if such damage is reported to the carrier at the time of delivery.
  - m. The Conventional Warranty is ineffective and does not cover all parts subject to wear and tear as a result of use, such as batteries, filters, seals, buttons, doors and knobs, lamps, handles, plastic parts, accessories and similar components that are not affected by faults or manufacturing defects found in the first 7 months from the date of purchase or delivery of the Product.
  - n. The Conventional Warranty is ineffective and does not offer coverage for damage or compensation to food, clothing and the like inserted in the product, following its malfunction or failure.
  - o. The Conventional Warranty is ineffective and does not offer coverage for costs for tools or services necessary to access the Product, or for the transport of parts or components of the Product to the installation position in the event of not easy access guaranteed to the same.
  - p. The Conventional Warranty is ineffective and does not offer coverage for defects attributable to technological obsolescence or other software/hardware components provided by third parties with respect to Midea.
- The clauses contained herein may be modified exclusively by Midea; no variation or modification may be made to this document except as expressly stated by Midea.



# Warranty certificate

Midea would like to thank you for purchasing one of its products.  
Please keep this document with your proof of purchase.

The warranty has a duration of 24 months from the date shown on the purchase document.

Our Customer Service is at your disposal for product reports and requests for information. To contact customer service and possible:

- Connect to the website [www.midea.com/it](http://www.midea.com/it)
- Send an E-Mail to [assistenza@midea.com](mailto:assistenza@midea.com)


To request product assistance in the event of a fault, please contact the customer service number:



The service is from Monday to Friday from 09:00 - 13:00 and 14:00 - 18:00, excluding public holidays. The service is subject to the normal tariff in force depending on the tariff plan used. The costs for the call may vary depending on the telephone operator and the tariff plan used.

EN

Keep this document together with the document proving the date of purchase of the product.

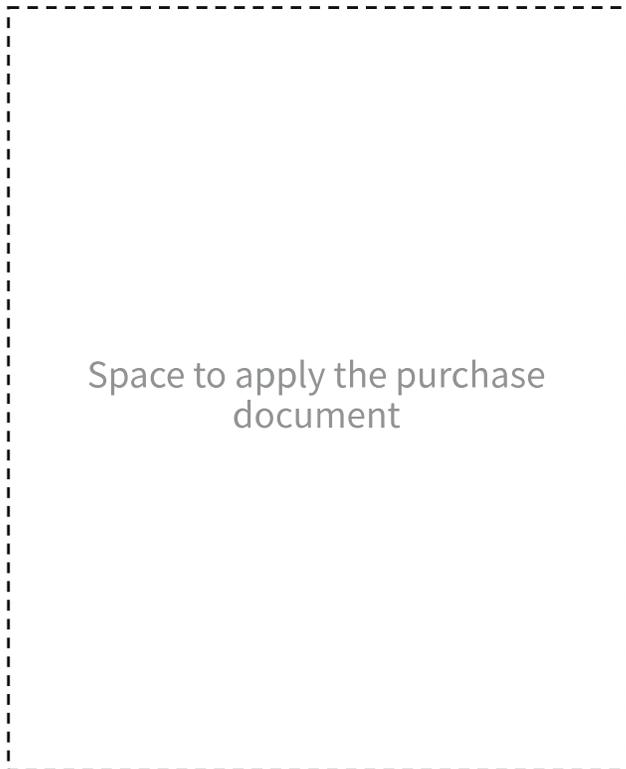



[www.midea.com](http://www.midea.com)  
© Midea 2022 all rights reserved

