

THANK YOU FOR BUYING A BEKO PRODUCT.




Before using the appliance carefully read the Safety Instruction.

Before using the machine, it is imperative that the transport bracket is removed. For more detailed instructions on how to remove it, see the Installation Guide.

CONTROL PANEL

- 1 Programme selector
- 2 "Play/Pause" button
- 3 "Reset/Drain" button
- 4 "Temperature" button
- 5 "Delay" button
- 6 Child lock combination  3 sec
- 7 "Spin" button
- 8 Time
- 9 Temperature
- 10 Washing phase
- 11 Eco monitor

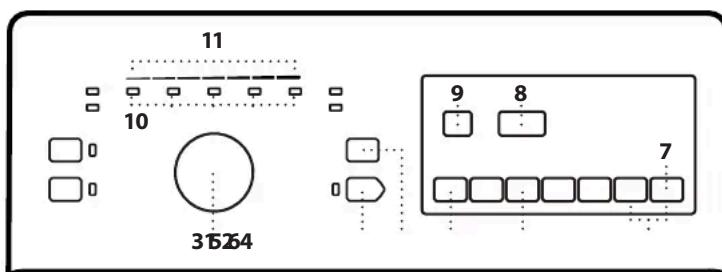

INDICATORS

- Detergent over dosage 
- Lid open 
- Failure: Call Service 
- Failure: Water filter clogged 
- Failure: No water 

In the event of any failure, refer to the "TROUBLESHOOTING" section

PROGRAMME CHART

Programme	Max load 7,0 Kg Power consumption in off-mode 0,11 W / in left-on mode 0,11 W				Detergents and additives			Recommended detergent		Residual dampness % *	Energy consumption kWh	Total water lit	Laundry temperature °C	
	Temperatures		Max. Spin speed (rpm)	Max load (kg)	Duration (h : m)	Prewash	Main wash	Softener	Powder	Liquid				
Setting	Range													
Colours	40°C 20 - 60°C 1000	4,0 **												
Express 30	30°C 20 - 30°C 1200	3,0 0:30	-									57 0	250 42 27	
Sport	30°C 20 - 30°C 1200	3,0 **												
20°C	20°C 20°C 1200	7,0 1:50	-									53 0	200 55 20	
Anti Stain	20°C 20°C 1200	4,0 **	-											
Aqua saver	40°C 20 - 40°C 1200	2,5 **	-											
Rinse & Spin	-- 1200	7,0 **	--											
Spin	-- 1200	7,0 **	--											
Wool	40°C 20 - 40°C 1000	1,0 **	-											
Delicates	40°C 20 - 40°C 1000	1,5 **												
Synthetics	40°C 20 - 60°C 1200	3,0 1:40										40 0	520 50 40	
Cotton	60°C 20 - 95°C 1200	7,0 2:35										57 1	200 54 56	
Eco 40-60	40°C 40°C		1151 7,0 3:25	-									53 1	100 59 49
			1151 3,5 2:40	-									53 0	525 40 36
			1151 2,0 2:30	-									53 0	270 30 26
Mixed	40°C 20 - 60°C 1200	3,0 **	-											

 Dosing required  Dosing optional


Eco 40-60 - Test wash cycle in compliance with 2019/2014 regulation. The most efficient programme in terms of energy and water consumption for washing normally soiled cotton laundry. Display only: Spin speed values shown on the display can slightly differ from the values stated in the table

For all Test Institutes

Long wash cycle for cottons: set wash cycle Cotton with a temperature of 40°C. Synthetic program along: set wash cycle Synthetics with a temperature of 40°C. This data may differ in your home due to changing conditions in inlet water temperature, water pressure etc. Approximate programme duration values refer to the default setting of the programmes, without options. The values given for programmes other than the eco 40-60 programme are indicative only.

PRODUCT DESCRIPTION

1. Lid handle
2. Lid
3. Control panel
4. Detergent dispenser
5. Drum
6. Water filter - behind the cover
7. Mobility lever (depending on model)
8. Adjustable feet (x2)

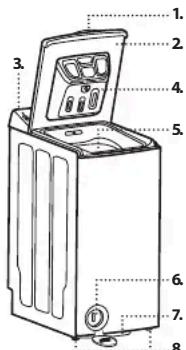

* After programme end and spinning with maximum selectable spin speed, in default programme setting.

** The duration of the programme is shown on the display.

The sensor technology adapts water, energy and programme duration to your wash load.

DETERGENT DISPENSER

Main wash compartment 

Detergent for the main wash, stain remover or water softener.

Prewash compartment 

Detergent for the prewash.

Softener compartment 

Fabric softener. Liquid starch. Bleach.

Pour in softener, starch or bleach solution only up to the "max" mark.

Release button 

Press to remove tray for cleaning.

