

# falmec



## Elements **Air Wall**



video d'installazione



installation video



vidéo d'installation

---

### INSTRUCTIONS BOOKLET


---

LIBRETTO ISTRUZIONI <sup>IT</sup>  
GEBRAUCHSANWEISUNG <sup>DE</sup>  
MODE D'EMPLOI <sup>FR</sup>


MANUAL DE INSTRUCCIONES <sup>ES</sup>  
ИНСТРУКЦИИ <sup>RU</sup>  
INSTRUKCJA OBSŁUGI <sup>PL</sup>

HANDLEIDING <sup>NL</sup>  
BRUGSANVISNINGER <sup>DA</sup>

- IT - Modulo pannello 120 cm  
aspirazione centrale
- EN - Central suction 120 cm panel  
module
- DE - Modul Platte 120 cm zentrale  
Absaugung
- FR - Module panneau 120 cm aspiration  
centrale
- ES - Módulo panel 120 cm aspiración  
central
- RU - Панельный модуль 120 см  
с центральным всасыванием
- PL - Moduł panelowy 120 cm  
z centralnym zasysaniem
- NL - Paneelmodule 120 cm centrale  
afzuiging
- DA - Panelmodul 120 cm centralt udsug

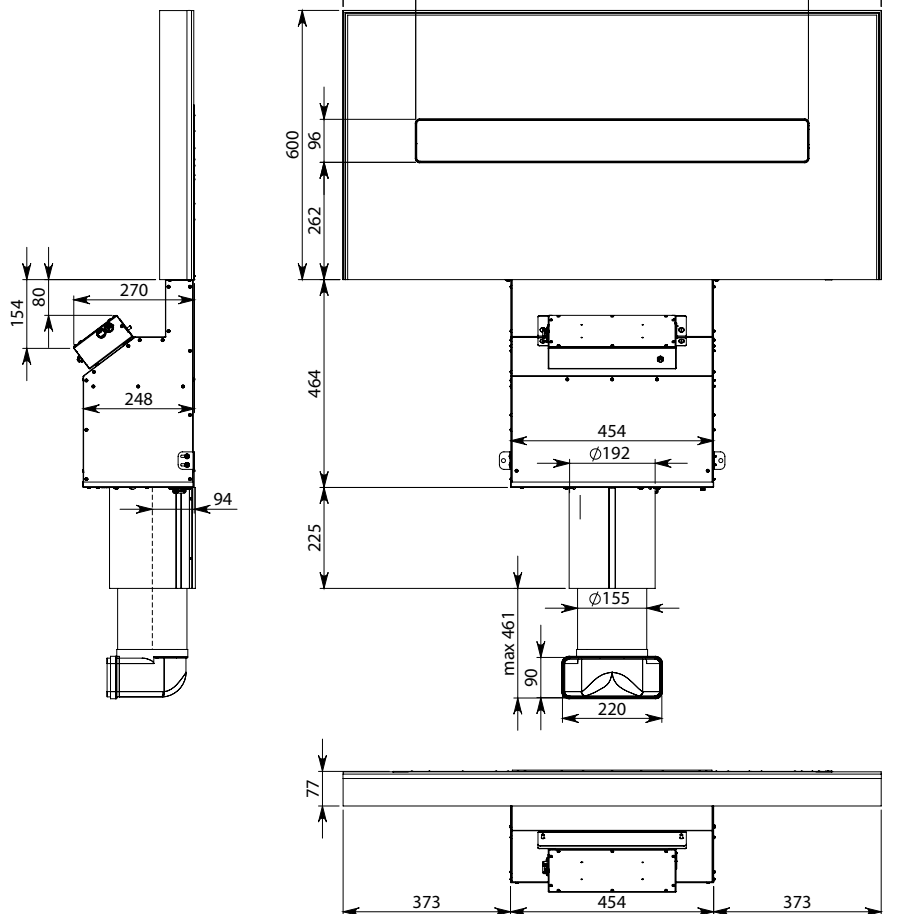

- IT - Modulo pannello 150 cm  
aspirazione destra
- EN - Right suction 150 cm  
panel module
- DE - Modul Platte 150 cm  
rechte Absaugung
- FR - Module panneau 150 cm  
aspiration droite
- ES - Módulo panel 150 cm  
aspiración derecha
- RU - Панельный модуль 150 см  
с правое всасывание
- PL - Moduł panelowy 150 cm  
z prawe zasysanie
- NL - Paneelmodule 150 cm  
afzuiging rechts
- DA - Panelmodul 150 cm  
højre udsug

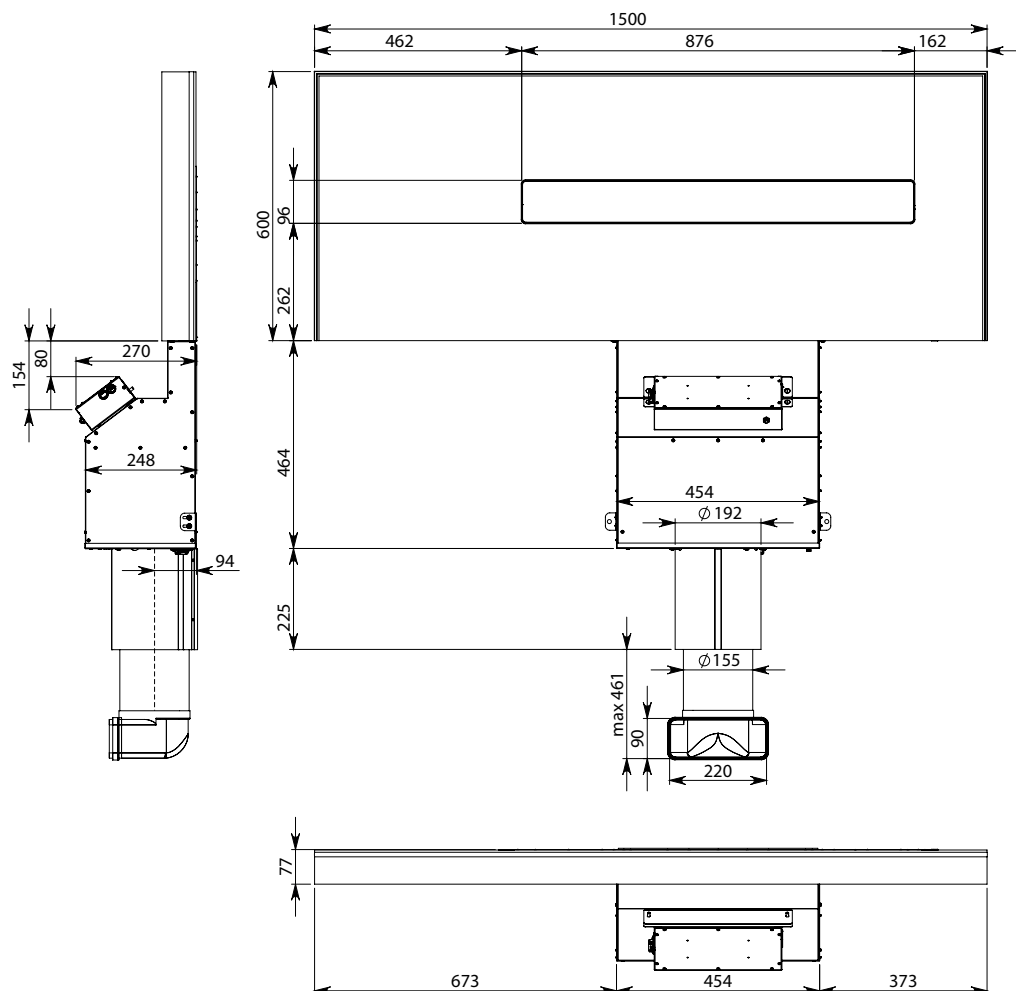

IT - Modulo pannello 150 cm  
aspirazione sinistra

EN - Left suction 150 cm  
panel module

DE - Modul Platte 150 cm  
linke Absaugung

FR - Module panneau 150 cm  
aspiration gauche





ES - Módulo panel 150 cm  
aspiración izquierda

RU - Панельный модуль 150 см  
с левым всасыванием


PL - Moduł panelowy 150 cm  
z lewym  
zasysaniem

NL - Paneelmodule 150 cm  
afzuiging links


DA - Panelmodul 150 cm  
venstre udsug

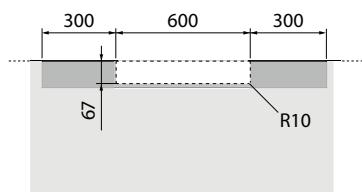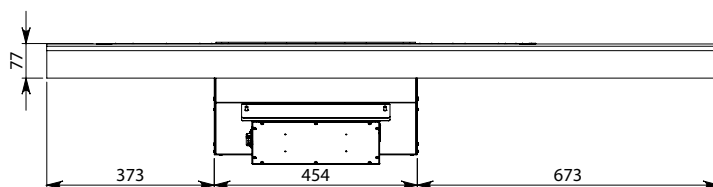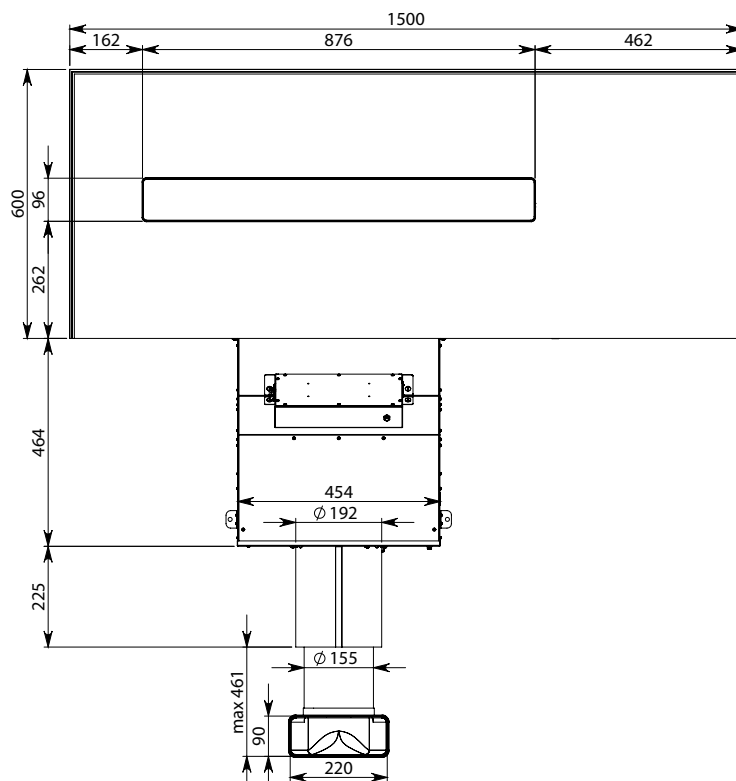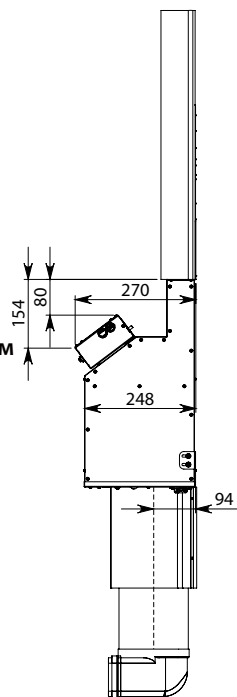

Versione 120 cm  
Version 120 cm

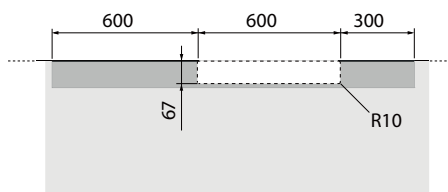

Versione 150 cm destra  
Version 150 cm right

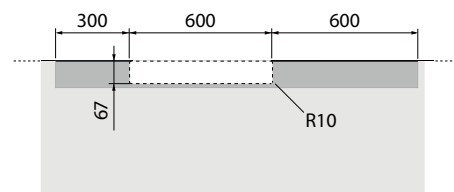

Versione 150 cm sinistra  
Version 150 cm left

IT - Misure foro per incasso.

EN - Hole measurements for installation.

DE - Lochabmessungen für Einbau.

FR - Mesures du trou pour encastrement.


ES - Medidas del orificio para empotrado.

RU - Размеры монтажного отверстия.

PL - Wymiary otworu do zabudowy.

NL - Afmetingen inbouwruimte

DA - Mål til åbning for indbygning.

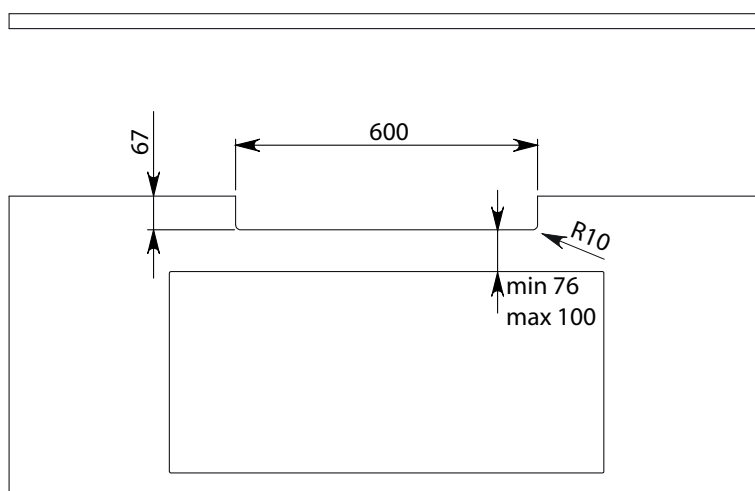

IT - Installazione su piano profondità 75 cm.  
Vista laterale.

EN - Installation on top depth 75 cm.  
Side view.

DE - Installation auf der Arbeitsplatte  
Tiefe 75 cm. Seitenansicht.

FR - Installation sur un plan d'une  
profondeur de 75 cm. Vue de côté.




ES - Instalación en encimera de 75 cm de  
profundidad. Vista lateral.

RU - Установка на столешницу глубиной  
75 см. Вид сбоку.

PL - Instalacja na blacie o głębokości 75 cm.  
Widok z boku.


NL - Installatie op werkblad diepte 75 cm.  
Zijaanzicht.

DA - Installation på plade dybde 75 cm.  
Set fra siden.

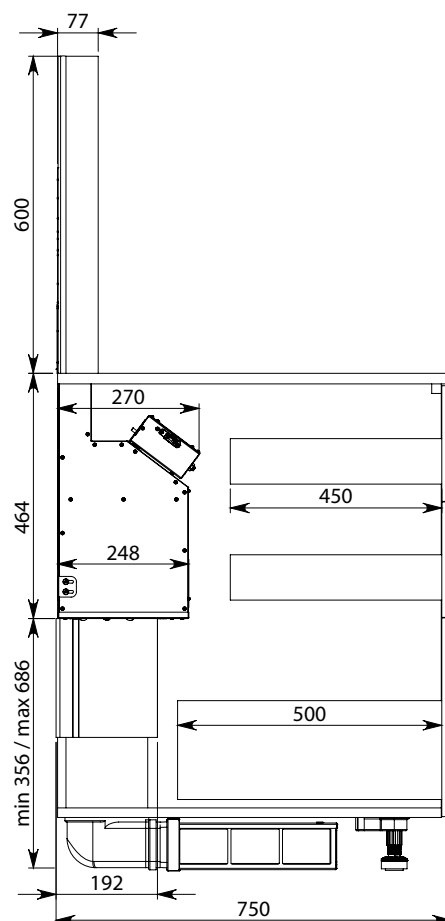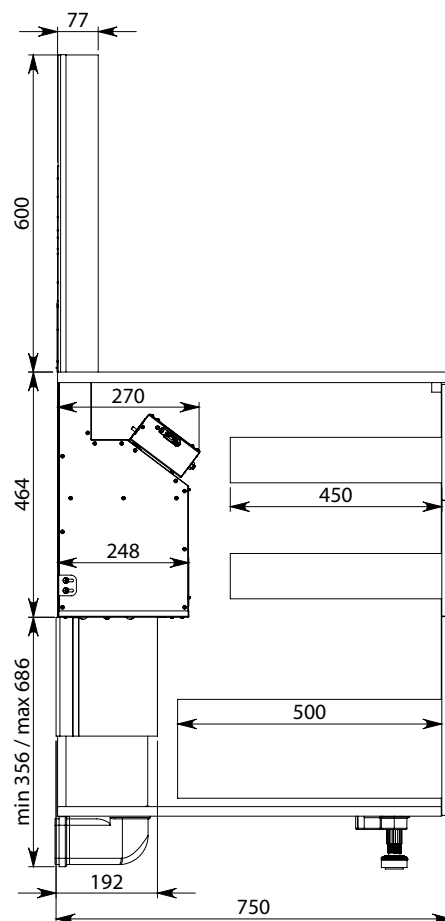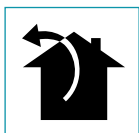


- IT - Togliere il pannello dell'aspirazione (1).
- EN - Remove the suction panel (1).
- DE - Die Platte der Absaugung entfernen (1).
- FR - Enlever le panneau de l'aspiration (1).
- ES - Quite el panel de aspiración (1).
- RU - Снять панель всасывания (1).
- PL - Zdjąć panel zasysania (1).
- NL - Verwijder het afzuigpaneel (1).
- DA - Fjern panelet på udsuget (1).

1

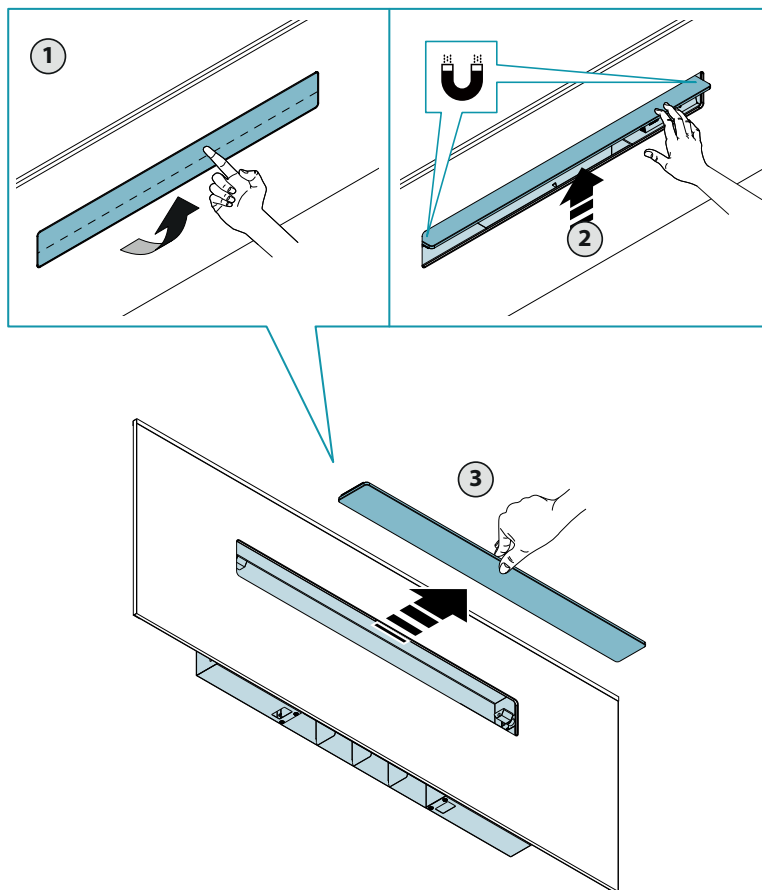

- IT - Centrare la cappa con il foro sul piano di lavoro (2).
- EN - Centre the hood with the hole on the worktop (2).
- DE - Zentrieren Sie die Abzugshaube mit dem Loch auf der Arbeitsplatte (2).
- FR - Centrer la hotte avec le trou sur le plan de travail (2).
- ES - Centrar la campana con el agujero de la zona de la placa de cocción (2).
- RU - Отцентрируйте вытяжку по отверстию на столешнице (2).
- PL - Wyśrodkować okap względem otworu w blacie (2).
- NL - Centreer de kap met het gat op het werkblad (2).
- DA - Centrér emhætten med hullet på bordpladen (2).



2

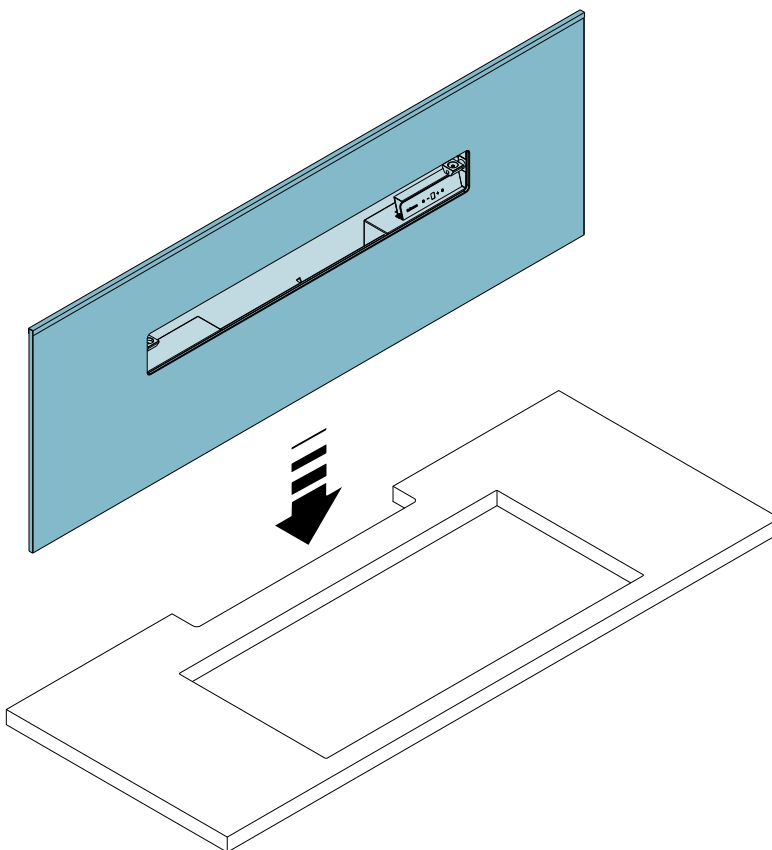

### DA - Fastgør emhætten til væggen (3)


3

**x2**

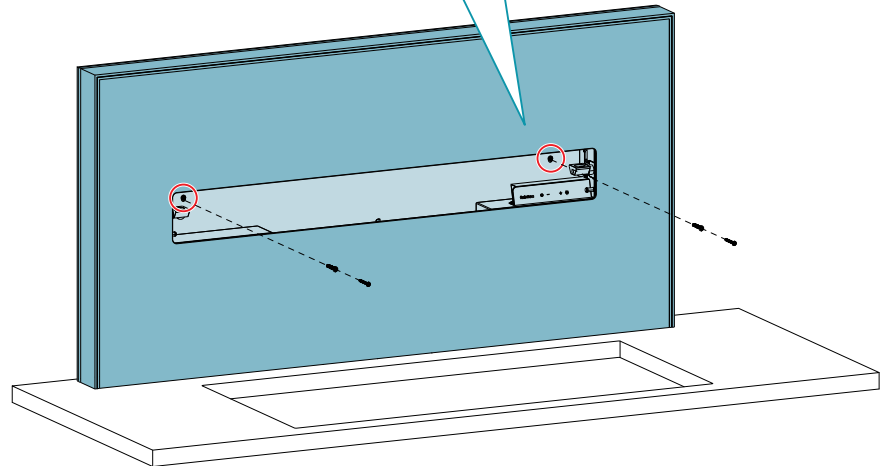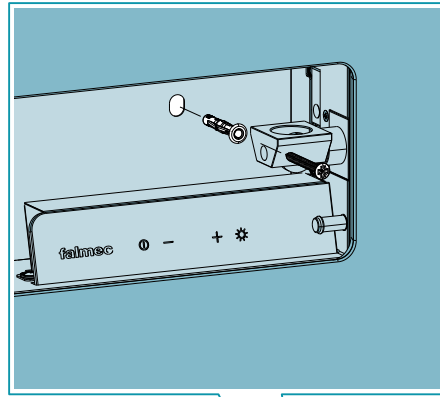

**DA - Fastgørelse af NRS-rør (4).**

4

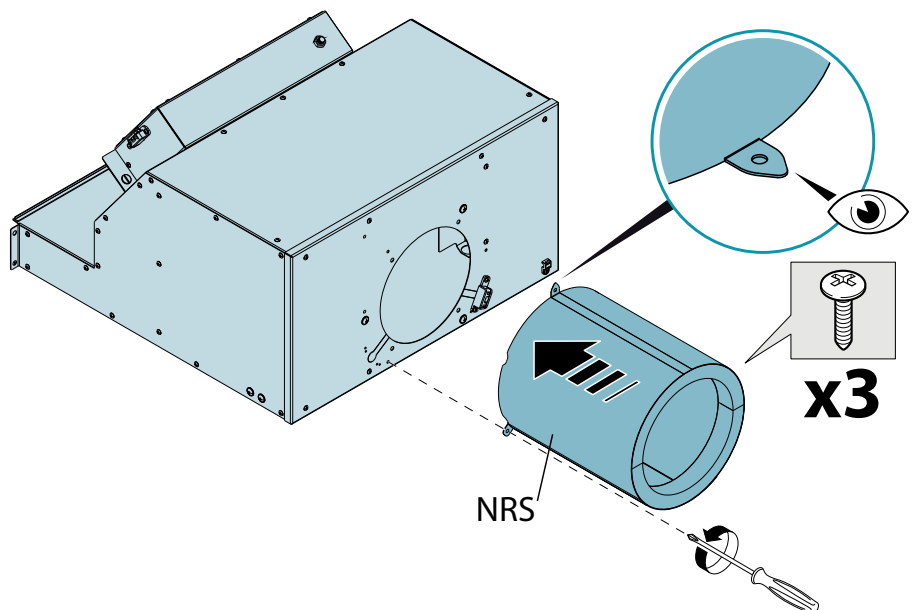

IT - Posizionare il motore sotto il piano e fissarlo alla cappa (5).

EN - Position the motor under the top and fasten it to the hood (5).

DE - Positionieren Sie den Motor unter dem Ebene und befestigen Sie ihn an der Abzugshaube (5).

FR - Positionner le moteur sous le plan et le fixer à la hotte (5).

ES - Coloque el motor debajo de la placa y fíjelo a la campana (5).



RU - Расположите двигатель под верхним уровнем и закрепите его на вытяжке (5).

PL - Umieścić silnik pod płytą i przymocować go do okapu (5).

NL - Plaats de motor onder de plaat en bevestig hem aan de kap (5).

DA - Placér motoren under toppen, og fastgør den til emhætten (5).

**5**

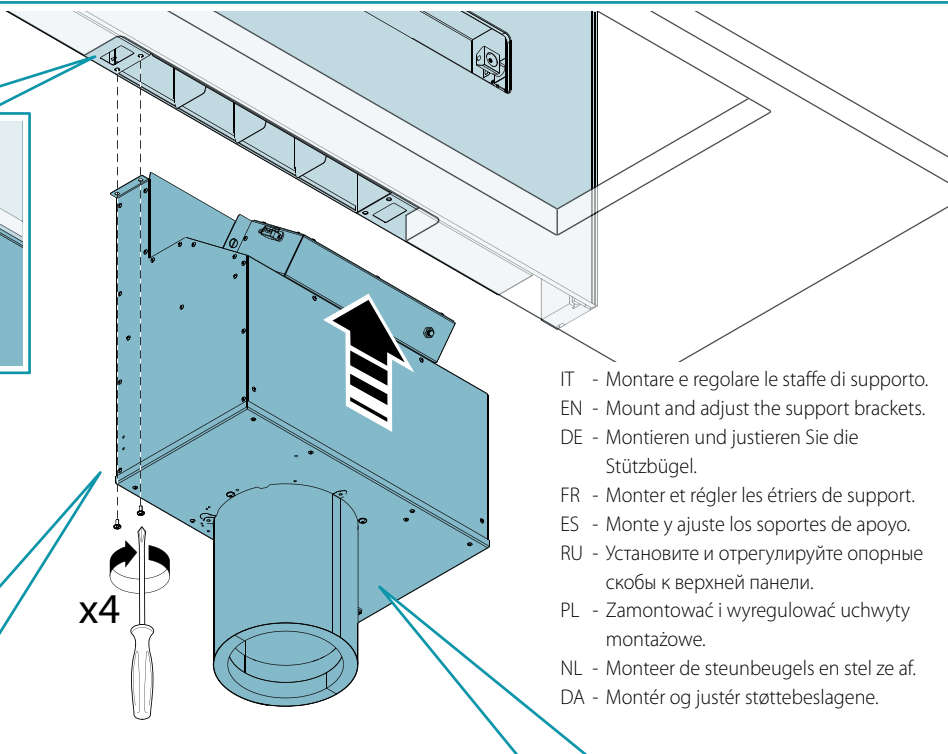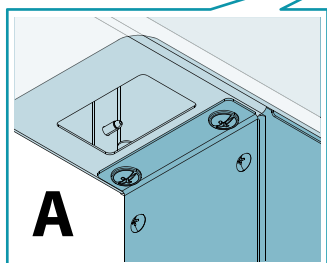

IT - Montare e regolare le staffe di supporto.

EN - Mount and adjust the support brackets.

DE - Montieren und justieren Sie die Stützbügel.

FR - Monter et régler les étriers de support.

ES - Monte y ajuste los soportes de apoyo.


RU - Установите и отрегулируйте опорные скобы к верхней панели.

PL - Zamontować i wyregulować uchwyty montażowe.

NL - Monteer de steunbeugels en stel ze af.

DA - Monter og justér støttebeslagene.

**B**

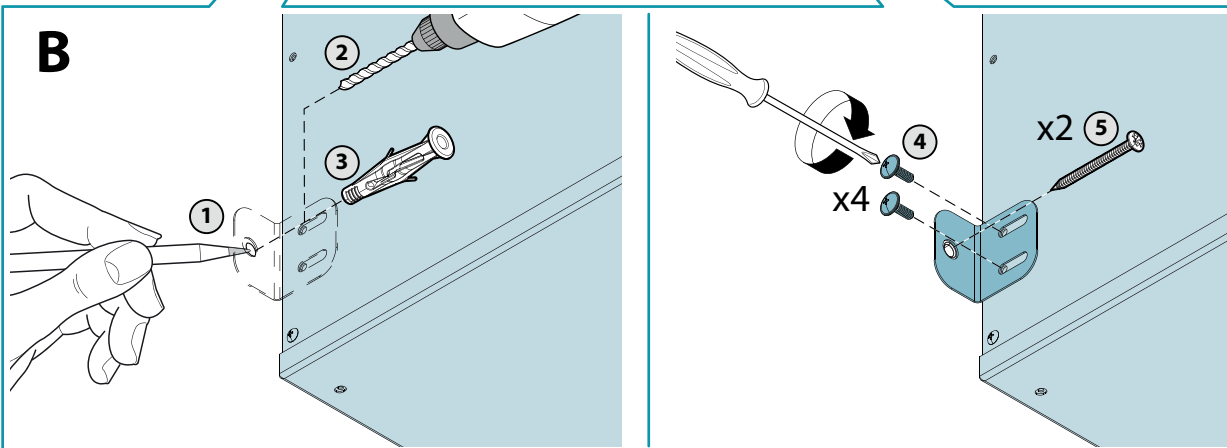

IT - Inserire il pannello dell'aspirazione (6).

EN - Insert the suction panel (6).

DE - Die Platte der Absaugung einfügen (6).

FR - Insérer le panneau de l'aspiration (6).

ES - Introduzca el panel de aspiración (6).


RU - Установить панель всасывания (6).

PL - Umieścić panel zasysania (6).

NL - Breng het afzuigpaneel in (6).

DA - Monter panelet på udsuget (6).

**6**

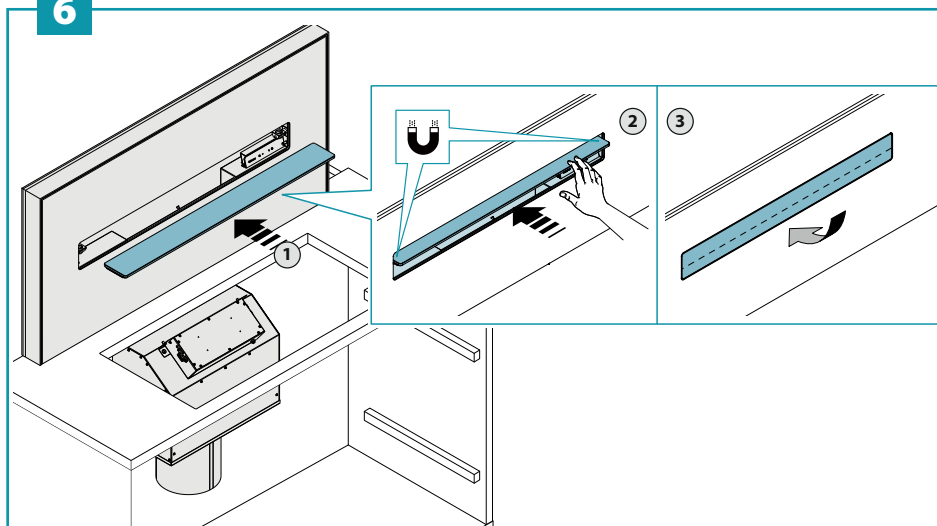

IT - Connessione cavi di comando, luci e collegamento elettrico (7).

EN - Control, lighting and electrical connection cables (7).

DE - Steuer-, Beleuchtungs- und elektrische Anschlusskabel (7).

FR - Connexion des câbles de commande, de lumières et de raccordement électrique (7).

ES - Conexión de cables de control, luces y conexión eléctrica (7).


RU - Соединение кабелей управления, освещения и электрического подключения (7).

PL - Przyłączenie kabli sterujących, świateł i połączenie elektryczne (7).

NL - Aansluiting besturingskabels, verlichting en elektrische aansluiting (7).

DA - Kabler til styring, belysning og elektrisk tilslutning (7).

7

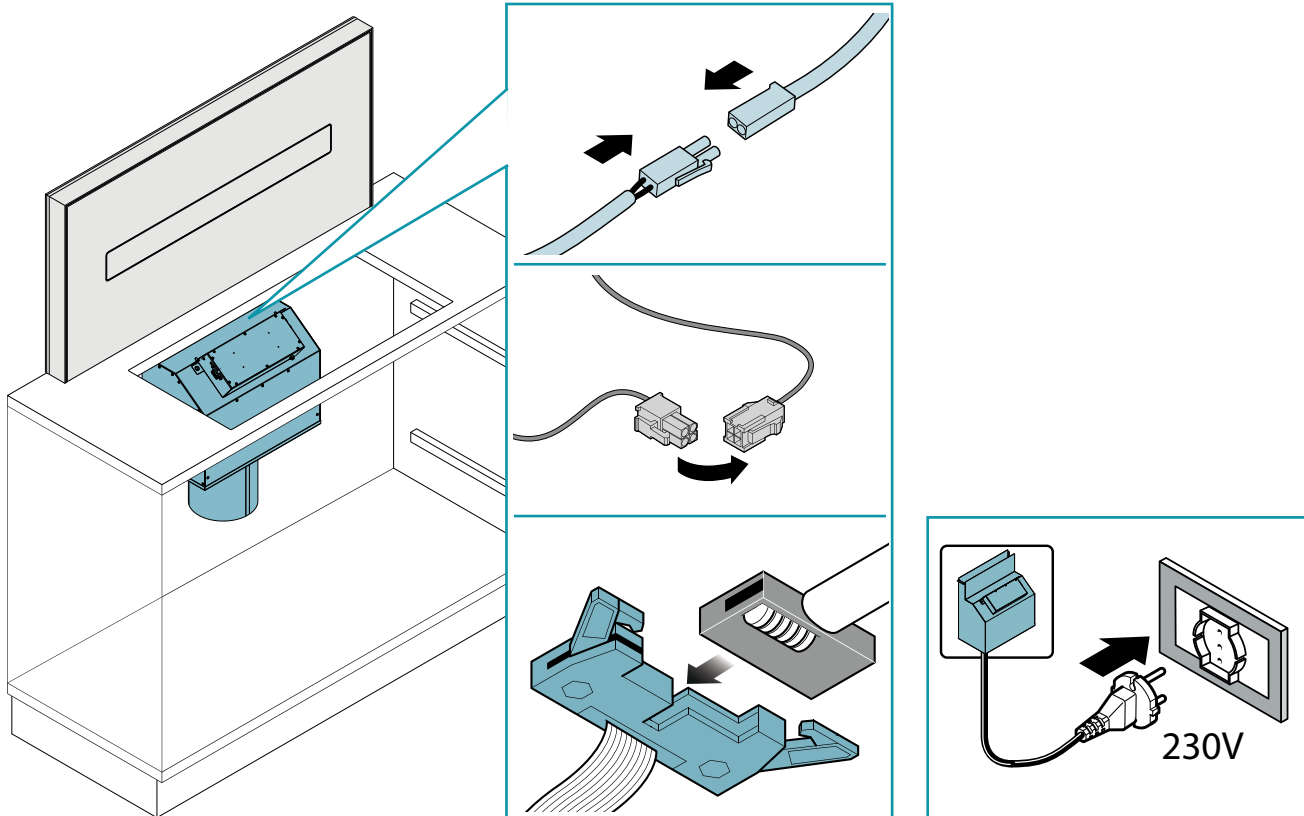

IT - Installazione con cappa ad evacuazione esterna (aspirante) (8).

EN - Installation with external exhaust hood (suction) (8).

DE - Installation mit Abzugshaube in Version Außenabluft (Abluftversion) (8).

FR - Installation avec hotte à évacuation extérieure (aspirante) (8).

ES - Instalación con campana de evacuación externa (extractora) (8).


RU - Установка с кухонной вытяжкой с выводом наружу (всасывающая) (8).

PL - Instalacja z okapem z usuwaniem na zewnątrz (wyciągowy) (8).

DA - Installation med emhætte med ekstern udsugning (udsugende) (8).

NL - Installatie met kap met (zuig)afvoer naar buiten (8).


8

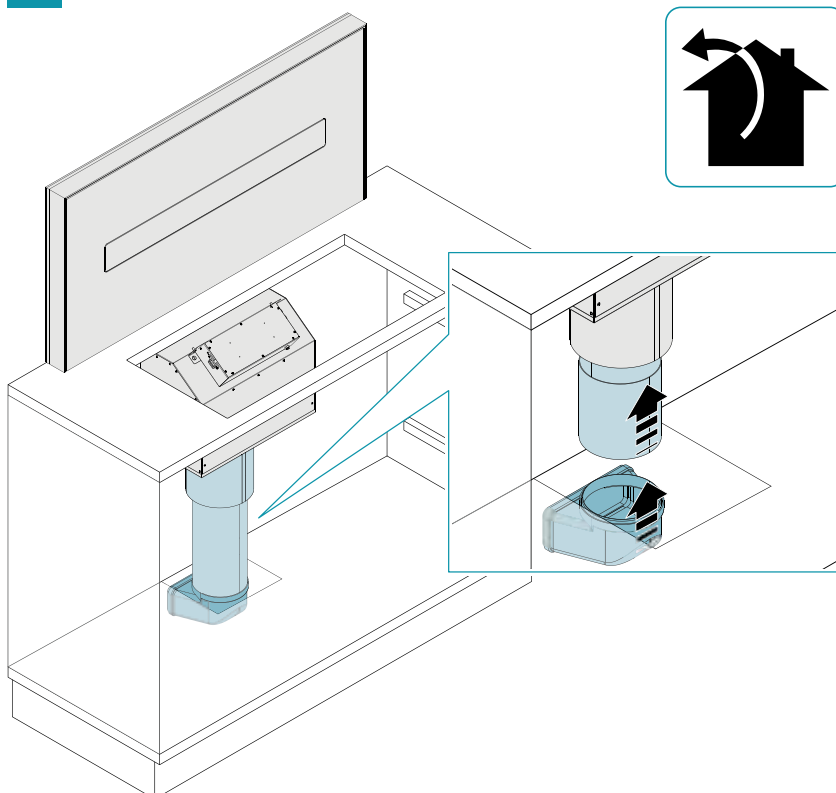


IT - Installazione filtro carbone-zeolite (opzionale).  
 EN - Installing the carbon-zeolite filter (optional).  
 DE - Installation des Kohlenstoff-Zeolith-Filter (Option).  
 FR - Installation du filtre charbon-zéolite (en option).  
 ES - Instalación de filtro de carbón-zeolita (opcional).

RU - Установка угольного цеолитного фильтра (дополнительного).  
 PL - Instalacja filtra węglowo-zeolitowego (opcjonalna).  
 NL - Installatie koolstof-zeolietfilter (optie).  
 DA - Installation af zeolit-kulfilteret (valgfrt).

9

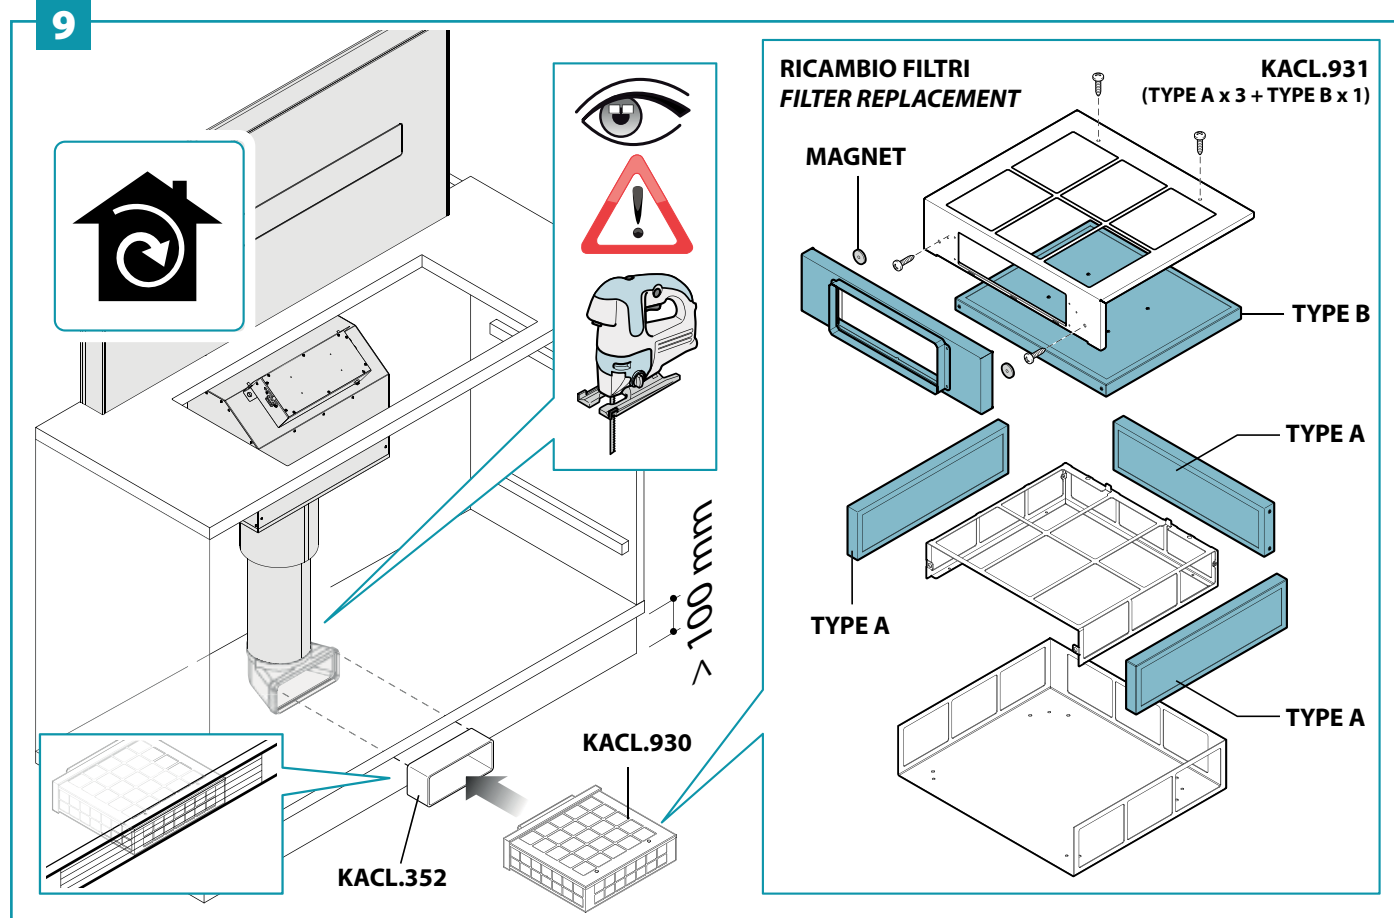

10

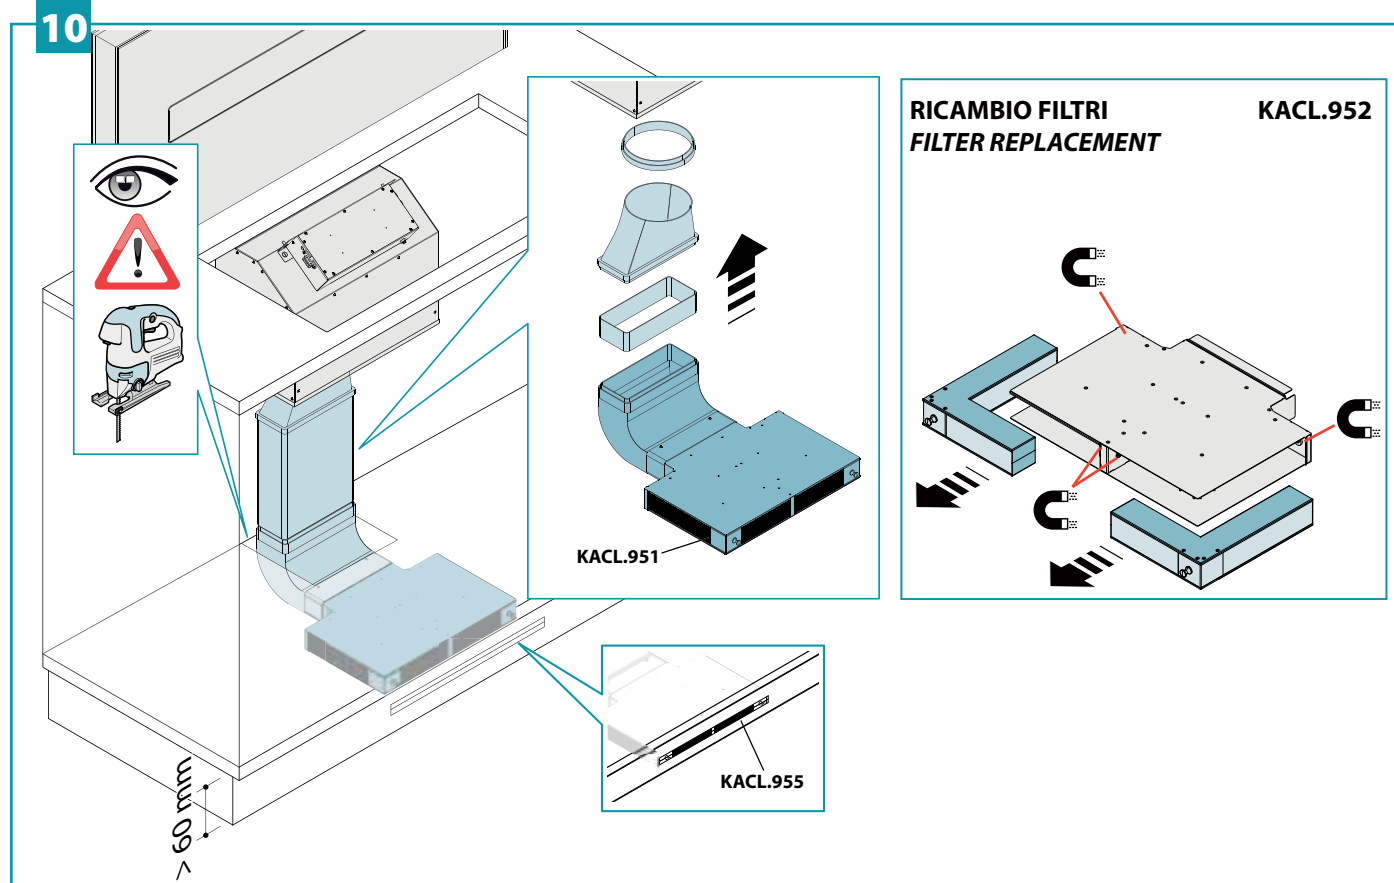

## SAFETY INSTRUCTIONS AND WARNINGS



**Installation operations are to be carried out by skilled and qualified installers in accordance with the instructions in this booklet and in compliance with the regulations in force.**

**DO NOT use the hood if the power supply cable or other components are damaged:** disconnect the hood from the electrical power supply and contact the Dealer or an authorised Servicing Dealer for repairs.

**Do not modify the electrical, mechanical or functional structure of the equipment.**

**Do not personally try to carry out repairs or replacements. Interventions carried out by incompetent and unauthorised persons can cause serious damage to the unit or physical and personal harm, not covered by the Manufacturer's warranty.**

### WARNINGS FOR THE INSTALLER

#### TECHNICAL SAFETY



**Before installing the hood, check the integrity and function of each part. Should anomalies be noted, do not proceed with installation and contact the Dealer.**

**Do NOT install the hood if an aesthetic (or cosmetic) defect has been detected. Put it back into its original package and contact the dealer.**

**No claim can be made for aesthetic (or cosmetic) defects once it has been installed.**

During installation, always use personal protective equipment (e.g.: Safety shoes) and adopt prudent and proper conduct.

The installation kit (screws and plugs) supplied with the hood is only to be used on masonry walls: in case of installation on walls of a different material, assess other installation options keeping in mind the type of wall surface and the weight of the hood (indicated on page 2).

Keep in mind that installations with different types of fastening systems from those supplied, or which are not compliant, can cause electrical and mechanical seal danger.

Do not install the hood outdoors and do not expose it to atmospheric elements (rain, wind, etc.).

#### ELECTRICAL SAFETY



**The electrical system to which the hood is to be connected must be in accordance with local standards and supplied with earthed connection in compliance with safety regulations in the country of use. It must also**

**comply with European standards regarding radio antistatic properties.**

Before installing the hood, check that the electrical mains power supply corresponds with what is reported on the identification plate located inside the hood.

The socket used to connect the installed equipment to the electrical power supply must be within reach: otherwise, install a mains switch to disconnect the hood when required.

Any changes to the electrical system must be carried out by a qualified electrician.

Use of non-compliant screws with these instructions can lead to danger of an electrical nature.

Do not try to solve the problem yourself in the event of equipment malfunction, but contact the Dealer or an authorised Servicing Department for repairs.



**When installing the hood, disconnect the equipment by removing the plug or switching off the main switch.**

#### FUMES DISCHARGE SAFETY



**Do no connect the equipment to discharge pipes of fumes produced from combustion (for example boilers, fireplaces, etc.).**

Before installing the hood, ensure that all standards in force regarding discharge of air out of the room have been complied with.

Deviation for Australia and New Zealand: Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur. (AS/NZS 60335.2.31:2013/A4:2020).

### USER WARNINGS



**These warnings have been drawn up for your personal safety and those of others. You are therefore kindly asked to read the booklet carefully in its entirety before using the or cleaning the equipment.**

**The Manufacturer declines all responsibility for any damage caused directly, or indirectly, to persons, things and pets as a consequence of failing to comply with the safety warnings indicated in this booklet.**

**It is imperative that this instructions booklet is kept together with the equipment for any future consultation.**

If the equipment is sold or transferred to another person, make sure that the booklet is also supplied so that the new user can be made aware of the hood's operation and relative warnings.

After the stainless steel hood has been installed, it will need to be cleaned to remove any residues remaining from the protection adhesive as well as any grease and oil stains which, if not removed, can cause irreversible damage to the hood surface. To properly clean the unit, the manufacturer recommends using the supplied moist wipes, which are also available sold separately.

Insist on original spare parts.

## INTENDED USE

**The equipment is solely intended to be used to extract fumes generated from cooking food in non-professional domestic kitchens: any other use is improper. Improper use can cause damage to persons, things, pets and exempts the Manufacturer from any liability.**

The equipment can be used by children over the age of 8 and by persons with reduced physical, sensory and mental abilities, or with no experience or knowledge, as long as they do so under supervision or after having received relative instructions regarding safe use of the equipment and understanding of the dangers connected to it.

Children are not to play with the equipment. Cleaning and maintenance by the user must not be carried out by children without supervision.

## USE AND CLEANING WARNINGS



**Before cleaning or carrying out maintenance operations, disconnect the equipment by removing the plug or switching off the main switch.**

Do not use the hood with wet hands or bare feet. Always check that all electrical parts (lights, extractor fan) are off when the equipment is not being used.

Always supervise the cooking process during the use of deep-fryers: Overheated oil can catch fire.

Do not leave open, unattended flames under the hood.

Do not prepare food over an open flame under the hood.

Never use the hood without the metal anti-grease filters: in this case, grease and dirt will deposit in the equipment and compromise its operation.

Accessible parts of the hood can be hot when used at the same time as the cooking appliances.

Do not carry out any cleaning operations when parts of the hood are still hot.

There can be a risk of fire if cleaning is not carried out according to the instructions and products indicated in this booklet.

Disconnect the main switch when the equipment is not used for long periods of time.



**If other appliances that use gas or other fuels are being used at the same time (boiler, stove, fireplaces, etc.), make sure the room where the fumes are discharged is well-ventilated, in compliance with the local regulations.**

## INSTALLATION

only intended for qualified personnel



**Before installing the hood, carefully read the chapter 'SAFETY INSTRUCTIONS AND WARNINGS'.**

## TECHNICAL FEATURES

The technical specifications are exhibited on the labels located inside the hood.

## POSITIONING

Do not install the hood outdoors and do not expose it to outdoor environment (rain, wind, etc.).

## ELECTRICAL CONNECTION

(only intended for qualified personnel)



**Disconnect the equipment from electrical mains power supply before carrying out any operations on the hood.**

**Ensure that the wires inside the hood are not disconnected or cut: in the event of damage, contact your nearest Servicing Department.**

**Refer to qualified personnel for electrical connections.**

**Connection must be carried out in compliance with the provisions of law in force.**

Before connecting the hood to the electrical mains power supply, check that:

- voltage supply corresponds with what is reported on the data plate located inside the hood;
- the electrical system is compliant and can withstand the load (see the technical specifications located inside the hood);
- the power supply plug and cable do not come into contact with temperatures exceeding 70 °C;
- the power supply system is effectively and properly connected to earth in compliance with regulations in force;
- the socket used to connect the hood is within reach.

In case of:

- devices fitted with cables without a plug: the type of plug to use is a "standardised" one. The wires must be connected as follows: yellow-green for earthing, blue for neutral and brown for the phase. The plug must be connected to an adequate safety socket.
- fixed equipment not provided with a power supply cable and plug, or any other device that ensures disconnection from the electrical mains, with an opening gap of the contacts that enables total disconnection in overvoltage category III conditions.

Said disconnection devices must be provided in the mains power supply in compliance with installation regulations.

The yellow/green earth cable must not be cut off by the switch.

The Manufacturer declines all responsibility for failure to comply with the safety regulations.

## FUMES DISCHARGE

### EXTERNAL EXHAUST HOOD (SUCTION)



In this version the fumes and vapours are discharged outside through the exhaust pipe.  
To this end, the hood outlet fitting must be connected via a pipe, to an external output.

The outlet pipe must have:

- a diameter not less than that of the hood fitting.
  - a slight slope downwards (drop) in the horizontal sections to prevent condensation from flowing back into the motor.
  - the minimum required number of bends.
  - the minimum required length to avoid vibrations and reduce the suction performance of the hood.
- You are required to insulate the pipes if it passes through cold environments.

*Deviation for Germany:*

*when the kitchen hood is used at the same time as appliances that are powered by energy other than electricity, the negative pressure in the room must not exceed 4 Pa (4 x 10<sup>-5</sup> bar).*

### HOOD WITH INTERNAL RECIRCULATION (FILTERING)



In this model, air passes through the carbon and zeolite filters (optional) to be purified and is then recycled into the environment.

Ensure that the zeolite filters are assembled into the hood, if not, install them as indicated in the assembly instructions.

## ASSEMBLY INSTRUCTIONS

only intended for qualified personnel



The hood can be installed in various configurations.  
The generic assembly steps apply to all installations; for each case, follow the specific steps provided for the required installation.

## OPERATION

### WHEN TO TURN ON THE HOOD?

Switch on the hood at least one minute before starting to cook to direct fumes and vapours towards the suction surface.

After cooking, leave the hood operating until complete extraction of all vapours and odours.

### WHICH SPEED IS TO BE SELECTED?

**speed (1):** maintains the circulation of clean air with low electricity consumption.

**speed (2):** normal conditions of use.

**speed (3):** presence of strong odours and vapours.

**speed (4):** rapid disposal of odours and vapours.


With a view to reducing environmental impact, it is suggested to always set the minimum speed suitable for the required suction level.

### WHEN SHOULD THE FILTERS BE WASHED OR REPLACED?

The metal filters must be cleaned every 30 hours of operation.

For further details see the "MAINTENANCE" chap.

## TOUCH PUSHBUTTON PANEL

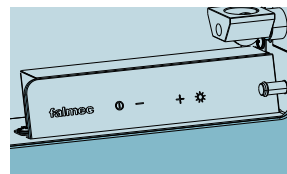

To access the push-button panel, the top panel must be opened: this activates the motor at speed 1.



	<b>Opening the panel:</b> The motor turns on at speed 1 <b>Panel closing:</b> the motor shuts down
①	<b>With open panel:</b> <b>ON/OFF:</b> Hood switch ON/OFF
+	<b>Speed increase from 1 to...4.</b> <b>Speed "4":</b> active only for a few minutes, then <b>speed 3</b> .
—	<b>Speed decrease from 4 to 1.</b>
☀	<b>Light on/off</b> <b>Short impulse:</b> turn light on and off <b>Long impulse:</b> adjust intensity



If the pushbutton panel is completely inactive, before contacting the Technical assistance service, disconnect power temporarily to the appliance (about 5"), possibly by acting on the main switch, to restore normal operation.

If this measure has no effect, contact the Technical assistance service.

## USING THE RADIO CONTROL (OPTIONAL)



### WARNINGS!

Place the hood away from sources of electromagnetic waves (e.g. microwave ovens), which could interfere with the radio control and with the hood electronics.

The maximum operating distance is 5 metres, that may vary according to the presence of electromagnetic interferences.

Radio control operated at 433.92MHz.

The radio control consists of two parts:

- the receiver built into the hood;
- the transmitter shown here in the figure.

	DESCRIPTION OF TRANSMITTING COMMANDS
	<b>UP</b> Motor switch-on and speed increase from 1 to 4. Speed 4 is only active for a few minutes.
	<b>DOWN</b> Speed decrease and motor switch-off.
	<b>Light on/off</b> <b>Short impulse:</b> turn light on and off <b>Long impulse:</b> adjust intensity
	<b>TIMER</b> (NO FUNCTION)
	<b>Command transmission active</b>

### ACTIVATION PROCEDURE

Before using the radio control, follow the procedure below on the **hood push-button panel**:

- Press — and ①: the decimal point of the display flashes.
- Release the two keys and press — the decimal point of the display is permanently lit.
- Release —: now the receiver is active.




This procedure is also used to deactivate the receiver.

## RADIO CONTROL CODE CHANGE

If there is electromagnetic interference or more than one radio control in the vicinity, a new code can be generated using the following procedure:

### 1) - CREATE A NEW CODE

The procedure is to be carried out on the radio control.

- Press LIGHT  and TIMER  simultaneously until the display starts flashing.
- Press DOWN  on the radio control: saving is confirmed by three brief flashes of the display. The new code cancels and replaces the previous default code.



### 2) - ASSOCIATION OF RADIO CONTROL TO THE HOOD VIA PUSHBUTTON PANEL


press **— on the hood pushbutton panel** for 2 seconds: the decimal point of the display flashes.

Press any button on the radio control within 5 seconds or follow the Falmec induction hob pairing instructions.

### RESTORING DEFAULT CODE

the procedure is to be carried out if the hood is disposed of, sold or transferred.

- Press UP  and DOWN  simultaneously on the radio control for more than 5 seconds: reset is confirmed by three brief flashes of the display.
- Proceed with associating the hood and the radio control, as described in point 2.

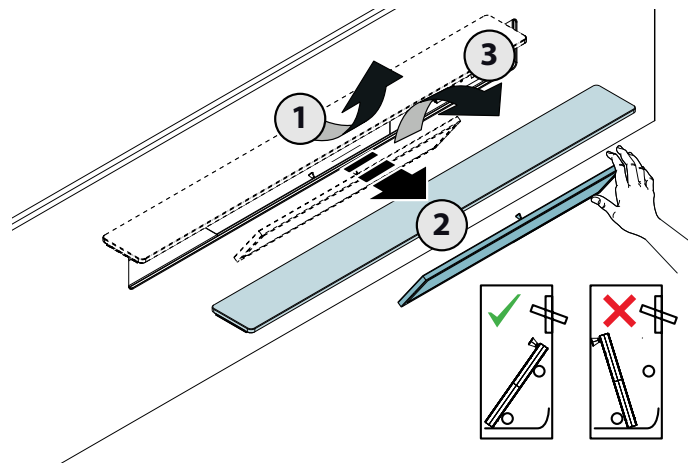

## LIGHTING

The range hood is equipped with high efficiency, low consumption LED lighting with extremely long duration under normal use conditions.

In case of failure, contact the Dealer or an authorised Servicing Department for repairs.

## DISPOSAL AFTER END OF USEFUL LIFE



The crossed-out trash or refuse bin symbol on the appliance means that **the product is WEEE**, i.e. "Waste electrical and electronic equipment", accordingly **it must not be disposed of with regular unsorted waste** (i.e. with "mixed household waste"), but it must be disposed of separately so that it can undergo specific processing for its re-use, or a specific treatment, to remove and safely dispose of any substances that may be harmful to the environment and remove the raw materials that can be recycled. Proper disposal of these products contributes to saving valuable resources and avoid potential negative effects on personal health and the environment, which may be caused by inappropriate disposal of waste.

You are kindly asked to contact your local authorities for further information regarding the designated waste collection points nearest to you. Penalties for improper disposal of such waste can be applied in compliance with national regulations.

### INFORMATION ON DISPOSAL IN EUROPEAN UNION COUNTRIES

The EU WEEE Directive was implemented differently in each country, accordingly, if you wish to dispose of this appliance we suggest contacting your local authorities or dealer to find out what the correct method of disposal is.

### INFORMATION ON DISPOSAL IN NON-EUROPEAN UNION COUNTRIES

The crossed-out trash or refuse bin symbol is only valid in the European Union: if you wish to dispose of this appliance in other countries, we suggest contacting your local authorities or dealer to find out what the correct method of disposal is.



### WARNING!

The Manufacturer reserves the right to make changes to the equipment at any time and without prior notice. Printing, translation and reproduction, even partial, of this manual are bound by the Manufacturer's authorisation.

Technical information, graphic representations and specifications in this manual are for information purposes and cannot be divulged.

This manual is written in Italian. The Manufacturer is not responsible for any transcription or translation errors.

## MAINTENANCE



**Before cleaning or carrying out maintenance operations, disconnect the equipment by removing the plug or switching off the main switch.**

**Do not use detergents containing abrasive, acidic or corrosive substances or abrasive cloths.**

Regular maintenance guarantees proper operation and performance over time. Special attention is to be paid to the **metal anti-grease filters**: frequent cleaning of the filters and their supports ensures that no flammable grease is accumulated.

### CLEANING OF EXTERNAL SURFACES

You are advised to clean the external surfaces of the hood **at least once every 15 days** to prevent oily substances and grease from sticking to them.

The glass panels can only be cleaned with specific, non-corrosive or non-abrasive detergents using a soft cloth.

The Manufacturer declines all responsibility for failure to comply with these instructions.

Alternatively **and for all the other types of surfaces**, it can be cleaned using a damp cloth, slightly moistened with mild, liquid detergent or denatured alcohol. Complete cleaning by rinsing well and drying with soft cloths.



**Do not use too much moisture or water around the push button control panel and lighting devices in order to prevent humidity from reaching electronic parts.**

### CLEANING OF INTERNAL SURFACES



**Do not clean electrical parts, or parts related to the motor inside the hood, with liquids or solvents.**

For the internal metal parts, see the previous paragraph.

### METAL ANTI-GREASE FILTERS

It is advised to **frequently** wash the metal filters (**at least once a month**) leaving them to soak in boiling water and cleaning solution for 1 hour, taking care not to bend them.

Do not use corrosive, acid or alkaline detergents.

Rinse them well and wait for them to be completely dry before reassembling them.

Washing in a dishwasher is permitted, however, it may cause the filter material to darken: to reduce this, use washes at low temperatures (60°C max.) **without detergent**.

To extract and insert the metal anti-grease filters see the assembly instructions.

**Falmec S.p.A**

**via dell'Artigianato, 42 z.i.  
31029 Vittorio Veneto  
Treviso — Italy  
info@falmec.com  
falmec.com**

**Codice / Code  
Matricola / Serial Number**

┌

┐

└

┘