



GRAND KATANA 18 TOTAL DESTROY W
GRAND KATANA 18 TOTAL DESTROY B

Batidora de vaso/Jug blender



Manual de instrucciones
Instruction manual
Manuel d'instructions
Bedienungsanleitung
Manuale di istruzioni
Manual de instruções
Instrukcja obsługi
Návod k použití

1. PARTS AND COMPONENTS

Fig. 1.

1. Main body
2. Knob
3. Blade holder
4. Total Destroy blade
5. Glass blending jar
6. Lid
7. Liquid pouring top
8. Measuring cup

Fig. 2

9. Opening
10. Close

2. BEFORE USE

- This appliance is packaged in a way as to protect it during transport. Take the appliance out of its box and remove all packaging materials. You can keep the original box and other packaging elements in a safe place. This will help you prevent product damage when transporting it in the future. In case the original packaging is disposed of, make sure all packaging materials are recycled accordingly.
- Make sure all parts and components are included and in good conditions. If there is any piece missing or in bad conditions, contact the official Cecotec Technical Support Service immediately.
- Wash and dry the blender and all parts that come into contact with food carefully before use. Then, place the blender on an even, firm, and dry surface.

3. OPERATION

1. Plug the device into a power supply.
2. Turn the selector to the left (counterclockwise) to select PULSE mode.
3. Turn the selector to the right (clockwise) to select the desired speed setting: 1-5.

4. CLEANING AND MAINTENANCE

Cleaning

- To clean the blades properly, first rinse the jug with water. Fill the jug with 400 ml of lukewarm water and add some detergent soap. Close the jug with the lid and run the machine in PULSE mode for 2 seconds at a time. Repeat the process as many times as necessary.
- To finish cleaning the blender, turn the power knob to the "0" position, turn the switch off and unplug the appliance after each use and before cleaning.
- Use water to clean the jug. Do not use chemical or harsh abrasive cleaning agents.
- Never submerge the motor base or the blade holder in water.
- Use a dry, soft cloth to clean the motor base. Do not clean this part with a wet cloth.

Maintenance

If the product does not operate normally, produces uncommon noises or shakes more than it normally does, stop using the product and contact the Technical Support Service of Cecotec for reparation. Do not carry out maintenance tasks yourself.

Storage

- After cleaning the device, make sure it is thoroughly dried before storing it.
- After using the product, store it in a dry, safe place.
- Avoid direct exposure to sunlight
- Make sure it is stored in a place out of the reach of children.

5. TECHNICAL SPECIFICATIONS

Product: Grand Katana 18 Total Destroy W/Grand Katana 18 Total Destroy B

Product reference: 03983/03984

Nominal voltage: 220 - 240 V

Rated frequency: 50/60 Hz

Rated power: 1800 W

1.8-L capacity jug

Technical specifications may change without prior notification to improve product quality.

Made in China | Designed in Spain

6. DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC APPLIANCES



This symbol indicates that, according to the applicable regulations, the product and/or batteries must be disposed of separately from household

waste. When this product reaches the end of its shelf life, you should dispose of the batteries/accumulators and take them to a collection point designated by the local authorities. Consumers must contact their local authorities or retailer for information concerning the correct disposal of old appliances and/or their batteries. Compliance with the above guidelines will help protecting the environment.

7. TECHNICAL SUPPORT AND WARRANTY

Cecotec shall be liable to the end user or consumer for any lack of conformity that exists at the time of delivery of the product under the terms, conditions, and deadlines established by the applicable regulations.

It is recommended that repairs be carried out by qualified personnel.

If at any moment you detect any problem with your product or have any doubt, do not hesitate to contact the official Cecotec Technical Support Service at +34 963 210 728.

8. COPYRIGHT

The intellectual property rights over the texts in this manual belong to CECOTEC INNOVACIONES, S.L. All rights reserved. The contents of this publication may not, in whole or in part, be reproduced, stored in a retrieval system, transmitted, or distributed by any means (electronic, mechanical, photocopying, recording or similar) without the prior authorization of CECOTEC INNOVACIONES, S.L.

1. PIÈCES ET COMPOSANTS

Img. 1.

1. Unité principale
2. Sélecteur
3. Porte-lames
4. Lame Total Destroy
5. Bol en verre
6. Couvercle
7. Bec verseur
8. Bouchon doseur

Img. 2

9. Ouverture
10. Fermeture

2. AVANT UTILISATION

- Cet appareil possède un emballage conçu pour le protéger pendant son transport. Sortez l'appareil de sa boîte et retirez tout le matériel qui compose l'emballage. Rangez la boîte d'origine et le reste des éléments provenant de l'emballage dans un endroit sûr pour éviter d'endommager l'appareil si vous devez le transporter à l'avenir. Si vous devez vous défaire de l'emballage d'origine, assurez-vous de recycler tous les éléments correctement.
- Assurez-vous que toutes les pièces et les composants sont inclus et en bon état. S'il manque une pièce, une partie, un accessoire ou que l'appareil ou ses accessoires ne sont pas en bon état, veuillez contacter le Service Après-Vente officiel de Cecotec.
- Lavez et séchez soigneusement le mixeur-blender et toutes les parties qui entrent en contact avec les aliments avant de l'utiliser. Placez le mixeur-blender sur une surface plate et sèche.

3. FONCTIONNEMENT

1. Branchez l'appareil sur une prise de courant.
2. Tournez le sélecteur vers la gauche (dans le sens inverse des aiguilles d'une montre) pour sélectionner le mode PULSE.
3. Tournez le sélecteur vers la droite (dans le sens des aiguilles d'une montre) pour sélectionner le réglage de vitesse souhaité : 1-5.

www.cecotec.es

Cecotec Innovaciones S. L.
C/de la Pinadeta s/n, 46930
Quart de Poblet, Valencia, Spain

EA01230105