



INSTRUCCIONES DE USO
INSTRUÇÕES DE UTILIZAÇÃO • INTRUCTIONS OF USE
INSTRUCTIONS D'USAGE • ISTRUZIONI PER L'USO

GRILL DE ASAR DOBLE
CONTACT GRILL
GRILL DUPLO PARA ASSAR
GRILL DOUBLE
GRILL PER BARBECUE DOPPIO

Mod. GR266

ESPAÑA: Electrodomésticos JATA, S.A.
Zubibitarte, 8 • 48220 • ABADIANO - Vizcaya
Tel. 902 100 110 • Fax 902 100 111

www.jata.es

PORTUGAL
Avenida Engenheiro Duarte Pacheco, Torre 2-3, Sala 3
1070-102 Lisboa
Tel. 213 876 355 • Fax 213 867 398

www.jata.pt



COMPONENTES PRINCIPALES

1. Asa.
2. Indicador luminoso "Encendido".
3. Indicador luminoso "Preparado."
4. Bandeja recoge salsas/grasas.

PRINCIPAIS COMPONENTES

1. Pega.
2. Luz piloto "Aceso".
3. Luz piloto "Preparado."
4. Bandeja para recolha de molhos/gorduras.

MAIN COMPONENTS

1. Handle.
2. "On" pilot light.
3. "Ready" pilot light.
4. Juice/sauce collector tray.

PRINCIPAUX COMPOSANTS

1. Anse.
2. Indicateur lumineux "Allumé".
3. Indicateur lumineux "Prêt."
4. Plateau recueil-sauces/graisses.


COMPONENTI PRINCIPALI

1. Manico.
2. Indicatore luminoso "In Funzione".
3. Indicatore luminoso "Pronto per l'uso".
4. Vassoio raccogliore grassi.

DATOS TÉCNICOS • DADOS TECNICOS • TECHNICAL DATA

MOD. GR266	230V.~	50 Hz.	1.000 W.
------------	--------	--------	----------

Los textos, fotos, colores, figuras y datos corresponden al nivel técnico del momento en que se han impreso. Nos reservamos el derecho a modificaciones, motivadas por el desarrollo permanente de la técnica en nuestros productos.

- Keep all plastic bags and packaging components out of the reach of children. They are potentially dangerous.
- Do not connect to the mains without checking that the voltage on the rating plate and that of your household are the same.
- Make sure the plug has an adequate earth base.
- () **ATTENTION: Hot surface.**
- Do not leave unattended while in use.
- Take care the cable does not touch any hot parts.
- Don't allow children play with the appliance. Keep the appliance out of the reach of children.
- Keep the appliance and the cable cord out of the reach of children less than 8 years old.
- Always place on a heat resistance surface.
- Keep out of curtains or other flammable materials.
- This appliance has been designed for domestic use only.
- **VERY IMPORTANT: Do not immerse the appliance in water or any other liquid.**
- This appliance is not intended for using with an external timer or a separate system of remote control.
- To unplug, pull from the plug, never from the cable.
- It must not be used outdoors.
- The cleaning and maintenance done by users, can not be done by children without any supervision, unless they are over 8 years and they are under supervision.
- If the cable were to deteriorate it must be changed by an Authorised Service Centre.

INTRUCTIONS OF USE

- Before using for the first time, clean the plates with a damp cloth. Next, dry them carefully and spread a little oil with a cloth or kitchen roll.
- Before each use pour some oil on the plates.
- Place the appliance on a flat and heat resistance surface.
- The tray (4) must be in place, otherwise, the juices and fat resulting from the cooking will spill onto the surface. Place the tray in the back side of the appliance.
- You can use the grill totally open. To open it, use the handle and turn the upper plate so it remains totally horizontal. While doing this, try that the tray (4) is correctly placed between the two plates to avoid juices or fats spilling on the table.
- To broil food for example pizzas, leave the upper plate separate from the lower plate. To leave separated the upper plate, with the unit in horizontal position, lift up the plate and turn it towards.
- Plug the appliance to the mains. The pilot lights "Encendido" (2) and "Preparado" (3) will go on.
- After a few minutes the pilot light "Preparado" (3) will switch off, indicating that the plates have reached the adequate temperature.
- Lift up the upper grill using the handle (1) and place the food over the lower plate. Close again the plate.
- If the grill is open in horizontal position place the food directly on the plates.
- During the cooking time the on pilot light (2) will be on, meanwhile the "ready" pilot light (3) will be off and on intermittently indicating that the appliance switches on and off to maintain the temperature of the plates.
- Always use wooden utensils to move or turn the food over. The use of forks or other metal utensils may scratch the surface.

MAINTENANCE AND CLEANING

- Before you proceed to cleaning, make sure the appliance is unplugged from the mains.
- Do not wait for the plates to cool completely to clean them. It is easier to clean when the plates are warm. It is enough to use a dampened cloth and if there were some difficult residues it may be cleaned with a little oil.
- Do not use abrasive or chemical products, metallic scourers, and such may deteriorate the protection.
- The tray (4) may be cleaned with water and detergent suitable for the dishwasher.

ENVIRONMENT PROTECTION

- Dispose the appliance according to the local garbage regulations.
- Never throw it away to the rubbish. So you will help to the improvement of the environment.

