



## **INSTRUCCIONES DE USO**

**INSTRUÇÕES DE UTILIZAÇÃO • INSTRUCTIONS OF USE**

**INSTRUCTIONS D'USAGE • ISTRUZIONI PER L'USO**

**BEDIENUNGSANLEITUNG • NÁVOD K POUŽITÍ**

**EXPRIMIDOR**

**ESPREMEDOR**

**CITRUS JUICER**

**PRESSE FRUIT**

**SPREMIA GRUMI**

**SAFTPRESSE**

**CITRUS PRESS**

**Mod. EX296**

**Electrodomésticos JATA, S.A.**

**ESPAÑA**

Zubibitarte, 8 • 48220 ABADIANO - Bizkaia

Tel. 902 100 110 / 94 621 55 40 • Fax 902 100 111 / 94 681 44 44

[www.jata.es](http://www.jata.es)


**PORTUGAL**

Avenida Engenheiro Duarte Pacheco, Torre 2-3, Sala 3

1070-102 Lisboa

Tel. 213 876 355 • Fax 213 867 398

[www.jata.pt](http://www.jata.pt)

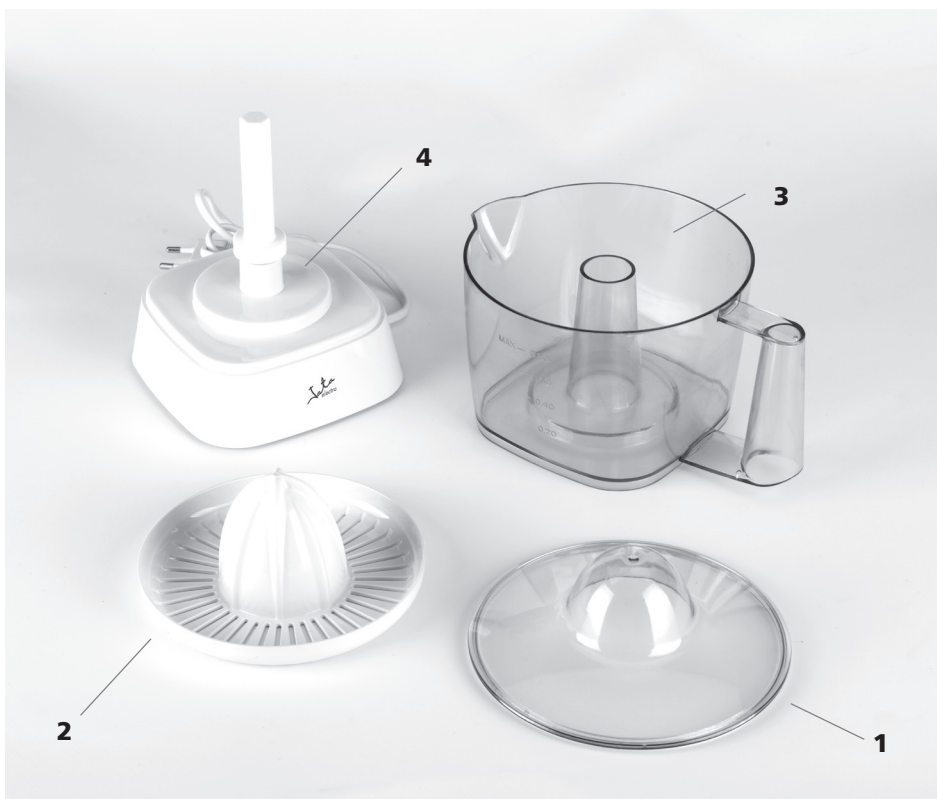

#### DATOS TÉCNICOS • DADOS TECNICOS • TECHNICAL DATA

Mod. EX296	220-240 V~	50 Hz	40 W
------------	------------	-------	------

Los textos, fotos, colores, figuras y datos corresponden al nivel técnico del momento en que se han impreso. Nos reservamos el derecho a modificaciones, motivadas por el desarrollo permanente de la técnica en nuestros productos.

## COMPONENTES PRINCIPALES

1. Tapa.
2. Cono exprimidor con filtro.
3. Depósito.
4. Cuerpo principal.

## PRINCIPAIS COMPONENTES

1. Tampa.
2. Cone espremedor cón filtro.
3. Depósito.
4. Corpo principal.

## MAIN COMPONENTS

1. Lid.
2. Juicer cone with filter.
3. Tank.
4. Main body.

## PRINCIPAUX COMPOSANTS

1. Couvercle.
2. Extracteur à jus avec filtre.
3. Réservoir.
4. Corps principaux.

## COMPONENTI PRINCIPALI

1. Coperchio.
2. Cono di spremitura con filtro.
3. Contenitore.
4. Corpo principale.

## HAUPTBESTANDTEILE

1. Deckel
2. Presskegel mit Filter
3. Behälter
4. Gerätekörper

## POPIS

1. Víko
2. Odšťavňovací trn se sítkem
3. Nádobá
4. Základna přístroje

**ATTENTION**

- Carefully read these instructions before using your appliance for the first time and keep it for future enquires.
- This appliance can be used by children at the age of 8 or more and people with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given an appropriate supervision or instruction concerning the safety use of the appliances and understand the dangers involved.
- Keep all plastic bags and packaging materials out of the reach of children. They are potentially dangerous.
- Do not connect the appliance to the mains without checking that the voltage on the rating plate and that of your household are the same.
- Keep unplugged while not in use, or during its assembly, disassembly or cleaning.
- **VERY IMPORTANT: you must never immerse nor the main body of the appliance nor the cable in water or other liquids.**
- Avoid in contact with the moving parts.
- This appliance has been designed for domestic use only. Do not use uninterruptedly for more than 5 minutes.
- Don't allow children play with the appliance. Keep the appliance out of the reach of children.
- Keep the appliance and the cable cord out of the reach of children less than 8 years old.
- The cleaning and maintenance done by users, can not be done by children without any supervision, unless they are over 8 years and they are under supervision.
- Do not use on hot surfaces.

- If the cable were to deteriorate it must be changed by an Authorised Service Centre.

#### **INSTRUCTIONS OF USE**

- Before using, remove and clean the parts that are going to be in contact with the food.
- Place the citrus juicer on a flat surface and assemble the tank (3) and the cone (2) on the main body.
- Plug the appliance into the mains and cut the fruit in two halves.
- Press the fruit onto the cone and the juicing machine will begin to function automatically. The cone will change the rotation in the successive times that the fruit is pressed to obtain more juice.
- Once you have obtained the juice, remove the cone and take out the tank to serve.

#### **MAINTENANCE AND CLEANING**

- Before you proceed to cleaning it, ensure the citrus juicer is unplugged from the mains.
- The main body of the appliance must never be immersed in water. Clean it with a slightly damp cloth.
- The rest of the components which can be removed may be cleaned with soap and water, taking care to rinse carefully afterwards. Never clean in the dishwasher. Try to clean it immediately after its use, as the dry pulp of the fruit is very difficult to remove.
- Do not use chemical or abrasive products, such as metallic scourers, which may deteriorate the surfaces of the appliance.

#### **ENVIRONMENT PROTECTION**

- Dispose the appliance according to the local garbage regulations.
- Never throw it away to the rubbish. So you will help to the improvement of the environment.

