




INSTRUCCIONES DE USO

INSTRUÇÕES DE UTILIZAÇÃO • INSTRUCTIONS OF USE

INSTRUCTIONS D'USAGE • ISTRUZIONI PER L'USO

BEDIENUNGSANLEITUNG

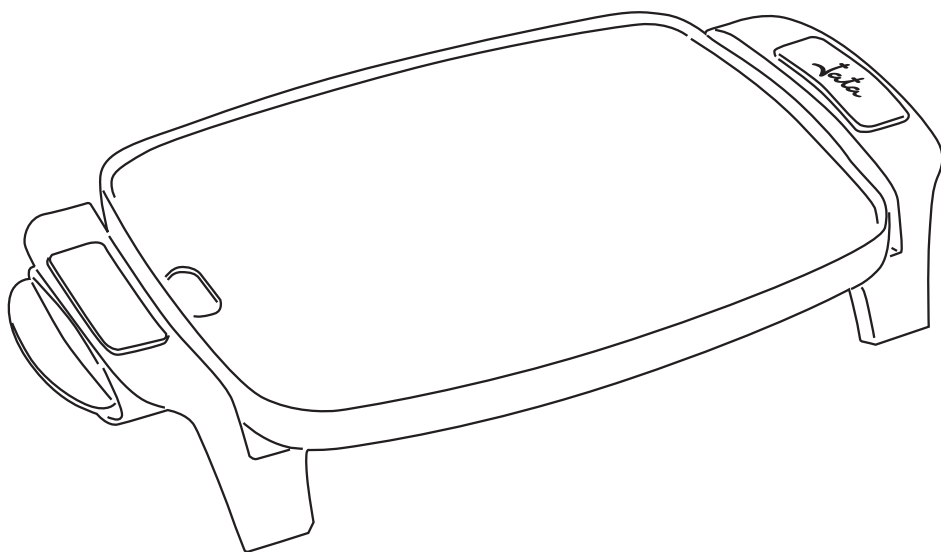


GR205

PLANCHA DE ASAR ELÉCTRICA

GRELHADOR ELÉCTRICO • ELECTRIC GRILL

PLANCHE A GRILLER ÉLECTRIQUE • GRILL ELETTRICO

ELEKTRISCHE GRILLPLATTE

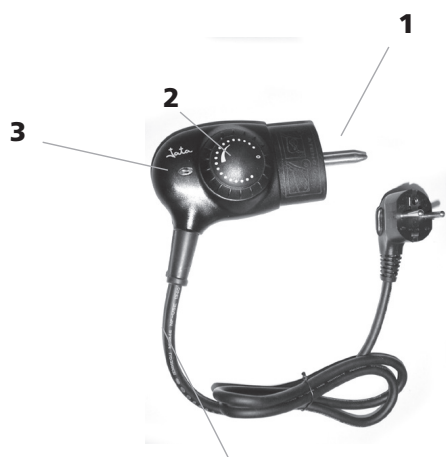

COMPONENTES PRINCIPALES

1. Conector.
2. Selector de temperatura.
3. Indicador luminoso.
4. Base conector.
5. Plancha.
6. Bandeja recoge salsas/grasas.

MAIN COMPONENTS

1. Connector.
2. Temperature selector.
3. Indicator light.
4. Connector base.
5. Grill.
6. Juice/sauce collector tray.

COMPONENTI PRINCIPALI

1. Connettore.
2. Selettore temperatura.
3. Indicatore luminoso.
4. Base del connettore.
5. Superficie.
6. Vassoio raccogliore grassi.

PRINCIPAIS COMPONENTES

1. Dispositivo de ligação.
2. Selector de temperatura.
3. Luz piloto.
4. Base de ligação.
5. Chapa.
6. Bandeja para recolha de molhos/gorduras.

PRINCIPAUX COMPOSANTS

1. Connecteur.
2. Sélecteur de température.
3. Indicateur lumineux.
4. Base connecteur.
5. Plaque.
6. Plateau recueil sauces/graisses.

HAUPTBESTANDTEILE

1. Stecker
2. Temperaturwahlschalter
3. Leuchtanzeige
4. Steckerbasis
5. Grillfläche
6. Saucen- / Fettauffangwanne.


DATOS TÉCNICOS • DADOS TECNICOS • TECHNICAL DATA

202209

Mod. GR205	230V~	50 - 60 Hz	1.000 W
-------------------	--------------	-------------------	----------------

Los textos, fotos, colores, figuras y datos corresponden al nivel técnico del momento en que se han impreso. Nos reservamos el derecho a modificaciones, motivadas por el desarrollo permanente de la técnica en nuestros productos.

ATTENTION

- Carefully read these instructions before using your appliance for the first time and keep it for future enquires.
- This appliance can be used by children at the age of 8 or more and people with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given an appropriate supervision or instruction concerning the safety use of the appliances and understand the dangers involved.
- Keep all plastic bags and packaging components out of the reach of children. They are potentially dangerous.
- Do not connect to the mains without checking that the voltage on the rating plate and that of your household are the same.
- Make sure the plug has an adequate earth base.
- Do not leave unattended while in use.
-  **ATTENTION: Hot surface.**
- Take care the cable does not touch any hot parts.
- Don't allow children play with the appliance. Keep the appliance out of the reach of children.
- Keep the appliance and the cable cord out of the reach of children less than 8 years old.
- Always place on a heat resistance surface.
- Keep out of curtains or other flammable materials.
- This appliance has been designed for domestic use only.
- Always use with the connector provided. Do not use any other type of connector.
- Only plug the connector in if it is connected to the grill.
- **VERY IMPORTANT: Do not immerse the connector with the cable in water or any other liquid.**
- This appliance is not intended for using with an external timer or a separate system of remote control.
- To unplug, pull from the plug, never from the cable.

- It must not be used outdoors.
- The cleaning and maintenance done by users, can not be done by children without any supervision, unless they are over 8 years and they are under supervision.
- If the power cord is damaged, it must be replaced by the manufacturer or by its after-sales service or similar qualified personnel in order to avoid any danger.

INSTRUCTIONS OF USE

- Before using for the first time, clean the grill with a damp cloth. Next, dry carefully and spread a little oil with a cloth or kitchen roll.
- Before each use pour some oil on the grill.
- Place the appliance on a flat and heat resistance surface.
- The tray (6) must be in place, otherwise, the juices and fat resulting from the cooking will spill onto the surface.
- Insert the connector (1) into the base (4), bearing in mind that the temperature selector (2) is in the top position.
- Turn the temperature selector (2) to the desired position, according to the type of food you are going to prepare using as a reference the selected temperature of the pilot light position (3). Firstly it is advisable to put the selector to its highest position, to let the grill reach, as soon as possible, a good temperature. After that you can, if you consider it convenient, change the selector position.
- Plug into the mains. The pilot light (3) will go on. When the pilot light goes off the grill will have reached the selected temperature.
- Place the food on the grill (5).
- Always use wooden utensils to move or turn the food over. The use of forks or other metal utensils may scratch the surface.

MAINTENANCE AND CLEANING

- Before you proceed to cleaning, unplug the appliance from the mains and remove the connector from its base.
- Do not wait for the grill to cool completely. The cleaning of the surface will be easier if it is still warm. It is enough to use a slightly dampened cloth and if there were some difficult residues they may be cleaned with a cloth dampened in a little oil.
- It may be cleaned with soap and water, taking care to rinse carefully afterwards.

Important: If you have immersed it in water or rinsed with abundant water you must dry the base of the connector (4) and the pins before using it again.

- Do not use abrasive or chemical products, metallic scourers, and such may deteriorate the protection.
- The tray (6) may be cleaned with water and detergent suitable for the dishwasher.
- The connector must always be cleaned with a dry cloth and must never be immersed in water.

ENVIRONMENT PROTECTION

- Dispose the appliance according to the local garbage regulations.
- Never throw it away to the rubbish. So you will help to the improvement of the environment.





ESPAÑA

Polígono La Serna, calle D, s/n
31500 TUDELA - Navarra
Tel. 94 621 55 40

PORTUGAL

Avenida Engenheiro Duarte Pacheco, Torre 2-3, Sala 3
1070-102 Lisboa
Tel. 213 876 355 • Fax 213 867 398

www.jata.es

