


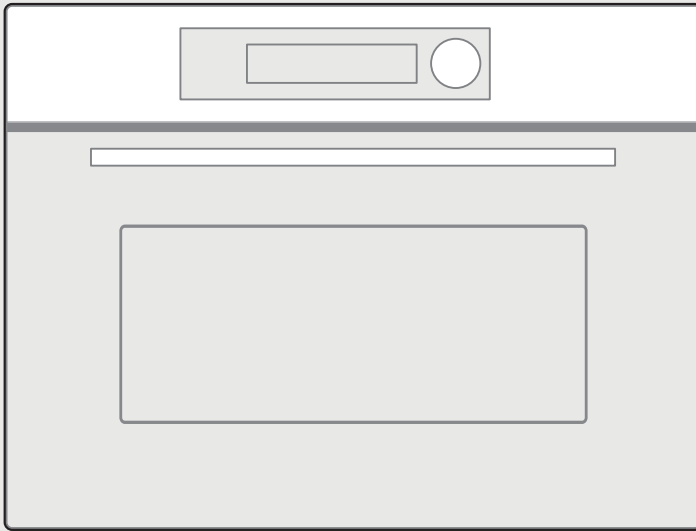

**BUILT-IN OVEN  
WITH HOT AIR AND MICROWAVE**

# USER MANUAL

MCOTV950E4MO-BK



SmartHome



Download the app  
& activate product

Read these instructions carefully before using your microwave oven , and keep it carefully.  
If you follow the instructions, your oven will provide you with many years of good service.  
SAVE THESE INSTRUCTIONS CAREFULLY

# PRODUCT INSTALLATION


## Fitted Units

- This appliance is only intended to be fully fitted in a kitchen.
- This appliance is not designed to be used as a tabletop appliance or inside a cupboard.
- The fitted cupboard must not have a back wall behind the appliance.
- A gap of at least 45 mm must be maintained between the wall and the base or back panel of the unit above.
- The fitted cupboard must have a ventilation opening of 250 cm<sup>2</sup> on the front. To achieve this, cut back the base panel or fit a ventilation grille.
- Ventilation slots and intakes must not be covered.
- The safe operation of this appliance can only be guaranteed if it has been installed in accordance with these installation instructions.
- The fitter is liable for any damage resulting from incorrect installation.
- The units into which the appliance is fitted must be heat-resistant up to 90°C.
- Installation height not less than 850mm.
- Don't use under the work surface and that it must not be subject to spillage from containers onto surfaces under which the appliance is installed.

EN

## Installation Dimensions

Ventilation openings  
behind, min. 250 cm<sup>2</sup>

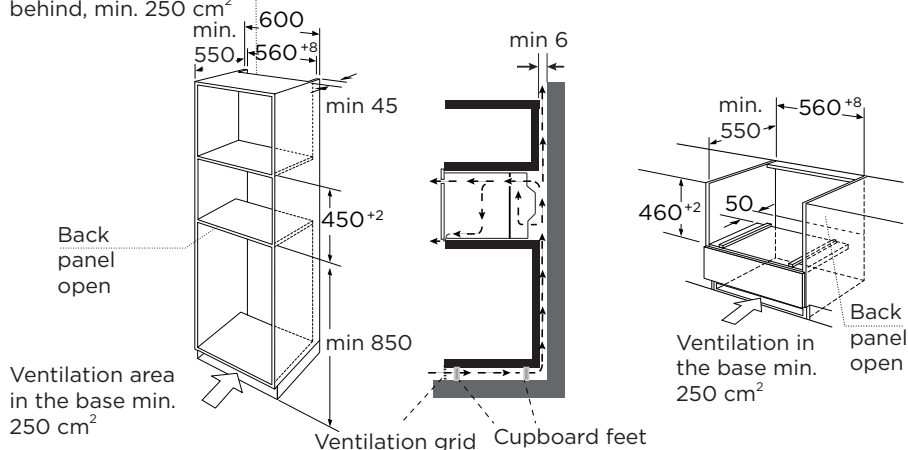


### NOTE

There should be gap above the oven.

## Building In

- Do not hold or carry the appliance by the door handle. The door handle cannot hold the weight of the appliance and may break off.
1. Carefully push the oven into the box, making sure that it is in the centre.
  2. Open the door and fasten the oven with the screws that were supplied.

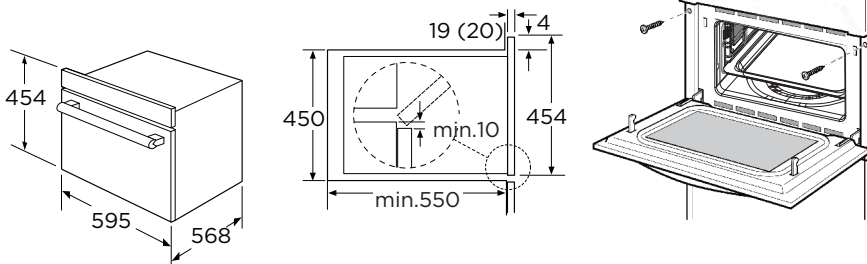

\*20 mm for metal fascias

## EN

- Fully insert the appliance and centre it.
- Do not kink the connecting cable.
- Screw the appliance into place.
- The gap between the worktop and the appliance must not be closed by additional battens.

## Important Information

1. The appliance is designed to be permanently installed with a three-pin power cord and may only be connected by a licensed expert in accordance with the connection diagram.
2. Only a qualified electrician who takes the relevant regulations into account may replace the power cord.
3. Do not use multiple plugs, power strips or extensions. Overloading causes a risk of fire.
4. If the connection is no longer accessible following installation, an all-pin isolating switch with a contact gap of at least 3 mm must be provided.

## Connect The Wires Of The Mains Power Cord In Accordance With The Following Colour Coding:

Green and yellow

Blue

Brown

Earth wire (⏏) (E) Neutral

Neutral wire (N)

Live (L)

## Great Britain And Australia:

Do not connect the appliance using a 13 A plug or protect it with a 13 A fuse. The appliance must be protected using a fuse that is rated 16 A or higher. The appliance must be disconnected from the power supply during all installation work. When the appliance is installed, protection must be provided against accidental contact in the future.

## Cooling fan

Your appliance has a cooling fan. The cooling fan switches on during operation. The hot air escapes above the door.

The cooling fan continues to run for a certain time after operation.

### CAUTION

Do not cover the ventilation slots. Otherwise, the appliance will overheat.

### NOTE

- The appliance remains cool during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.


EN

## Accessories

### NOTE

Type and quantity of accessories is subject to actual demand.

### Grill rack

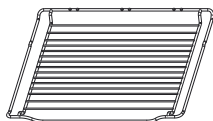


- For grilling, e.g. steaks, sausages and for toasting bread.

### Baking tray


- For safety reasons, the baking tray should be placed on the side hanger instead of being placed directly on the bottom board of the cavity.

### Baking tray-Enamel tray

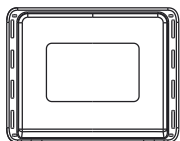

- For making cake roll, roasting whole chickens.
- When cooking with microwave function, the use of enamel tray is prohibited.



### Small grill rack

 






- Cook smaller portions of food

**Baking tray-Glass tray**

- When cooking with microwave function, please use the glass tray.
- Used for catching liquids, such as water and grease when food is baked.
- In order to ensure the best cooking effect, the glass tray should be placed in the bottom of the side hanger, as shown in the figures below, the glass tray should be pushed along the lowest guide rails of the side hanger in place.

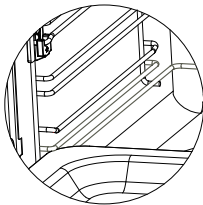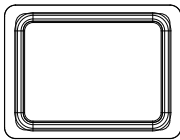

EN

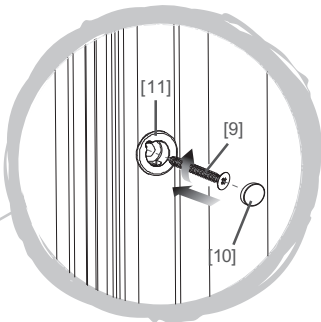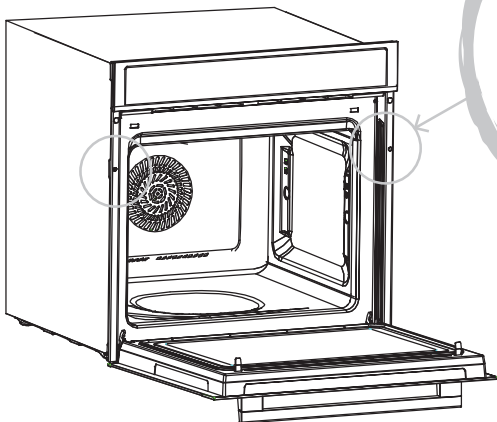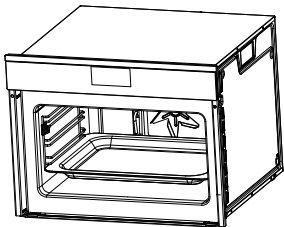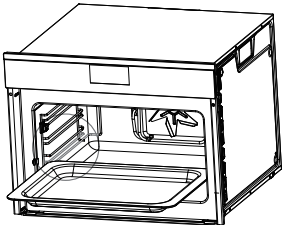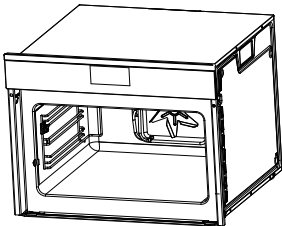

Once the oven has been lifted into place inside the appliance housing, locate the two holes in the casing of the oven and x it into place using [08], [09] and [10].

**⚠ CAUTION**

Do not over tighten the screws [08] to avoid damage to the oven or appliance housing - use a screwdriver only!




**Installation of the ceramic clips and side rails**



[03] x 2




[04] x 2

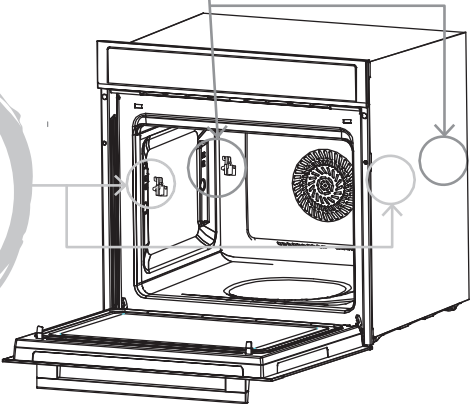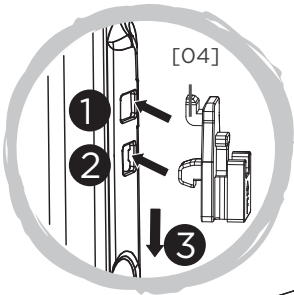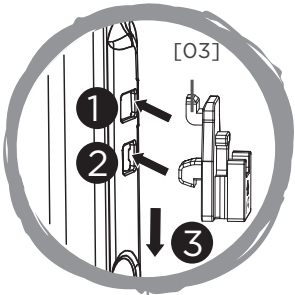


EN


 
Left side rail installation [05]




[05] x 1

 


[06] x 1

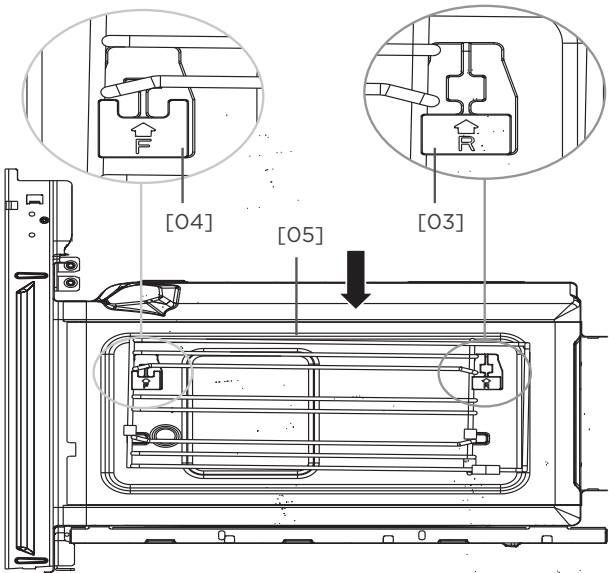
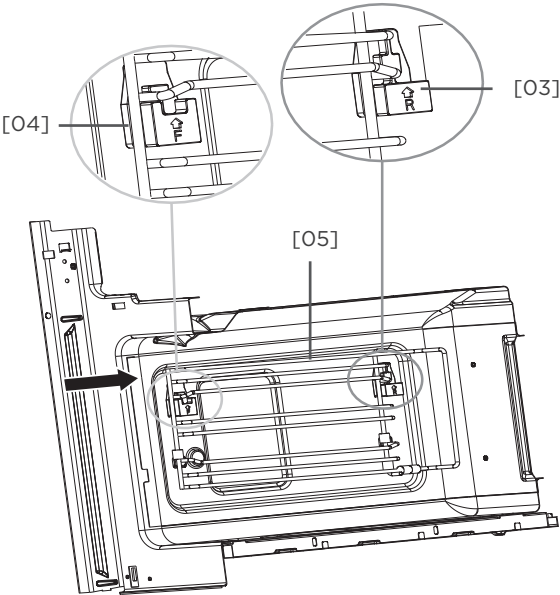


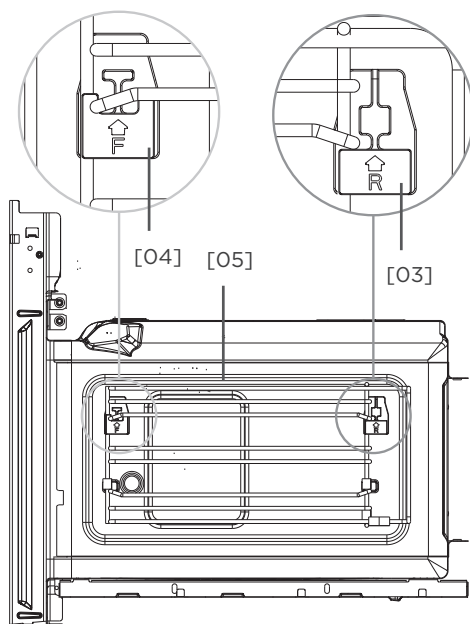

EN

# **Right side rail installation [06]**

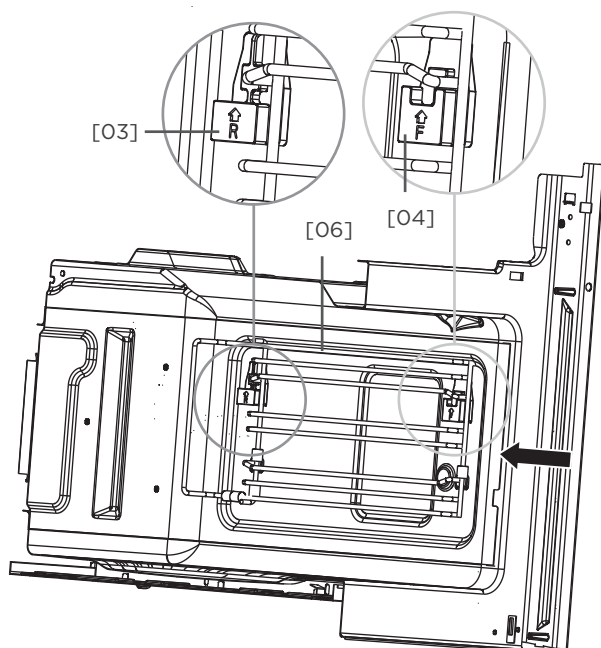

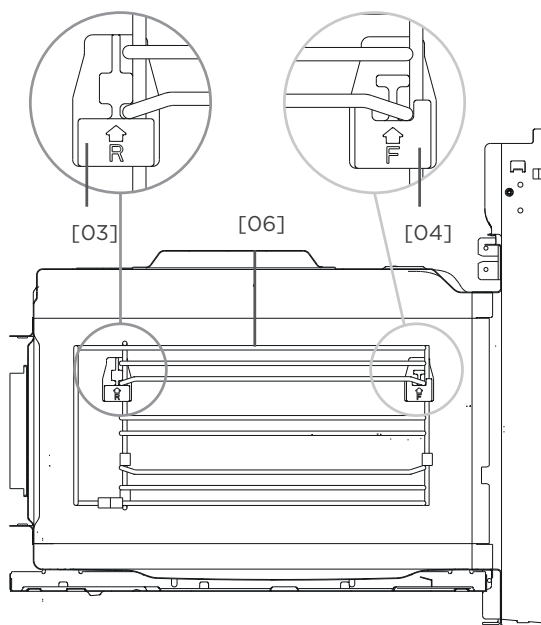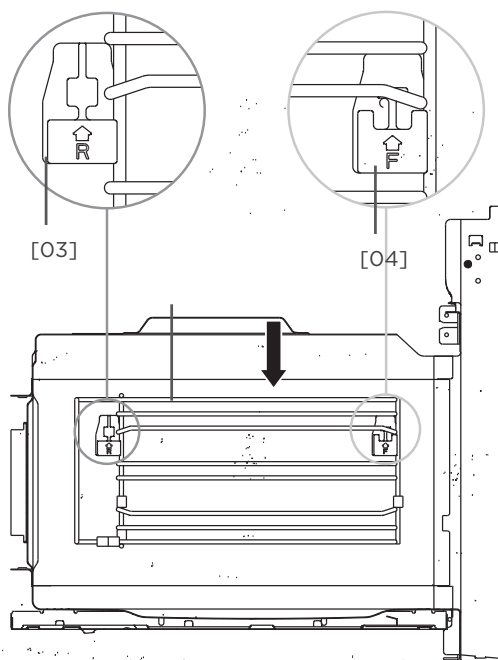



*make yourself at home*



[www.midea.com](http://www.midea.com)

© Midea 2025 all rights reserved