



Hand Blender Set

User Manual



HBA 81762 BX

EN / FR / IT / PL / SL / CS / SRB / SQ / MK / RO / AR



01M-8910803200/8911353200-1121-01

CONTENTS

ENGLISH	03-17
FRANÇAIS	18-32
ITALIANO	33-49
POLSKI	50-66
SLOVENŠČINA	67-81
CZECH	82-96
СРБИН	97-111
SHQIPTARE	112-126
МАКЕДОНСКИ	127-146
ROMÂNĂ	147-163
ARABIC	164-179

Please read this guide first!

Dear Customer,

Thank you for choosing a BEKO product. We would like you to achieve the optimal efficiency from this high quality product which has been manufactured with state of the art technology. Please make sure you read and understand this guide and supplementary documentation fully before use and keep it as a reference. Include this guide with the unit if you hand it over to someone else. Observe all warnings and information herein and follow the instructions.

Symbols and their meanings

These symbols are used throughout this guide:



Important information and recommendations regarding the use of the appliance.



WARNING: Warnings on personal injury or property damage.



Do not dip into water.



Electric shock protection rating



This product has been manufactured at modern facilities respectful to the environment without harming nature.

1 Important safety and environmental instructions

This section contains safety instructions to prevent hazards that can result in injury or property damage. Any warranty is void if these instructions are not followed.

1.1 General safety

- This appliance complies with international safety standards.
- Appliance may be used by persons with limited physical, perceptual or mental abilities or persons with a lack of experience and knowledge if they are supervised or given instructions on the operation of the appliance and any relevant risks they may be encountered. Children should not tamper with the device.
- This appliance cannot be used by children.
- Store the appliance and its electrical cord out of the reach of children.
- Do not use the appliance if the power cord, the appliance or the appliance blade is damaged. Contact authorized service.

1 Important safety and environmental instructions

- Use only original parts or parts recommended by the manufacturer.
- Do not disassemble the appliance.
- Your mains power supply shall be in align with the specified information on the type tag.
- Do not use the appliance with an extension cord.
- Do not unplug the appliance by pulling on the cord.
- When it is left unattended, before attaching/detaching accessories, or before cleaning, wait for the moving parts to stop and unplug the power cord of the appliance.
- Do not touch the plug of the appliance while your hands are damp or wet.
- Do not use the appliance for hot meals.
- Use the appliance only with the rubber pad and glass bowl provided.
- Do not operate the appliance with its empty bowl.
- To avoid damaging the blades and the appliance, remove bones and seeds from foods.

1 Important safety and environmental instructions

- The appliance is not suitable for dry or hard foods that can cause the blades to become blunt in a short time.
- Follow all warnings to avoid injuries due to misuse.
- Serious injury may result from misuse when emptying the bowl, during cleaning and when touching the chopping blade with bare hands. Handle the chopping blade carefully, trying to hold it only by its plastic part.
- After cleaning, dry the appliance and all its components before connecting it to power and installing the components.
- Do not immerse the appliance, the power cord or the plug in water or in any other liquids.
- Do not operate the appliance or its components over or near hot surfaces or do not put on such surfaces.
- If you keep the packaging materials, keep them out of the reach of children.

1 Important safety and environmental instructions

1.2 Compliance with the WEEE Regulations and Waste Disposal

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.


1.3 Packaging information



The product's packaging is made of recyclable materials, in accordance with the National Legislation. Do not dispose the packaging waste with the household waste or other wastes, dispose it to the packaging collection areas specified by local authorities.

1.4 What to do for energy saving

Follow the times recommended in the manual during use. Unplug the cord of appliance after use.

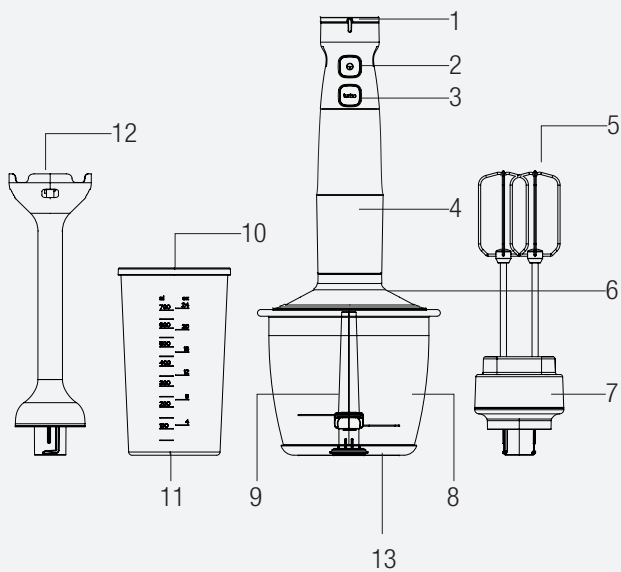

2 Your Hand Blender

2.1 Overview

1. Speed adjustment button
2. ON/OFF button
3. Turbo button
4. Motor unit
5. Beater
6. Chopping cover
7. Beater holder
8. Chopping bowl
9. Chopping blade
10. Scaled beaker
11. Scaled beaker non-slip base
12. Blending shaft
13. Bowl non-slip base

Technical data

Voltage: 220-240 V~, 50-60 Hz

Power: 750 W

The rights to make technical and design changes are reserved.

3 Operation

3.1 Intended use

The appliance is intended for home use only, it is not suitable for professional use.

The appliance is designed for crushing and beating small amounts of solid food only.

3.2 Maximum amounts and processing time

- Refer to the table for process times and maximum amounts

Annexes	Ingredients	Operation time
Blender accessory	150 g carrots (chopped as cubes of 1.5 cm) and 300 ml water	20 second
Mini chopper	200 g meat	20 second
Beater accessory	4 eggs white	180 s.

3.3 First operation


- Clean the parts of the appliance before the first use (see 3.1).
- Use the appliance in an upright position on a stable, flat, clean, dry and non-slip surface.




- You can use it until the process is completed by waiting a few seconds for continuous uses shorter than 10 seconds.

3 Operation


3.3 Mixing and chopping with blending shaft

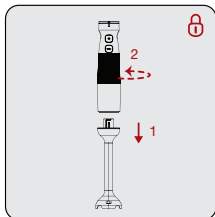

Attach the blending shaft (12) to the motor unit (4) by turning the end of the motor unit (4) “” counterclockwise.

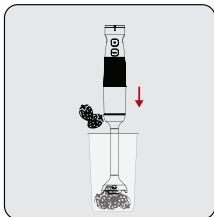


Put the ingredients (in small pieces) to be processed into the scale bowl (10) or the bowl that you will use and immerse the blending shaft (12) into the bowl.

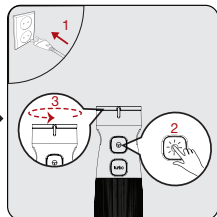


Plug in the appliance. Press the power button (2) and operate. Then adjust the speed by turning the speed adjustment button (1).



When process is complete, release the power button (2). Unplug the appliance.

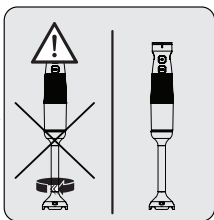

Wait for it to stop completely.

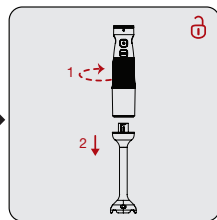

Turn the blending shaft (12) clockwise “” to detach it from the motor unit (4).

3 Operation






- You may increase the speed by turning the speed adjustment button (1) step by step.
- Start to mix ingredients with a lower speed at first. When you start with higher speed, foods may splatter.
- Making light circular movements with the device during the procedure will provide a better result.



Do not touch the blades with bare hands.

3.4 Chopping

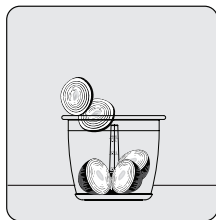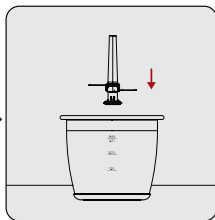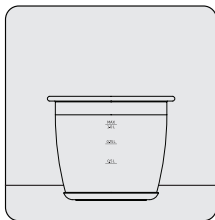

Put the chopping bowl (8) and non-slip base (11) onto a flat surface.

Place the chopping blade (9) to the fixed shaft in the chopping bowl.

Put the ingredients into the chopping bowl (8).




Do not operate the appliance unless the chopping cover (6) is not fully engaged.

3 Operation




- Do not crush extremely hard ingredients such as coffee beans, ice, coconut, cereals or bones. Remove the stems of the plants, the shell of the walnut, and the bone, nerve and cartilage of the meat.
- Cut the food into small parts.
- Always hold the chopping bowl with one hand to prevent it from tipping over during the process.
- Do not use the appliance longer than 10 seconds continuously.
- Press the start button (2) intermittently for best results.

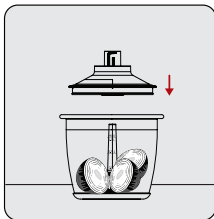


Place the chopping cover (6) onto the chopping bowl (8).

- Make sure that the tabs on the chopping cover (6) are securely locked onto the bowl.

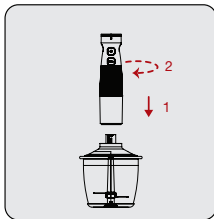

Place the motor unit (4) onto the chopping cover (6).

- Make sure that the motor unit (4) is firmly locked onto the chopping cover.

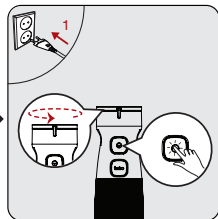

Plug in the appliance. Press the power button (2) and operate. Then adjust the speed by turning the speed adjustment buttons (1).

3 Operation




WARNING:

- Be careful when attaching the chopping blade (9) since it is very sharp.
- Do not touch the chopping blade (9) with bare hands.


3.5 Beater




You may use beater accessory (5) for beater cream and eggs.

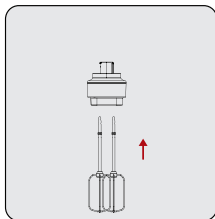

Gently push the beater accessory tips (5) into the beater holder (7).



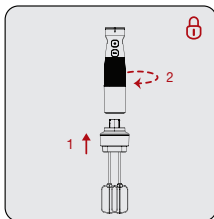


Attach the beater holder (7) into the motor unit (4) by turning counter clockwise “”.

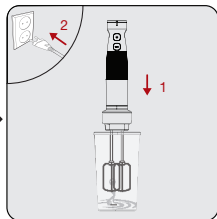

Put the ingredients you want to process into the scaling cup (10) or similar bowl and plug the socket.

3 Operation

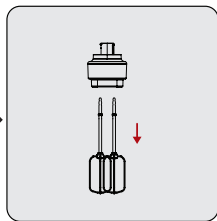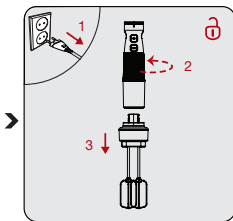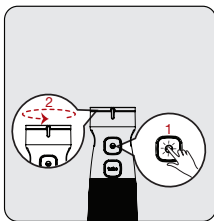

Press the power button (2) and operate. Then adjust the speed by turning the speed adjustment button (1). Start beater .

When completed, unplug it. Detach the motor unit, From beater holder (7) by turning it clockwise “”.

Gently pull out the beater accessory tips (5) from the beater holder (7).


4 Cleaning and maintenance

4.1 Cleaning



WARNING:

- Do not use benzene, solvents, abrasive cleaners, metal objects or hard brushes to clean the appliance.
- Do not touch the chopping blades (9) with bare hands. The blades are very sharp. Use a brush!
- Do not immerse the motor unit (4) or electrical cord into water or other liquids and never hold under the running water.
- Do not wash chopping blade and beater holder in the dishwasher.
- Do not immerse the inner part of chopping blade, motor unit (4) or electrical cord into water or other liquids.

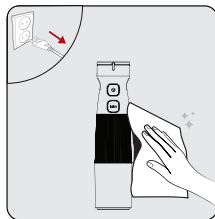

Unplug the appliance before cleaning. Make sure that all appliance components has stopped completely. Wipe the motor unit (4) of the appliance with a damp cloth.



Immediately after using the appliance, clean the scale bowl (10), chopping cover (6), chopping bowl (8), beater (5), beater holder (7) with warm, soapy water.



Dry accessories thoroughly.

4 Cleaning and maintenance

4.2 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance before storing.
- Store the appliance in a cool dry place.
- Store the appliance and its cord out of the reach of children.

4.3 Transport and shipping

- During transport and shipping, carry the appliance with its original packaging. The packaging of the appliance will protect the appliance against physical damage.
- Do not put heavy objects on the appliance or its packaging. Otherwise the appliance may be damaged.
- If the appliance is dropped, the appliance may not operate or permanent damage may occur.