



Cordless Stick Vacuum Cleaner

User Manual



VRT 86325 VI

EN - TR - FR - IT - RO - PL - SR - HR - SK - MK - SQ



01M-8915503200-4923-02
01M-8915471200-4923-02

Please read this guide first!

Dear Customer,

Thank you for choosing a Beko product. We would like you to achieve the optimal efficiency from this high quality product which has been manufactured with state of art technology. Please make sure you read and understand this guide and supplementary documentation fully before use and keep it as a reference. Include this guide with the unit if you hand it over to someone else. Observe all warnings and information herein and follow the instructions.

Symbols and their meanings

These symbols are used throughout this guide:



Important information and useful hints about usage.



WARNING: Warnings against dangerous situations concerning the security of life and property.



Electric shock protection rating



RECYCLED &
RECYCLABLE PAPER

CONTENTS

ENGLISH	03-20
TÜRKÇE	21-43
FRANÇAIS	44-63
ITALIANO	64-85
ROMÂNĂ	86-109
POLSKI	110-130
СРПСКИ	131-149
HRVATSKI	150-167
SLOVENČINA	168-186
МАКЕДОНСКИ	187-206
SHQIPTAR	207-226

1 Important safety and environmental instructions

This section contains safety instructions to prevent hazards that can result in injury or property damage.

Any warranty is void if these instructions are not followed.

1.1 General safety

- This appliance complies with international safety standards.
- This device can be used by children over 8 years of age, people with physical, sensory or mental challenges or people with lack of experience or knowledge; as long as control is ensured or information is provided regarding the hazards. Children must not play with the appliance. Cleaning and user maintenance shall not be carried out by unattended children.
- Do not use the appliance if the power cord or the appliance is damaged. Contact authorized service.
- Your mains power supply shall match the information shown on the rating plate label of the appliance.
- Do not use the appliance with an extension cord.
- To prevent damage to the power cord, prevent it from being pinched, crimped or rubbed against sharp edges.
- Do not touch the plug of the appliance with damp or wet hands while the appliance is plugged in.
- Do not pull on the cord while unplugging the appliance.
- Do not vacuum flammable materials and ensure that the cigarette ashes are cooled down before vacuuming them.
- Do not vacuum water and other fluids.
- Protect the appliance against precipitation, humidity and heat sources.

1 Important safety and environmental instructions

- Do not use the appliance in or near explosive or flammable environments and substances.
- Unplug the appliance before cleaning and maintenance.
- Do not immerse the appliance or its power cord in water for cleaning.
- Do not disassemble the appliance.
- Use only original parts or parts recommended by the manufacturer.
- To prevent blockage of the filter or damage to the motor, do not vacuum cement, plaster or fragments of compressed paper.
- Use the appliance with the adapter delivered with the appliance only.
- Do not use the appliance without filters, it may get damaged.
- If you keep the packaging materials, keep them out of the reach of children.
- This appliance is not intended to be used by persons, including children, with physical, sensory and mental disabilities or those who have not adequate experience and knowledge regarding its use, unless they are under the supervision of a person responsible for their safety or they are informed about the operation of the appliance.
- Children shall be supervised to prevent them from playing with the appliance.
- Unplug the adaptor and remove the battery pack before any cleaning or maintenance procedure.
- To avoid any risk of hazard, a damaged adaptor shall be replaced by the manufacturer, the authorized representative of the manufacturer or a similarly qualified technician.
- Keep your fingers, hair and loose clothes away from moving parts or clearances while vacuuming.

1 Important safety and environmental instructions

- Batteries shall be removed from the appliance before discarding the appliance.
- Disconnect the appliance from power supply before removing the battery.
- Please discard used batteries in accordance with local laws and regulations.
- The batteries included in this appliance may only be replaced with qualified persons.
- Appliance is not intended to be operated for commercial purposes. This appliance is not designed for commercial use, it is intended for home use and in applications as follows:
 - In the staff kitchens of the stores, offices and other working environments
 - In farm houses;
 - By customers in hotels, motels or other accommodation facilities
 - In hostels or similar environments.
- **WARNING:** Use the HCX1501-3200450E removable supply unit delivered with the appliance to charge to the battery.
- This appliance shall not be operated by children and people with limited physical, sensory and cognitive skills or people with lack of experience and knowledge unless they are under supervision or they are provided with the relevant instructions.
- Children shall be supervised to prevent them from playing with the appliance.

1 Important safety and environmental instructions

1.2 Compliance with the WEEE Directive and disposal of the waste product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1.3 Packaging information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.4 Information on Waste Batteries



This symbol on rechargeable batteries/batteries or on the packaging indicates that the rechargeable battery/battery may not be disposed of with regular house hold rubbish. For certain rechargeable batteries/batteries, this symbol may be supplemented by a chemical symbol. Symbols for mercury (Hg) or lead (Pb) are provided if the rechargeable batteries/batteries contain more than 0,0005 % mercury or more than 0,004 % lead.

Rechargeable batteries/batteries, including those which do not contain heavy metal, may not be disposed of with household waste. Always dispose of used batteries in accordance with local environmental regulations. Make enquiries about the applicable disposal regulations where you live.


1.5 What to do for energy saving

- When using your appliance, adjust the speed settings according to the surface, in order to save energy.
- Normally, lower speeds are used when cleaning hard surfaces, curtains and sofas, while high speeds are used in for cleaning carpets.

1.6 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2 Overview

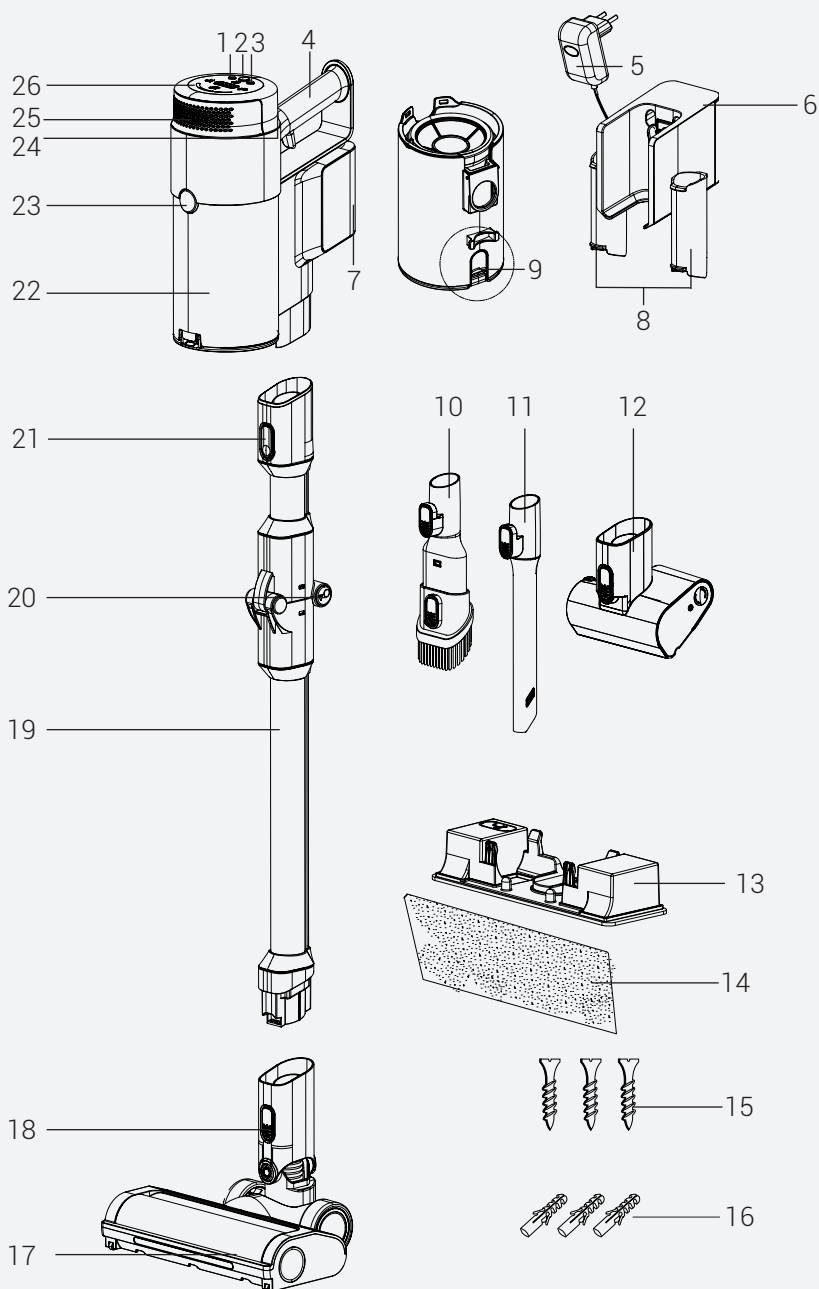

2 Overview

2.1 Controls and components

1. Speed level adjustment button
2. On/off button
3. Speed level adjustment button
4. Handle
5. Adaptor
6. Charging dock
7. Battery pack release button
8. Accessory attachment compartments
9. Dust container empty button
10. Combination tool
11. Crevice
12. Pet brush
13. Mop attachment; Water Tank
14. Mopping cloth (x2 pcs)
15. Screw (3 pcs)
16. Dowel (3 pcs)
17. Electrical turbo brush
18. Electrical turbo brush release button
19. Foldable tube
20. Tube fold button
21. Tube release button
22. Dust container
23. Dust container release button
24. Hepa filter cover release button
25. Hepa filter cover
26. LED screen

2.2 Technical data

	450 W
Input	100 - 240 V~ 50-60 Hz 0,5 A
Output	32 V  0.45 A
Charging time	4-6 hours
Runtime at max. power	10 mins
Runtime at mid power	30 mins
Runtime at min. power	60 mins



The rights to make technical and design changes are reserved.

The values provided with the appliance or its accompanying documents are laboratory readings in accordance with the respective standards. These values may differ depending on the use and ambient conditions.

2 Overview

External Power Supply Parameter

Manufacturer:	Guangdong Huachuangxing Power Supply Co.,Ltd
Model ID:	HCX1501-3200450E
Input Voltage:	100-240V~
Input Frequency:	50-60Hz
Input Current:	0.5A
Output Voltage	32.0V
Output Current	0.45A
Output Power:	14.4W
Average active efficiency:	85.5%
Efficiency at low load (10%):	83.33%
Power consumption under no load:	0.041W

 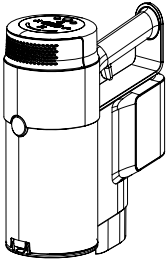
Usage Type	Speed Level	Usage Time	
Use with tube and brush	Minimum speed	Up to 40 min	
	Medium speed	Up to 25 min	
	Maximum speed	Up to 8 min	
Handheld (With non-motorized accessories)	Minimum speed	Up to 60 min	
	Medium speed	Up to 30 min	
	Maximum speed	Up to 10 min	

3 Installation


3.1 Intended use

This appliance is intended for household use and it is not suitable for industrial use.

3.2 Installation of the charging dock

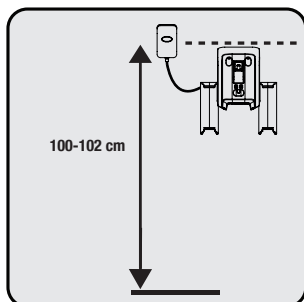


Position the charging dock at a height of minimum 100-102 cm from the ground.

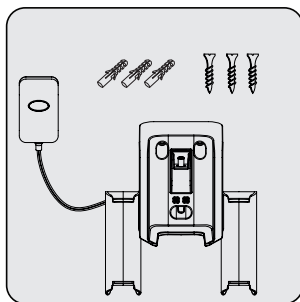


1- Fix four dowels on the wall

2- Place four screws into their locations on the charging dock and mount on the dowels on the wall.

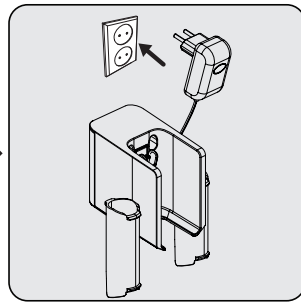


Plug the charging adaptor to the socket.


3.3 Installation of the body and the brush

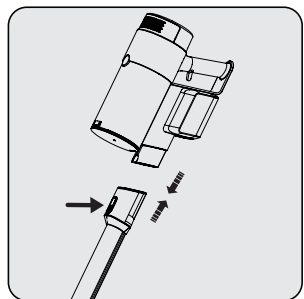

Push the tube in the direction of arrow towards the body by pushing on the tube release button.

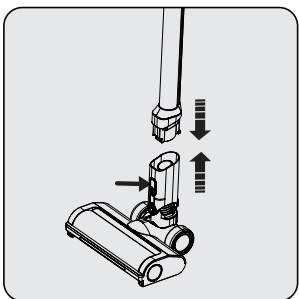

Press the electric turbo brush release button on the electric turbo brush and push it in the direction of arrow towards the tube.

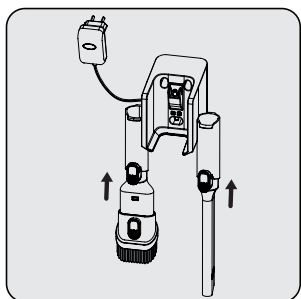


Attach crevice attachment and combination tool to the charging dock.

4 Operation

4.1 Charging the appliance



WARNING: If you want to use the device for the first time or after a long time, charge the batteries completely before using.

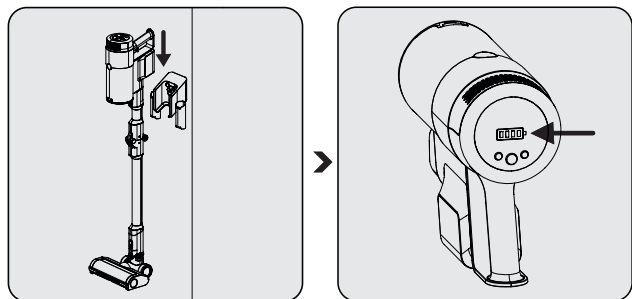

Place the appliance on the charging dock.

When you place appliance to the charging dock, it starts to charge and the battery charge levels shall be displayed on the screen. When all the battery levels are full and stable, the charging process will be completed.




It takes up to 4 to 6 hours to charge the appliance completely. The appliance shall not be operated while charging.




If the appliance is placed on the charging dock while it is being operated, it shall be stopped automatically.

4 Operation


4.2 Usage

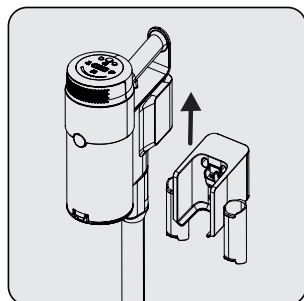

1- Pull the appliance from the charging dock upward.

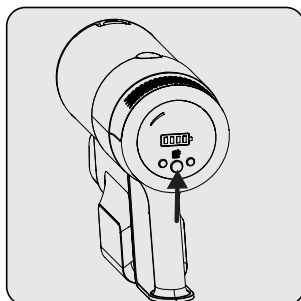


Press the on/off button to operate the appliance. The appliance starts operating with the minimum power when the on/off button is pressed.

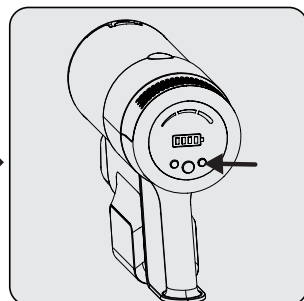

To adjust the speed level, push the button. On the screen, which suction mode is being used will be shown as min, mid and high. By pressing the - and + buttons, the speed level can be adjusted.




The appliance may be placed for charging before the complete discharging of the battery. The appliance may be kept continuously as charging on the charging dock until the next operation.

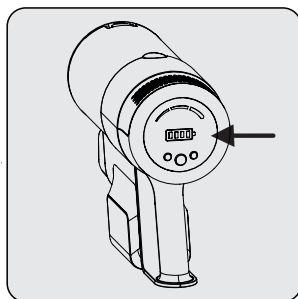


Pay attention to the battery levels during operation. Battery levels should be tracked during usage when it is empty, the appliance stops operating automatically.

4 Operation

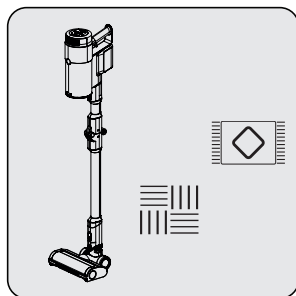


This appliance is suitable for use on carpets and hard floors.

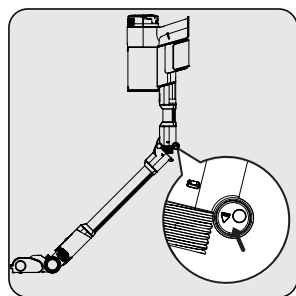


You can fold the tube for easy access to areas such as armchairs and under tables. You can fold the tube by pressing the round button mechanism on the left side that allows the tube to be folded.


4.3 Accessories

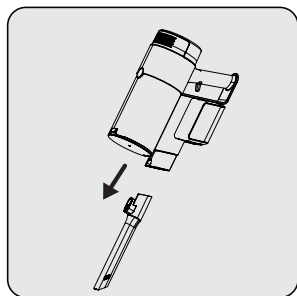

Crevice: Suitable for vacuuming the rear of the furnitures, hard to reach areas and narrow areas.

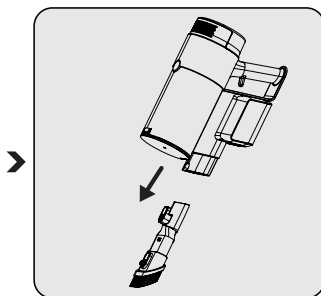


Combination tool: Suitable for vacuuming curtains, sofas, waxed furniture and delicate and fragile objects.

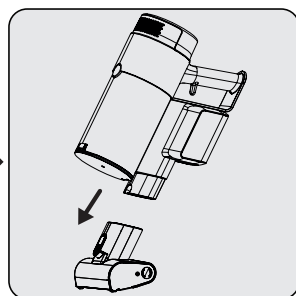


Mini turbo pet brush: Suitable for vacuuming floorings, stair steps, car interiors, sofas and seat, etc. It is also used for vacuuming pet hair on such surfaces.


4 Operation

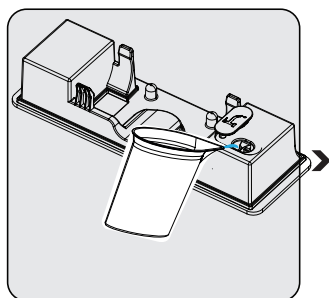

Mop Attachment: Suitable for mopping hard floors. Mop Apparatus, fill the water tank with clean water.

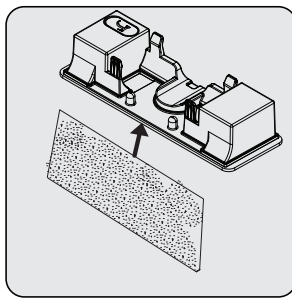

Velcro mop cloth; Secure the mop attachment to the bottom surface.

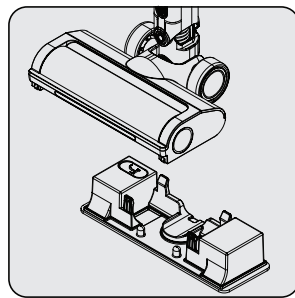

Attach mop attachment to the bottom of electrical turbo brush.



WARNING: Do not use the mop attachment on a carpet.



WARNING: Mop Apparatus Into the water tank; Do not use bleach or excessively foaming liquid detergent.



WARNING: Remove the mop attachment after usage is completed.



WARNING: Remove the mop attachment immediately after the mopping operation is completed to prevent damage to your wooden floors.



WARNING: After the mopping process is completed, empty the water remaining in the mop apparatus water tank and dry the tank.



Mopping cloths can be washed in washing machine.




WARNING: Do not lift or tilt the nozzle, as water may spray out of the water tank.



WARNING: The mop attachment is attached to the product. While mopping, do not mop or absorb water, coffee or tea deposits. These debris may get into the product and damage your device.

4 Operation

4.4 LED screen indicators

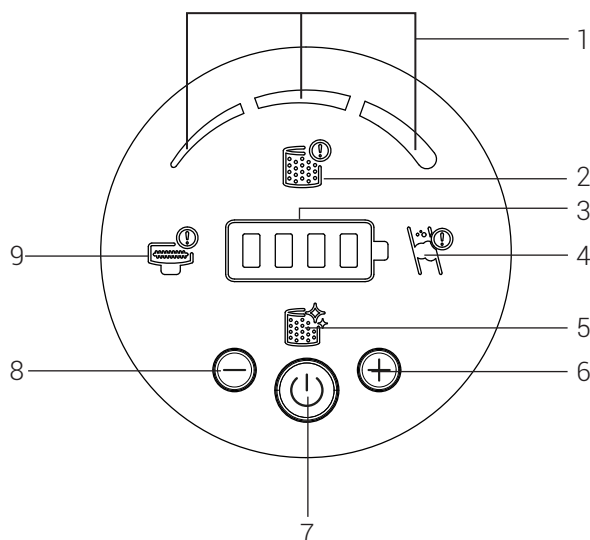

1. Those icons will show the suction mode which is being used.
2. If the prefilter or EPA12 filter did not put into the device, this icon will warn the user and the product will not turn on if the prefilter or EPA12 filter is absent to protect the machine. Make sure the filters are installed.
3. Remain battery level status with iconic show
4. Indicates that there is air blockage. Please check the tube inside, the suction mouth of product body to find the foreign material that blocks the machine.
5. Indicates that the filter needs to be cleaned.
6. Speed boost button
7. On/Off button
8. Speed power reduction
9. Indicates that there is a blockage on the rollers and needs to be cleaned.

5 Cleaning and maintenance

Turn off and unplug the appliance before cleaning.



WARNING: Never use gasoline, solvent, abrasive cleaners, metal objects or hard brushes to clean the appliance.



WARNING: Deformation may occur on the filters within time as a result of usage. It shall be replaced with a new one to prevent loss of performance. Contact with the customer services to buy a new one.


5.1 Cleaning the Dust container and Filters




WARNING: Do not wash the filters.




We recommend you to clean the dust container after each operation.

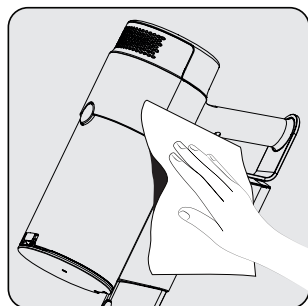

Wipe the surface of the body with a wet cloth.

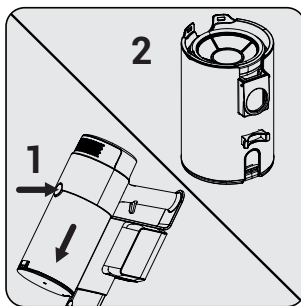


Press the dustbin release button and pull dustbin part.

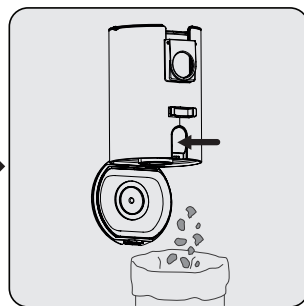


Press the dustbin cover release button and empty the dustbin.


5 Cleaning and maintenance

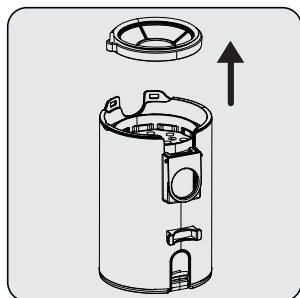


For a detailed cleaning of filters, remove the pre-filter part upward.

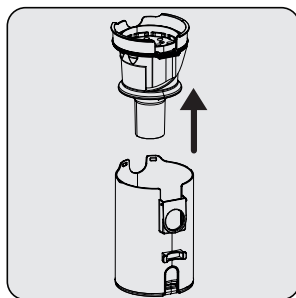


Pull the mesh filter part upward.

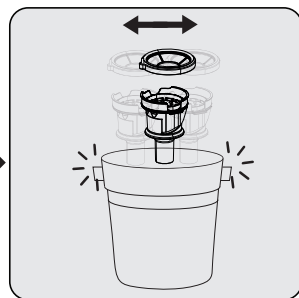


Clean the mesh filter and pre-filter by shaking in order to clean the dust.

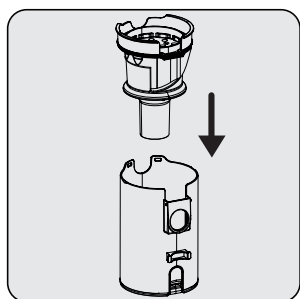

Insert the mesh filter into dustbin.

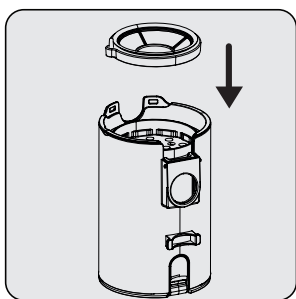


Insert the pre-filter on mesh filter.

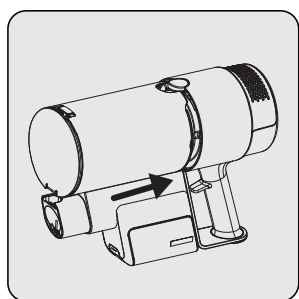

First, place the dustbin into its place horizontally, and then push the dustbin from bottom to be locked.

5 Cleaning and maintenance

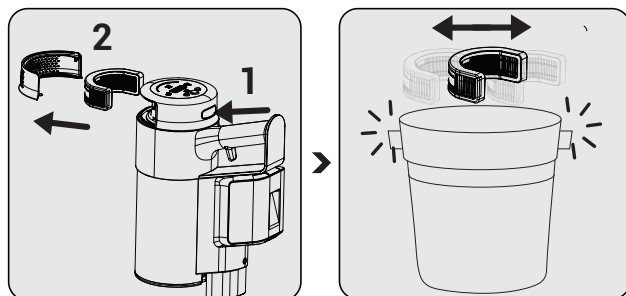


In order to clean EPA E12 Filter, press the button (1) and remove the filter part.

Clean the EPA E12 filter by shaking in order to clean the dust.

5.2 Cleaning of the brush



WARNING: Do not wash the turbo brush and the main roller.

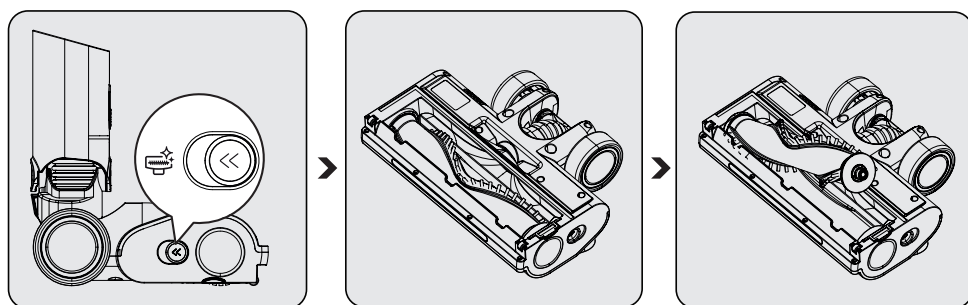

Push the roller release button to the left side.

Remove the dust on it by tapping it lightly to a hard surface or remove the dust with a brush. If any hair, etc. is tangled, remove it by cutting it off.

Fix the roller back to its place by pushing.

5 Cleaning and maintenance

5.3 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance.
- Ensure that the appliance is kept out of reach of children.
- Store the battery on a non-conducting material, and do not allow the battery to contact metal directly. This shall damage the battery.
- If you shall not be using the product for a long period of time, please at least keep it at half charged condition. Do not charge or discharge completely. The product should be recharged at least once every three months.

5.4 Transport and shipping

- During transport and shipping, carry the appliance with its original packaging. The packaging of the appliance will protect the appliance against physical damage.
- Do not put heavy objects on the appliance or its packaging. Otherwise the appliance may be damaged.
- If the appliance is dropped, the appliance may not operate or permanent damage may occur.

Arçelik A.Ş. Karaağaç Caddesi No:2-6,
34445, S  tl  ce, İSTANBUL, T  RKİYE

www.beko.com