

## INSTALLATION INSTRUCTIONS

---

### **Before Using Your Wine Cooler**

- ☐ Remove all exterior and interior packing.
- ☐ Before connecting the Wine Cooler to the power source, let it stand upright for approximately 24 hours.
- ☐ This will reduce the possibility of a malfunction in the cooling system caused by handling during transportation.
- ☐ Clean the interior surface with lukewarm water using a soft cloth.
- The door on this appliance can be opened from either the left or the right side. The unit is delivered with the door opening on the left side (The maximum angle of opening of the door is 100°). Should you wish to open the door from the right, follow the instructions 'Reversing the door swing of your appliance'.

## INSTALLATION OF YOUR WINE COOLER

---

- ☐ This device is designed to be incorporated into fitted kitchen units
- ☐ The appliance should be positioned in a well-ventilated, dry room.
- ☐ Place your Wine Cooler on a position that is strong enough to support it when it is fully loaded. To level your Wine Cooler, adjust the front leveling leg at the bottom of the Wine Cooler.
- ☐ This appliance must be fixed at the top and the bottom using the rail provided for the purpose in order to avoid any risk of tipping when the shelves are slid out
- ☐ Locate the Wine Cooler away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly.
- ☐ Plug the Wine Cooler into an exclusive, easily accessible plug socket. Any questions concerning power and/or earthing should be directed towards a qualified electrician or an authorized products service centre.
- ☐ To prevent the appliance from heating up, ensure that an adequate ventilation gap is retained and install a suitable thermal insulation panel. An adequate flow of air to and from the cooling system must be ensured.
- ☐ The appliance must be installed to all electrical, plumbing, water and drain connections in accordance with state and local codes.
- The required room temperature to allow proper operation of the device must be between 16 ° and 38 °C.

 
**NOTE: Make sure that the socket and ON/OFF switch are easily accessible after the appliance has been installed.**

## BUILT-IN CABINET INSTRUCTIONS


---

The wine cooler door seals the installed unit almost completely, so an air vent must provide in the base of the housing. Warmed air must flow from the front of the device to the back and then expelled upwards. The ventilation channels should measure at least 200 square centimeters in cross-section.


**WARNING:** To ensure the proper functioning of the appliance, air vents should never be blocked or covered.

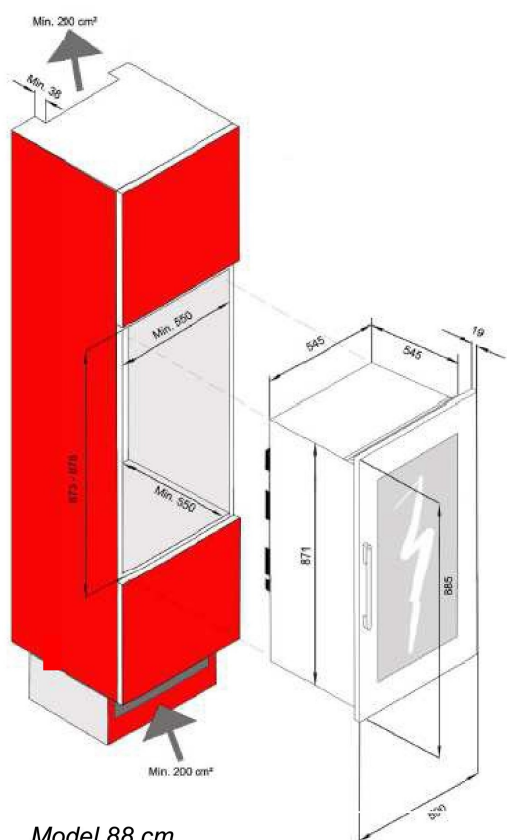


*Model 88 cm*

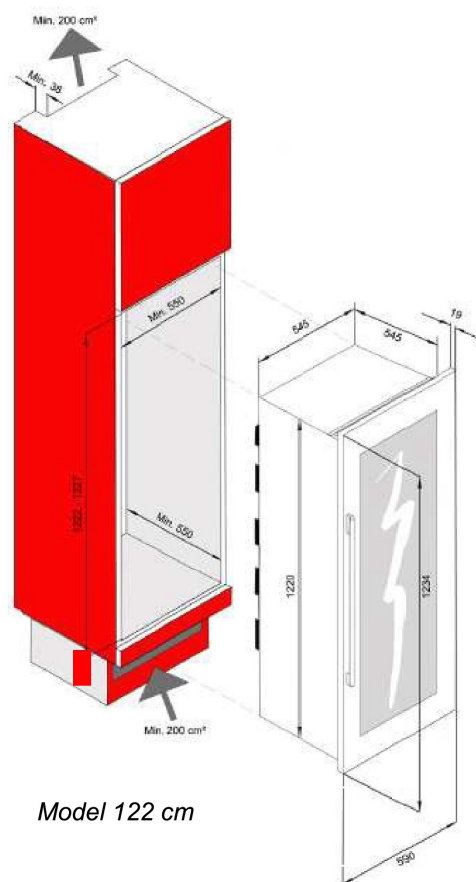 

*Model 122 cm*

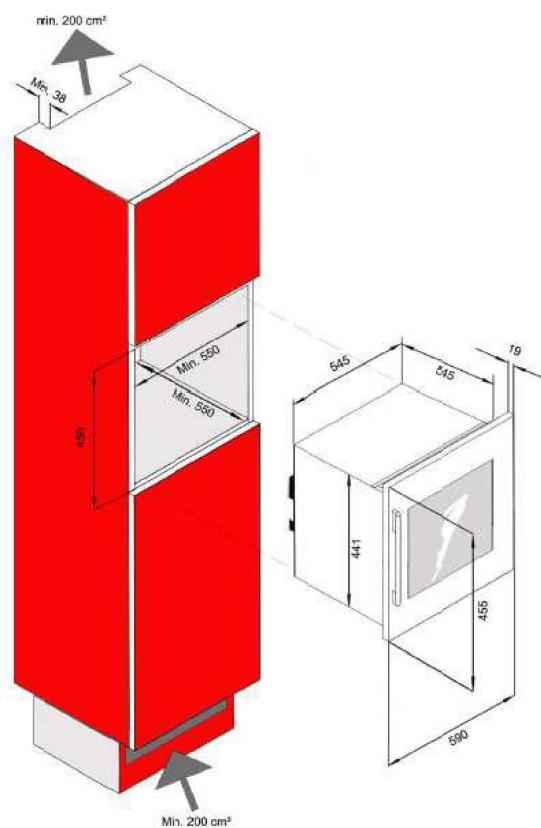 

*Model 45 cm*

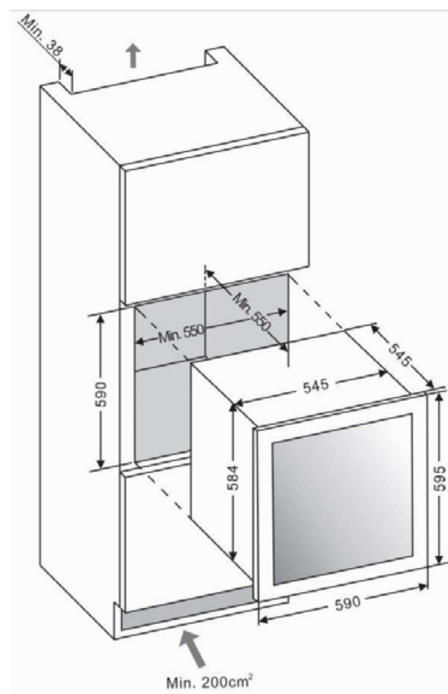 

*Model 60 cm*


### Attention

 - ☐ Store wine in sealed bottles.
- ☐ Do not overload the cabinet.
- ☐ Do not open the door unless necessary.
- ☐ Do not cover shelves with aluminum foil or any other shelf material which may prevent air circulation.

Should the wine cooler be left empty for long periods it is suggested that the appliance is unplugged, and after careful cleaning, leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible condensation, mold or odors forming.

## INSTALLING THE HANDLE

**IMPORTANT : Do not overtighten the screws**

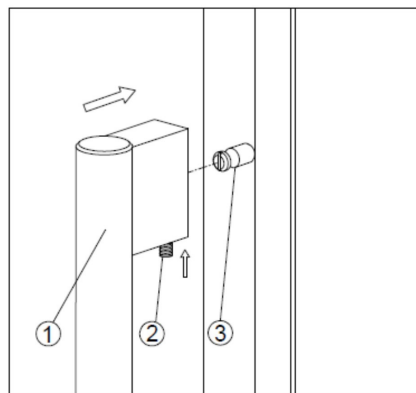

Locate the handle (1) over the pins (3) of the door and tighten the handle by screwing the allen key grub screws.

## REVERSING THE DOOR SWING OF YOUR APPLIANCE

Should you desire to reverse the opening direction, please follow the instructions below.

**Note: All parts removed must be saved to do the reinstallation of door.**

