



Réfrigérateur-Congélateur Type I

Notice d'utilisation

Refrigerator-Freezer Type I

Instruction of use

Frigido-Congelatore di Tipo I

Istruzioni per l'uso

Холодильник-Морозильной камерой типа I

Инструкции по эксплуатации

Frižider-Zamrzivač Tip I

Uputstvo za upotrebu

Hladilno-zamrzovalni aparat Tip I

Navodila za uporabo

Hladnjak-zamrzivač Tip I

Upute za uporabu

Frigorifer-Ngrirës Tipi I

Udhëzime për përdorim

Фрижидер-замрзнувач Тип I

 
Упатство за употреба

Frižider-zamrzivač Tip I

Uputstvo za upotrebu

Frigider-Congelator Tip I

Instrucțiuni de utilizare

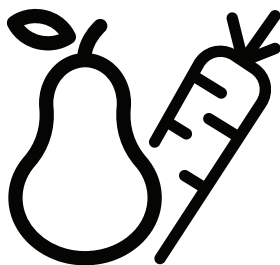

RDSA310M40SN



FR-EN-IT-RU-SR-SL-HR-SQ-MK-BS-RO



ATTENTION!

Pour assurer un fonctionnement normal de votre appareil qui utilise un agent frigorifique complètement écologique, R600a (inflammable seulement dans certaines conditions) vous devez respecter les règles suivantes:

- N'empêchez pas la libre circulation de l'air autour de l'appareil.
- N'utilisez pas des dispositifs mécaniques pour accélérer le dégivrage, autres que ceux recommandés par le fabricant.
- Ne détruisez pas le circuit frigorifique.
- N'utilisez pas des appareils électriques à l'intérieur du compartiment pour conserver les denrées, apart celles qui sont éventuellement recommandés par le fabricant.

WARNING!

In order to ensure a normal operation of your refrigerating appliance, which uses a completely environmentally friendly refrigerant the R600a (flammable only under certain conditions) you must observe the following rules:

- Do not hinder the free circulation of the air around the appliance.
- Do not use mechanic devices in order to accelerate the defrosting, others than the ones recommended by the manufacturer.
- Do not destroy the refrigerating circuit.
- Do not use electric appliances inside the food cheeping compartment, others than those that might have been recommended by the manufacturer.

AVVERTENZA!

Per garantire il funzionamento adeguato dell'elettrodomestico, che utilizza il refrigerante R600a completamente adatto all'ambiente (infiammabile solo in determinate condizioni), è necessario attenersi alle seguenti regole:

- Non ostacolare la libera circolazione dell'aria attorno all'elettrodomestico.
- Per accelerare lo sbrinamento non utilizzare dispositivi meccanici diversi da quelli consigliati dal produttore.
- Non danneggiare il circuito refrigerante.
- Non utilizzare all'interno del comparto del cibo elettrodomestici diversi da quelli consigliati dal produttore.

ВНИМАНИЕ

Для того, чтобы обеспечить нормальную работу Вашего холодильника в котором используется охлаждающий реагент R600a, совершенно безвредный для окружающей среды (воспламеняющийся только в определенных условиях), Вам следует соблюдать следующие правила.

- Не создавайте препятствий для свободной циркуляции воздуха вокруг холодильника.
- Не пользуйтесь никакими механическими приспособлениями и инструментами для удаления льда при размораживании холодильника, кроме тех, которые рекомендованы изготовителем.
- Не допускайте повреждения охлаждающего контура.
- Не устанавливайте внутрь холодильного отделения, где хранятся продукты, никакие электрические устройства, кроме тех, которые рекомендованы изготовителем.

UPOZORENJE!

Kako bi se osigurao normalan rad vašeg hladnjaka koji koristi kompletno ekološki prihvatljivo rashladno sredstvo R600a (zapaljivo samo pod određenim uvjetima), trebate se pridržavati slijedećih pravila:

- Ne ometati slobodnu cirkulaciju zraka oko hladnjaka.
- Ne koristiti mehanička sredstva za ubrzavanje odleđivanja, koja nije preporučio proizvođač.
- Paziti da se ne ošteti krug rashladnog sredstva.
- Unutar prostora hladnjaka za spremanje namirnica ne koristiti električne uređaje koje nije preporučio proizvođač.

OPOZORILO!

Za normalno delovanje vaše zamrzovalne naprave, ki uporablja naravi prijazno hladilno sredstvo R600a (vnetljivo samo pod določenimi pogoji), je treba upoštevati naslednja pravila:

- Ne zadržujte prostega pretoka zraka okoli naprave.
- Za hitrejše odtajanje, ne uporabljajte mehanskih naprav, ki jih ni priporočil proizvajalec.
- Ne uničujte hladilnega krogotoka.
- V prostoru za hrano ne uporabljajte električnih naprav, ki jih ni priporočil proizvajalec.

UPOZORENJE!

Kako bi se osigurao normalan rad vašeg zamrzivača koji koristi kompletno ekološki prihvatljivo rashladno sredstvo R600a (zapaljivo samo pod određenim uvjetima), trebate se pridržavati slijedećih pravila:

- Ne ometati slobodnu cirkulaciju zraka oko zamrzivača.
- Ne koristiti mehanička sredstva za ubrzavanje odleđivanja, koja nije preporučio proizvođač.
- Paziti da se ne ošteti krug rashladnog sredstva.
- Unutar prostora zamrzivača za spremanje namirnica ne koristiti električne uređaje koje nije preporučio proizvođač.



PARALAJMËRIM!

Për të siguruar një përdorim normal të frigoriferit tuaj, që përdor një mjet ftohës plotësisht ekologjik, R600a (i ndezshëm vetëm në kushte të veçanta), duhet të ndiqni rregullat vijuese:

- Mos pengoni qarkullimin e lirë të ajrit përreth aparatit.
- Mos përdorni sende mekanike që nuk janë rekomanduar nga prodhuesi, për ta përshpejtuar shkrimin e akullit.
- Mos e prishni qarkun ftohës.
- Mos përdorni aparate elektrike të parekomanduara nga prodhuesi brenda dhomëzës për mbajtjen e ushqimeve.

ПРЕДУПРЕДУВАЊЕ!

Со цел да се обезбеди normalno функционирање на уредот, кој користи целосно еколошки разладувач (фреон) R600a (запалив само под одредени услови), морате да се придржувате кон следните правила:

- Nemojte da ja poprecuvate slobodnata cirkulacija na vazduhот околу уредот.
- Nemojte da upotrebuвате mehanicheski predmeti za da go zabrzate procesот na odmrznuвање. Koristete gi samo onie кои se препорачани од производителот.
- Nemojte da go oштetuvate razladното коло.
- Ne upotrebuвайте elektricheski aparati vnatre vo уредот. Koristete gi samo onie кои se препорачани од производителот.

UPOZORENJE !

U cilju osiguranja normalnog rada vašeg hladnjaka koji koristi za okolinu bezopasno sredstvo za hlađenje R600a (zapaljivo), potrebno je da se pridržavate sljedećih pravila:

- Ne ometaјte slobodnu cirkulaciju zraka oko aparata.
- Ne koristite mehaničke sprave za ubrzanje odleđivanja, osim po preporuci proizvođača.
- Ne oštećujte cirkulacioni sistem.
- Ne unosite električne sprave u odjeljke za pohranu namirnica osim po preporuci proizvođača.

STIMATE CUMPĂRĂTOR !

Pentru a asigura o funcționare normală aparatului dvs. care utilizează un agent frigorific complet ecologic, R600a (inflamabil numai în anumite condiții), este necesar să respectați următoarele reguli:

- Nu împiedicați circulația liberă a aerului în jurul aparatului.
- Nu utilizați dispozitive mecanice pentru a accelera procesul de dezghețare, altele decât cele recomandate de către fabricant.
- Nu distrugeți circuitul frigorific.
- Nu utilizați aparate electrice în interiorul compartimentului pentru stocarea alimentelor, în afara celor, eventual, recomandate de către fabricant.

FR**Sommaire**

La sécurité d'abord / 1
 Conditions électriques / 2
 Instructions de transport / 2
 Instructions d'installation / 2
 Apprendre à connaître votre appareil / 3
 Suggestion d'agencement des
 denrées dans l'appareil / 3
 Commande de température et réglages / 4
 Avant l'utilisation / 4
 Conservation des denrées surgelées / 4
 Congeler les produits frais / 4
 Fabrication de glaçons / 5
 Dégivrage / 5
 Remplacer l'ampoule intérieure / 5
 Repositionnement de la porte / 5
 Nettoyage et entretien / 6
 A faire / A ne pas faire / 7
 Diagnostic / 8

EN**Index**

Safety first / 9
 Electrical requirements / 10
 Transportation instructions / 10
 Installation instructions / 10
 Getting to know your appliance / 11
 Suggested arrangement of food in the appliance / 11
 Temperature control and adjustment / 12
 Before operating / 12
 Storing frozen food / 12
 Freezing fresh food / 12
 Making ice cubes / 13
 Defrosting / 13
 Replacing the interior light bulb / 14
 Cleaning and care / 14
 Repositioning the door / 14
 Do's and don'ts / 15
 Troubleshooting / 16

IT**Indice**

Innanzitutto la sicurezza / 17
 Requisiti elettrici / 18
 Istruzioni per il trasporto / 18
 Istruzioni di installazione / 18
 Conoscere l'elettrodomestico / 19
 Suggerimenti sulla disposizione del cibo
 nell'elettrodomestico / 19
 Controllo e regolazione della temperatura / 19
 Prima della messa in funzione / 20
 Conservazione di cibo congelato / 20
 Congelamento di cibi freschi / 20
 Preparazione dei cubetti di ghiaccio / 20
 Sbrinamento / 20
 Sostituzione della lampadina interna / 21
 Pulizia e manutenzione / 21
 Riposizionamento dello sportello / 22
 Cosa fare e cosa non fare / 22
 Risoluzione dei problemi / 23

RU**Содержание**

Безопасность прежде всего / 24
 Требования к электропитанию / 25
 Инструкции по транспортировке / 25
 Инструкции по установке / 25
 Общие сведения о холодильнике / 26
 Рекомендуемый способ размещения
 продуктов в холодильнике / 26
 Регулировка температуры / 26
 Перед началом работы / 27
 Хранение замороженных продуктов / 27
 Замораживание свежих продуктов / 27
 Замораживание льда / 28
 Размораживание / 28
 Замена лампочки внутри холодильника / 29
 Чистка холодильника и уход за ним / 29
 Перевешивание двери / 29
 что следует и чего нельзя делать / 30
 Устранение неисправностей / 31

SR**Sadržaj**

Bezbednost na prvom mestu / 32
 Neophodne elektricne instalacije / 33
 Uputstvo za transport / 33
 Uputstvo za instaliranje / 33
 Elementi uredaja / 34
 Regulacija temperature / 34
 Pre stavljanja aparata u upotrebu / 34
 Skladistenje zamrznute hrane / 34
 Zamrzavanje sveze hrane / 34
 Pravljenje leda / 34
 Odmrzavanje / 35
 Zamena sijalice u aparatu / 35
 Ciscenje i odrzavanje / 35
 Smer otvaranja vrata / 36
 Problemi / 36

SL**Kazalo**

Najprej varnost / 37
 Elektricne zahteve / 38
 Navodila za prevoz / 38
 Navodila za namestitev / 38
 Spoznajte vazo napravo / 39
 Predlagana ureditev hrane v napravi / 39
 Nadzorovanje in prilagoditev temperature / 39
 Pred delovanjem / 39
 Shranjevanje zamrznjene hrane / 40
 Zamrzovanje sveze hrane / 40
 Izdelava ledenih kock / 40
 Odtajanje / 40
 Zamenjava notranje zarnice / 41
 Ciscenje in nega / 41
 Premescanje vrat / 41
 Kaj lahko in kaj ne smete / 42
 Iskanje in odpravljanje napak / 43

HR

Sadržaj

Sigurnost prije svega / 44
Elektricni priključak / 45
Upute za transport / 45
Upute za instaliranje / 45
Dijelovi hladnjaka / 46
Preporučeni raspored namirnica u hladnjaku / 46
Kontrola temperature i podesavanje / 47
Prije rada hladnjaka / 47
Spremanje zamrznutih namirnica / 47
Zamrzavanje svježih namirnica / 47
Priprema kockica leda / 48
Odljeđivanje / 48
Zamjena zaruljice unutarnje rasvjete / 48
Ciscenje i njega / 48
Promjena smjera otvaranja vrata / 49
Korisni savjeti / 49
Otklanjanje smetnji u radu / 50

sq

Indeks

Siguria vjen e para / 51
Kërkesat elektrike / 52
Udhëzime transporti / 52
Udhëzime instalimi / 52
Njihuni me pajisjen tuaj / 53
Rregullimi i sugjeruar i ushqimeve në pajisje / 53
Kontrolli dhe rregullimi i temperaturës / 53
Para se ta vini në punë / 54
Vendosja e ushqimeve të ngrira / 54
Ngrirja e ushqimeve të freskëta / 54
Bërja e kubave të akullit / 54
Shkrirja / 55
Ndërrimi i llambës së brendshme / 55
Pastrimi dhe kujdesi / 55
Ripozicionimi i derës / 56
Bëj dhe mos bëj / 56
Zgjidhja e problemeve / 57

mk

Содржина

Безбедноста на прво место / 58
Електрични поврзување / 59
Упатство за транспорт / 59
Упатство за инсталација / 59
Запознавање со апаратот / 60
Сугестии за аранжирање на храната во апаратот / 60
Контрола на температура и подесување / 61
Пред употреба / 61
Сместување на замрзната храна / 61
Замрзнување на свежа храна / 61
Подготовка на коцки мраз / 62
Одмрзнување / 62
Заменување на сијалицување за внатрешно осветлување / 62
Чистење и одржување / 62
Репозиционирање на вратата / 63
Направете / Немојте да правите / 63
Проблеми - можни решенија / 64

BS

Sadržaj

Sigurnost na prvom mjestu / 65
Elektricni priključak / 66
Upute za transport / 66
Upute za instalaciju / 66
Upoznajte s uređajem / 67
Preporučeni raspored hrane u uređaju / 67
Kontrola temperature i podesavanje / 67
Prije upotrebe / 68
Pohranjivanje zamrznute hrane / 68
Zamrzavanje svjeze hrane / 68
Odmrzavanje / 69
Zamjena sijalice unutarnjeg osvjetljenja / 69
Ciscenje i održavanje / 69
Premještanje vrata / 70
Uciniti / Ne uciniti / 70
Otklanjanje problema / 71

RO

Cuprins

Sfaturi pentru reciclarea vechiului aparat / 73
Reciclarea ambalajului / 73
Instrucțiuni de transport / 73
Precauții și recomandări generale / 73
Instalare / 74
Conectarea electrică / 74
Deconectarea electrică / 75
Punerea în funcțiune / 75
Prezentarea aparatului / 75
Reversibilitatea ușilor / 75
Reglarea temperaturilor în frigider și congelator / 75
Producerea cuburilor de gheață / 76
Congelarea alimentelor / 76
Sugestii privind așezarea alimentelor / 76
Sfaturi practice pentru eficiență maximă / 77
Înlocuirea becului interior / 77
Modul de economisire a energiei / 77
Sfaturi pentru dezghețarea aparatului / 78
Curățarea aparatului / 78
Ghid de căutare a defectiunilor / 79
Zgomote în timpul funcționării / 79

FR

Get appareil est dote d'une source d'eclairage de classe energetique "G". Seuls des reparateurs qualifies sont autorises a proceder au remplacement de la source d'eclairage de cet appareil.

EN

This product is equipped with a lighting source of the "G" energy class. The lighting source in this product shall only be replaced by professional repairers.

IT

Siame produtte yra „G“ energijos klases apsvietimo saltinis. Sio produkto apsvietimo saltini gali pakeisti tik profesionalai.

RU

Данное изделие оснащено источником освещения энергетического класса "G". Источник света в этом изделии должен заменяться только профессиональными ремонтниками.

SR

Ovaj proizvod je opremljen izvorom osvetljenja energetske klase "G". Sijalicu u ovom proizvodu može zameniti samo stručno osoblje

SL

Ta izdelek je opremljen s svetlobnim virom energijskega razreda "G". Svetlobni vir v tem izdelku lahko zamenjajo samo poklicni serviserji.

HR

Ovaj proizvod se isporučuje s izvorom svjetlosti energetske klase "G". Izvor svjetla u ovom proizvodu smije zamijeniti samo stručno servisno osoblje.

SQ

Ky produkt është i pajisur me një burim drite të klasës energjetike "G". Burimi i dritës në këtë produkt duhet të zëvendësohet vetëm nga një riparues profesionist.

MK

 
Ovoj proizvod e opremen so izvor na osvetluvanje „G“ od energetska klasa. Sijalica vo ovoj proizvod može da se zameni samo od stručen serviser.

 
BS

Ovaj je proizvod opremljen izvorom osvjetljenja energetskog razreda „G“. Izvor osvjetljenja u ovom proizvodu mogu zamijeniti samo stručni serviseri.

RO

Acest produs este echipat cu o sursa de iluminare din clasa energetică „G“. Sursa de iluminare a acestui produs trebuie înlocuită numai de către reparatori profesioniști.

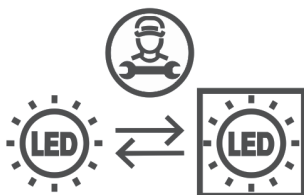

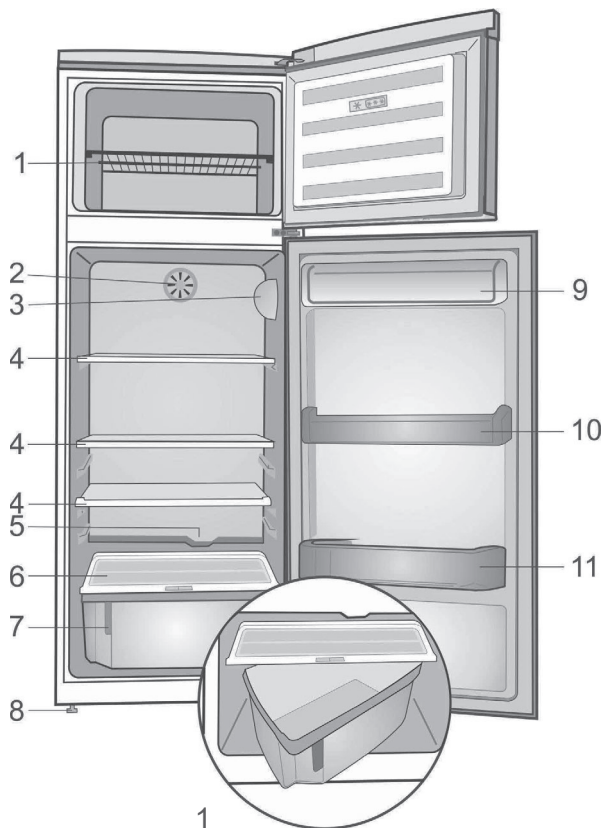

❗ Les illustrations presentees dans cette notice d'utilisation sont schematiques et peuvent ne pas correspondre exactement a votre produit. Si certains elements illustres ne sont pas inclus dans le produit que vous avez achete, ils concerneront d'autres modeles.

❗ Figures that take place in this instruction manual are schematic and may not correspond exactly with your product. If the subject parts are not included in the product you have purchased, then it is valid for other models.

❗ Le illustrazioni contenute in questa guida sono schematiche e potrebbero non corrispondere esattamente al prodotto in uso. Se le parti in oggetto non sono incluse nel prodotto acquistato, significa che sono da intendersi per altri modelli.

❗ Иллюстрации в данном руководстве по эксплуатации являются схематичными и могут не соответствовать вашему изделию. Если в приобретенный вами продукт не входят детали предмета, то это относится и к другим моделям.

❗ Slike koje su ukljucene u ovom uputstvu za upotrebu su sematske i mozda ne odgovaraju tacno Vasem proizvodu. Ako delovi teme nisu ukljuceni u proizvod koji ste kupili, onda to vazi za druge modele.

❗ Slike v navodilih za uporabo so shematske in morda ne ustrezajo vasemu proizvodu. Če naprava, ki ste jo kupili, ne vsebuje določenih delov, so veljavni za druge modele.

❗ Slike pohranjene u ovom priručniku su shematske i možda ne odgovaraju vašem proizvodu. Ako predmetni dijelovi nisu uključeni u proizvod koji ste kupili, onda se oni odnose na druge modele.

❗ Figurat qe ndodhen ne kete manual jane skematike dhe mund te mos korrespondojne sakesisht me produktin tuaj. Nese pjeset e subjektit nuk jane perfshire ne produktin qe keni blere, ateherë eshte vlejne per modele te tjera.

❗ Сликите што се прикажани во ова упатство за употреба се шематски и може да не соодветствуваат точно со производот. Ако деловите од поглавјето не се вклучени во производот што сте го купиле, тогаш тие важат за други модели.

❗ Ilustracije koje se nalaze u ovome uputstvu za upotrebu su shematske i mogu da se razlikuju od stvarnog izgleda vašeg proizvoda. Ukoliko su opisani neki dijelovi koji nisu uključeni u proizvod koji ste vi kupili, onda se oni odnose na druge modele.

❗ Figurile din acest manual sunt schematice, fiind posibil să nu fie identice cu produsul dvs. Componentele care nu există în dotarea produsului achiziționat de dvs. sunt prezente pe alte modele.

Congratulations on your choice of a **BEKO** Quality Appliance, designed to give you many years of service.

Safety first!

Do not connect your appliance to the electricity supply until all packing and transit protectors have been removed.

- Leave to stand for at least 4 hours before switching on, to allow compressor oil to settle, if transported horizontally.
- If you are discarding an old appliance with a lock or latch fitted to the door, ensure that it is left in a safe condition to prevent the entrapment of children.
- This appliance must only be used for its intended purpose.
- Do not dispose of the appliance on a fire. Your appliance contains non CFC substances in the insulation which are flammable. We suggest you contact your local authority for information on disposal and available facilities.
- We do not recommend use of this appliance in an unheated, cold room. (e.g. garage, conservatory, annex, shed, out-house etc.)

To obtain the best possible performance and trouble free operation from your appliance it is very important to read these instructions carefully. Failure to observe these instructions may invalidate your right to free service during the guarantee period.

Please keep these instructions in a safe place for easy reference.

Original Spare parts will be provided for 10 years, following the product purchasing date.

i INFORMATION	
	The model information as stored in the product data base can be reached by entering following website and searching for your model identifier (*) found on energy label. https://eprel.ec.europa.eu/

Please scan the QR code to find all the information relating to the packaging and how to manage the packaging waste

This appliance is not intended for use by person with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Electrical requirements

Before inserting the plug into the wall socket make sure that the voltage and the frequency shown in the rating plate inside the appliance corresponds to your electricity supply. We recommend that this appliance is connected to the mains supply via a suitably switched and fused socket in a readily accessible position.

Warning! This appliance must be earthed.

Repairs to electrical equipment should only be performed by a qualified technician. Incorrect repairs carried out by an unqualified person are carry risks that may have critical consequences for the user of the appliance.

ATTENTION!

This appliance operates with R600a which is an environmental friendly but flammable gas. During the transportation and fixing of the product, care must be taken not to damage the cooling system. If the cooling system is damaged and there is a gas leakage from the system, keep the product away from open flame sources and ventilate the room for a while.

WARNING - Do not use mechanical devices or other means to accelerate the defrosting process, others than those recommended by the manufacturer.

WARNING - Do not damage the refrigerant circuit.

WARNING - Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Transportation instructions

1. The appliance should be transported only in an upright position. The packing as supplied must be intact during transportation.
2. If during the transport the appliance, has been positioned horizontally, it must not be operated for at least 4 hours, to allow the system to settle.

3. Failure to comply with the above instructions could result in damage to the appliance, for which the manufacturer will not be held liable.

4. The appliance must be protected against rain, moisture and other atmospheric influences.

Important!

- Care must be taken while cleaning/carrying the appliance not to touch the bottom of the condenser metal wires at the back of the appliance, as this could cause injury to fingers and hands.
- Do not attempt to sit or stand on top of your appliance as it is not designed for such use. You could injure yourself or damage the appliance.
- Make sure that the mains cable is not caught under the appliance during and after moving, as this could damage the cable.
- Do not allow children to play with the appliance or tamper with the controls.

Installation instructions

1. Do not keep your appliance in a room where the temperature is likely to fall below 10 degrees C (50 degrees F) at night and/or especially in winter, as it is designed to operate in ambient temperatures between +10 and +38 degrees C (50 and 100 degrees F). At lower temperatures the appliance may not operate, resulting in a reduction in the storage life of the food.

2. Do not place the appliance near cookers or radiators or in direct sunlight, as this will cause extra strain on the appliance's functions. If installed next to a source of heat or freezer, maintain the following minimum side clearances:

From Cookers 30 mm

From Radiators 300 mm

From Freezers 25 mm

3. Make sure that sufficient room is provided around the appliance to ensure free air circulation (**Item 2**).

- Put the back airing lid to the back of your refrigerator to set the distance between the refrigerator and the wall (**Item 3**).

4. The appliance should be positioned on a smooth surface. The two front feet can be adjusted as required. To ensure that your appliance is standing upright adjust the two front feet by turning clockwise or anti-clockwise, until firm contact is secured with the floor. Correct adjustment of feet prevents excessive vibration and noise **(Item 4)**.

5. Refer to "Cleaning and Care" section to prepare your appliance for use.

Getting to know your appliance **(Item 1)**

- 1 - Freezer shelf
- 2 - Fan
- 3 - Thermostat and lamp housing
- 4 - Adjustable Cabinet shelves
- 5 - Defrost water collection channel - Drain tube
- 6 - Crisper cover
- 7 - Crisper
- 8 - Adjustable front feet
- 9 - Dairy Compartment
- 10 - Shelves
- 11 - Bottle shelf

Suggested arrangement of food in the appliance

Guidelines for obtaining optimum storage and hygiene:

1. The fridge compartment is for the short-term storage of fresh food and drinks.
2. The freezer compartment is   rated and suitable for the freezing and storage of pre-frozen food.
The recommendation for   storage as stated on the food packaging should be observed at all times.
3. Dairy products should be stored in the special compartment provided in the door liner.
4. Cooked dishes should be stored in airtight containers.

5. Fresh wrapped produce can be kept on the shelf. Fresh fruit and vegetables should be cleaned and stored in the crispers.

6. Bottles can be kept in the door section.

7. To store raw meat, wrap in polythene bags and place on the lowest shelf. Do not allow to come into contact with cooked food, to avoid contamination. For safety, only store raw meat for two to three days.

8. For maximum efficiency, the removable shelves should not be covered with paper or other materials to allow free circulation of cool air.

9. Do not keep vegetable oil on door shelves. Keep the food packed, wrapped or covered. Allow hot food and beverages to cool before refrigerating. Leftover canned food should not be stored in the can.

10. Fizzy drinks should not be frozen and products such as flavoured water ices should not be consumed too cold.

11. Some fruit and vegetables suffer damage if kept at temperatures near 0°C. Therefore wrap pineapples, melons, cucumbers, tomatoes and similar produce in polythene bags.

12. High-proof alcohol must be stored upright in tightly closed containers. Never store products that contain an inflammable propellant gas (e.g. cream dispensers, spray cans, etc.) or explosive substances. These are an explosion hazard.

Temperature control and adjustment

Operating temperatures are controlled by the thermostat knob and may be set at any position between 1 and 5 (the coldest position).

If the thermostat knob is in position "0" the appliance is off. In this case neither the lamp for inside lighting will light.

The average temperature inside the fridge should be around +5°C (+41°F).

Therefore adjust the thermostat to obtain the desired temperature. Some sections of the fridge may be cooler or warmer (such as salad crisper and top part of the cabinet) which is quite normal. We recommend that you check the temperature periodically with a thermometer to ensure that the cabinet is kept to this temperature. Frequent door openings cause internal temperatures to rise, so it is advisable to close the door as soon as possible after use.

Before operating

Final Check

Before you start using the appliance check that:

1. The feet have been adjusted for perfect levelling.
2. The interior is dry and air can circulate freely at the rear.
3. The interior is clean as recommended under "Cleaning and care."
4. The plug has been inserted into the wall socket and the electricity is switched on. When the door is open the interior light will come on.

And note that:

5. You will hear a noise as the compressor starts up. The liquid and gases sealed within the refrigeration system may also make some (noise), whether the compressor is running or not. This is quite normal.
6. Slight undulation of the top of the cabinet is quite normal due to the manufacturing process used; it is not a defect.

7. We recommend setting the thermostat knob midway and monitor the temperature to ensure the appliance maintains desired storage temperatures (See section Temperature Control and Adjustment).

8. Do not load the appliance immediately it is switched on. Wait until the correct storage temperature has been reached. We recommend checking the temperature with an accurate thermometer (see; Temperature Control and Adjustment).

Storing frozen food

Your freezer is suitable for the long-term storage of commercially frozen foods and also can be used to freeze and store fresh food. If there is a power failure, do not open the door. Frozen food should not be affected if the failure lasts for less than 19 hrs. If the failure is longer, then the food should be checked and either eaten immediately or cooked and then re-frozen.

Freezing fresh food

Please observe the following instructions to obtain the best results.

Do not freeze too large a quantity at any one time. The quality of the food is best preserved when it is frozen right through to the core as quickly as possible.

Do not exceed the freezing capacity of your appliance in 24 h.

Placing warm food into the freezer compartment causes the refrigeration machine to operate continuously until the food is frozen solid. This can temporarily lead to excessive cooling of the refrigeration compartment.

When freezing fresh food, keep the thermostat knob at medium position. Small quantities of food up to 1/2 kg. (1 lb) can be frozen without adjusting the temperature control knob.

Take special care not to mix already frozen food and fresh food.

Making ice cubes

Fill the ice - cube tray 3/4 full with water and place it in the freezer. Loosen frozen trays with a spoon handle or a similar implement; never use sharp-edged objects such as knives or forks.

Defrosting

A) Fridge compartment

The fridge compartment defrosts automatically. The defrost water runs to the drain tube via a collection container at the back of the appliance (**Item 5**).

During defrosting, water droplets may form at the back of the fridge compartment where a concealed evaporator is located. Some droplets may remain on the liner and refreeze when defrosting is completed. Do not use pointed or sharp-edged objects such as knives or forks to remove the droplets which have refrozen.

If, at any time, the defrost water does not drain from the collection channel, check that no food particles have blocked the drain tube. The drain tube can be cleared with a pipe-cleaner or similar implement.

Check that the tube is permanently placed with its end in the collecting tray on the compressor to prevent the water spilling on the electric installation or on the floor (**Item 6**).

B) Freezer compartment

Defrosting is very straightforward and without mess, thanks to a special defrost collection basin.

Defrost twice a year or when a frost layer of around 7 (1/4") mm has formed. To start the defrosting procedure, switch off the appliance at the socket outlet and pull out the mains plug.

All food should be wrapped in several layers of newspaper and stored in a cool place (e.g. fridge or larder).

Containers of warm water may be placed carefully in the freezer to speed up the defrosting.

Do not use pointed or sharp-edged objects, such as knives or forks to remove the frost. Never use hairdryers, electrical heaters or other such electrical appliances for defrosting. Sponge out the defrost water collected in the bottom of the freezer compartment. After defrosting, dry the interior thoroughly. Insert the plug into the wall socket and switch on the electricity supply.

Replacing the interior light bulb

To change the Bulb/LED used for illumination of your refrigerator, call your Authorised Service.

The lamp(s) used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to place foodstuffs in the refrigerator/freezer in a safe and comfortable way.

The lamps used in this appliance have to withstand extreme physical conditions such as temperatures below -20°C.

Cleaning and care

1. We recommend that you switch off the appliance at the socket outlet and pull out the mains plug before cleaning.

2. Never use any sharp instruments or abrasive substances, soap, household cleaner, detergent or wax polish for cleaning.

3. Use luke warm water to clean the cabinet of the appliance and wipe it dry.

4. Use a damp cloth wrung out in a solution of one teaspoon of bicarbonate of soda to one pint of water to clean the interior and wipe it dry.

5. Make sure that no water enters the temperature control box.

6. If the appliance is not going to be used for a long period of time, switch it off, remove all food, clean it and leave the door ajar.

7. We recommend that you polish the metal parts of the product (i.e. door exterior, cabinet sides) with a silicone wax (car polish) to protect the high quality paint finish.

8. Any dust that gathers on the condenser, which is located at the back of the appliance, should be removed once a year with a vacuum cleaner.

9. Check door seals regularly to ensure they are clean and free from food particles.

10. Never:

- Clean the appliance with unsuitable material; eg petroleum based products.
- Subject it to high temperatures in any way,
- Scour, rub etc., with abrasive material.

11. Removal of dairy cover and door tray :

- To remove the dairy cover, first lift the cover up by about an inch and pull it off from the side where there is an opening on the cover.
- To remove a door tray, remove all the contents and then simply push the door tray upwards from the base.

12. Make sure that the special plastic container at the back of the appliance which collects defrost water is clean at all times. If you want to remove the tray to clean it, follow the instructions below:

- Switch off at the socket outlet and pull out the mains plug
- Gently uncrimp the stud on the compressor, using a pair of pliers, so that the tray can be removed
- Lift it up.
- Clean and wipe it dry
- Reassemble, reversing the sequence and operations

13. Large accumulation of ice will impair the performance of the appliance.

Repositioning the door

Proceed in numerical order (**Item 7**).

Do's and don'ts

- Do-** Clean and defrost your appliance regularly (See "Defrosting")
- Do-** Keep raw meat and poultry below cooked food and dairy products.
- Do-** Take off any unusable leaves on vegetables and wipe off any soil.
- Do-** Leave lettuce, cabbage, parsley and cauliflower on the stem.
- Do-** Wrap cheese firstly in greaseproof paper and then in a polythene bag, excluding as much air as possible. For best results, take out of the fridge compartment an hour before eating.
- Do-** Wrap raw meat and poultry loosely in polythene or aluminium foil. This prevents drying.
- Do-** Wrap fish and offal in polythene bags.
- Do-** Wrap food with a strong odour or which may dry out, in polythene bags, or aluminium foil or place in airtight container.
- Do-** Wrap bread well to keep it fresh.
- Do-** Chill white wines, beer, lager and mineral water before serving.
- Do-** Check contents of the freezer every so often.
- Do-** Keep food for as short a time as possible and adhere to "Best Before" and "Use by" etc. dates.
- Do-** Store commercially frozen food in accordance with the instructions given on the packets.
- Do-** Always choose high quality fresh food and be sure it is thoroughly clean before you freeze it.
- Do-** Prepare fresh food for freezing in small portions to ensure rapid freezing.
- Do-** Wrap all food in aluminium foil or freezer quality polythene bags and make sure any air is excluded.
- Do-** Wrap frozen food immediately after purchasing and put it in to the freezer as soon as possible.
- Do-** Defrost food in the fridge compartment.
- Don't-** Store bananas in your fridge compartment.
- Don't-** Store melon in your fridge. It can be chilled for short periods as long as it is wrapped to prevent it flavouring other food.
- Don't-** Cover the shelves with any protective materials which may obstruct air circulation.
- Don't-** Store poisonous or any dangerous substances in your appliance. It has been designed for the storage of edible foodstuffs only.
- Don't-** Consume food which has been refrigerated for an excessive length of time.
- Don't-** Store cooked and fresh food together in the same container. They should be packaged and stored separately.
- Don't-** Let defrosting food or food juices drip onto food.
- Don't-** Leave the door open for long periods, as this will make the appliance more costly to run and cause excessive ice formation.
- Don't-** Use sharp edged objects such as knives or forks to remove the ice.
- Don't-** Put hot food into the appliance. Let it cool down first.
- Don't-** Put liquid-filled bottles or sealed cans containing carbonated liquids into the freezer, as they may burst.
- Don't-** Exceed the maximum freezing loads when freezing fresh food.
- Don't-** Give children ice-cream and water ices direct from the freezer. The low temperature may cause 'freezer burns' on lips.
- Don't-** Freeze fizzy drinks.
- Don't-** Try to keep frozen food which has thawed; it should be eaten within 24 hours or cooked and refrozen.
- Don't-** Remove items from the freezer with wet hands.

Trouble - shooting

If the appliance does not operate when switched on, check;

- That the plug is inserted properly in the socket and that the power supply is on. (To check the power supply to the socket, plug in another appliance).
- Whether the fuse has blown/circuit breaker has tripped/main distribution switch has been turned off.

- That the temperature control has been set correctly.

- That the new plug is wired correctly, if you have changed the fitted, moulded plug.

If the appliance is still not operating at all after above checks, contact the dealer from whom you purchased the unit.

Please ensure that above checks have been done, as a charge will be made if no fault is found.



The symbol  on the product or on packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.