



Installation

Here two venting modes, extraction-air mode and recirculation mode, before installing, select one mode.

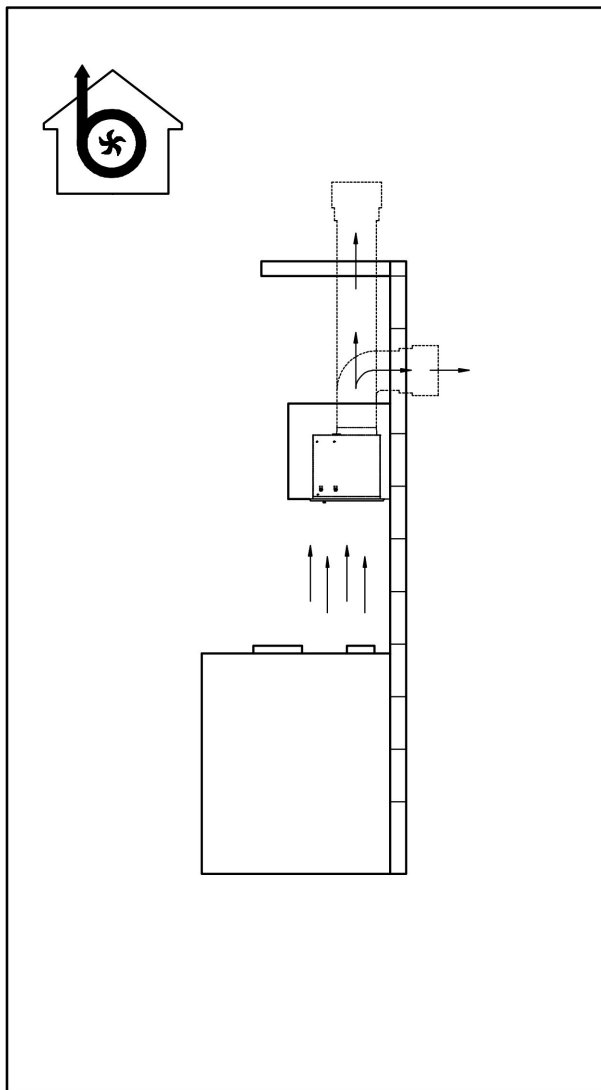

Extraction-air mode

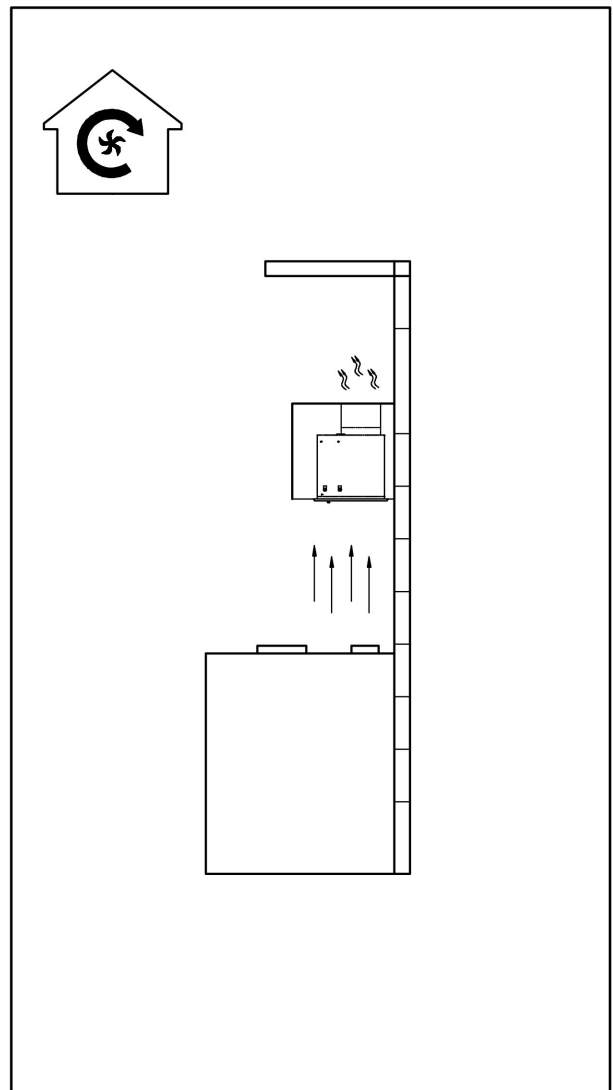

Recirculation mode