 


# Tower Fan

## User Manual

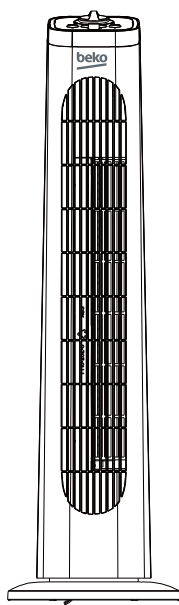

EFW5100W

EN | RO | IT | DE | FR | NL

01M-8899823200-5020-02

**beko**








# Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

## Meanings of the symbols

Following symbols are used in the various section of this manual:

	Important information or useful hints about usage.		Warning for danger of fire.
	Warning for hazardous situations with regard to life and property.		Warning for hot surfaces.
	Warning to actions that must never perform.		Do not cover it.
	Warning for electric shock.		



This product has been produced in environmentally friendly, modern facilities

# CONTENTS

<b>1 Safety instructions</b>	<b>4</b>
<b>2 Installation instructions</b>	<b>6</b>
2.1 Name of components .....	6
<b>3 Installation of use</b>	<b>8</b>
<b>4 Other</b>	<b>9</b>
4.1 Maintenance instructions.....	9
4.2 Cleaning.....	9
4.3 Technical data.....	9
<b>5 Disposal</b>	<b>10</b>

# 1 Safety instructions

## Warning

Read rules for safe operation and instructions carefully.

- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Indoor use only.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children should be supervised to ensure that they do not play with the appliance.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
- Correct disposal of this product.



-  This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote

## 1 Safety instructions

the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the instructions state that the guard has to be removed for cleaning purposes, the instructions shall state the substance of the following:  
Ensure that the fan is switched off from the supply mains before removing the guard.

### Rules for safe operation

- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Do not use fan in window, rain may create electrical hazard.
- Household use only.

## 2 Installation instructions

### 2.1 Name of components

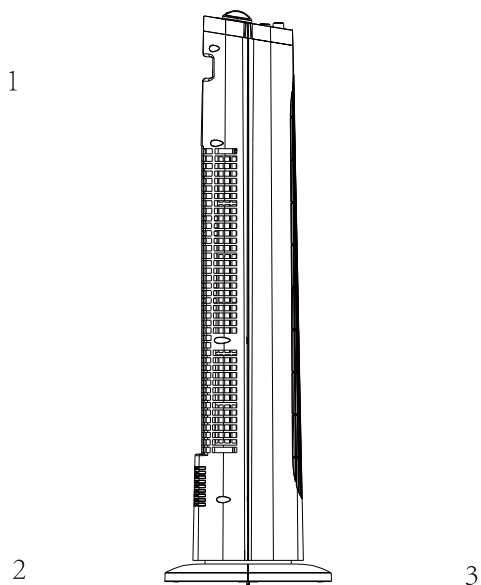

1. Fan body


2. Base A

3. Base B

## 2 Installation instructions

 
### Install the Base

#### Step 1

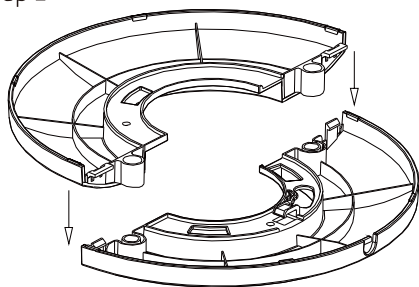


1. Put the two halves of the base together. See step 1.

#### Step 2

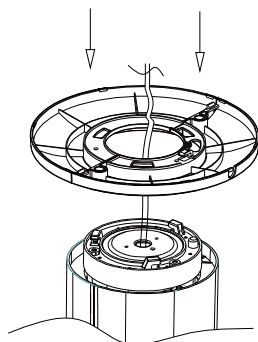 


2. Position the base on the bottom of the fan, put the power cord through the base and make sure clasps on tower fan body is align with the holes on the base. See step 2.

#### Step 3

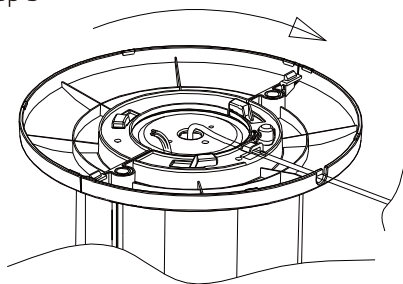 

3. Then rotate the base clockwise until the it is locked. Finally thread the power cord into the guide on the bottom of the base by gently pressing the wire into the clamps. See step 3.

### 3 Installation of use

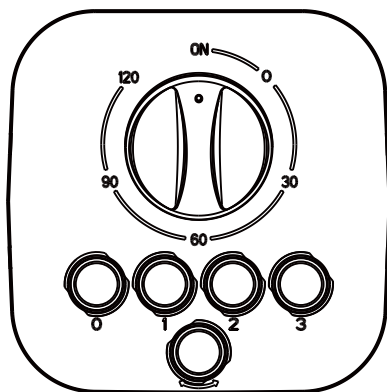 

**Controls:** Press selection button to choose desired speed.

"1" for low,

"2" for medium,

"3" for high,

"0" for power off

**Oscillation:** Press the "↔" button on the top of the fan begin oscillation. Press again to stop.

**Timer:** 2 hours timer

For timer operation, turn the timer control clockwise to operate the fan for the selected duration.



#### Warm tips

Do not rotate the timer counter-clockwise to "ON" from "120".



### 4.1 Maintenance instructions

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

### 4.2 Cleaning

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

### 4.3 Technical data

**Power supply:** 220-240V~, 50Hz

Technical and design modifications reserved.

## 5 Disposal



**Note:** Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

Information			
Description	Symbol	Value	Unit
Maximum fan flow rate	F	10	m <sup>3</sup> /min
Fan power input	P	35	W
Service value	SV	0.29	(m <sup>3</sup> /min)/W
Standby power consumption	P <sub>SB</sub>	0	W
Fan sound power level	L <sub>WA</sub>	62	dB(A)
Maximum air velocity	C	5.0	meters/sec
Measurement standard for service value	IEC 60879: 1986+ (corr. 1992)		
Contact details for obtaining more information	Arcelik: Arcelik AS. Sutluce. Karaagac Cd. 2-6, 34445 Beyoglu Istanbul Turkey		