
Air cooler User Manual

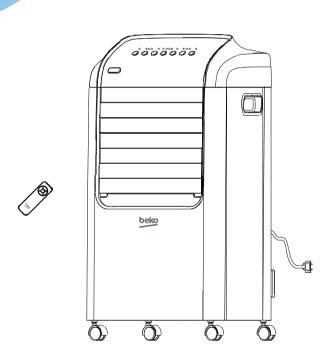

EFE6030W EN | FR | IT



Please read this user manual first!

Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Meanings of the symbols

Following symbols are used in the various section of this manual:



Important information or useful hints about usage.



Warning for hot surfaces.



Warning for hazardous situations with regard to life and property.



Warning to actions that must never perform.



Warning for danger of fire.



Warning for electric shock.



This product has been produced in environmentally friendly, modern facilities



Contents

1 9	Safety instructions	4
2 I	nstallation instructions	6
2.1	Name of components	. 6
3 I	nstructions for use	7
3.1	Instructions for key of remote controller	. 7
3.2	Instructions for operation of body	. 8
4 (Other	9
4.1	Maintenance instruction	. 9
4.2	Cleaning	. 9
4.3	Technical data	. 9
1 1	Damad	10

Safety instructions

Warning

Read rules for safe operation and instructions carefully.

- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Household Indoor use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Young children should be supervised to ensure that they do not play with the appliance.
- Unplug the appliance during filling and cleaning.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- Correct disposal of this product
- This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


1 Safety instructions

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Never disassemble the rotor blade guard.


Air cooler / User Manual 5 / 32 EN

Installation instructions

2.1 Name of components

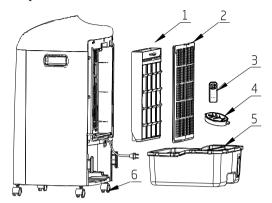



- 1. Honeycomb filter frame
- 2. Pre-filter
- 3. Remote control
- 4. Ice box
- 5. Water tank
- 6. Wheel

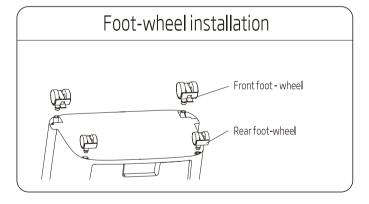

Instructions for use

3.1 Instructions for key of remote controller

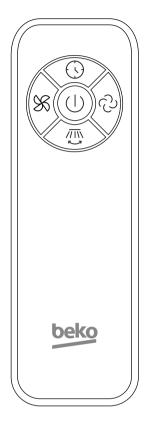

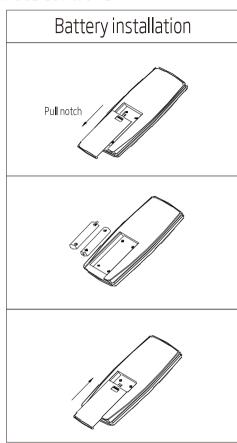

Considerate hint:

- 1. Slide open the battery compartment cover located on the backside of the remote controller.
- 2. Remove the batteries from the battery compartment.

 


- 3. Insert two new AAA 1,5 V batteries in the battery compartment with putting attention on the polarities (+ and -) marked on the battery and the battery compartment.
- 4. Slide close the battery compartment cover. Make sure it locks in place.
- 5. Effective range of remote control: within 5m distance and 30-degree deflection in front of product.

Air cooler / User Manual 7 / 32 EN

Instructions for use

3.2 Instructions for operation of body



Press a key on the unit to activate a corresponding function.

For instance:


- Press **[OSC.]** key to activate or deactivate swing function.
- Press [SPEED] key to adjust 3 speeds of air flow.
- Press [MODE] key to switch between normal, natural and sleep functions.
- Press [TIMER] key to set 1-15 hour timer setting.
- Press **[ION]** key to activate or deactivate negative lon function.
- When **[COOL]** key is pressed, the indicator lights up constantly if the operation is normal; when the indicator flashes, it denotes a water shortage, please add water immediately.




Considerate hint:

- 1. Push buttons on the unit may differ based on the actual product model.
- 2."ON/OFF"LED light will be pale white when product is only plugged in andturn to brighter white while in operation.
- When the air cooler is plugged into the electrical outlet the ON/OFF button will come on and stay ON. Simply unplug the product from the electrical outlet sto extinguish the light.

Using the ice box

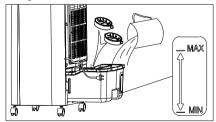

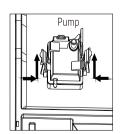



Considerate hint:

When humidifying, water level in the water tank must remain under max indication; replenish water if level gets lower than min indication.

8 / 32 EN Air cooler / User Manual

4 Other

4.1 Maintenance instruction

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

- 1. Before cleaning and assembling, fan must be unplugged.
- 2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- 3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
- 4. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
- 5. Do not allow water or any other liquid into the motor housing or interior parts.

4.2 Cleaning

- 1. Be sure to unplug from the electrical supply source before cleaning.
- 2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

4.3 Technical data

Power supply: 220V-240V, 50Hz

Technical and design modifications reserved.

Information									
Description	Symbol	Value	Unit						
Maximum fan flow rate	F	5.6	m³/min						
Fan power input	Р	65	W						
Service value	SV	0.09	(m³/min)/W						
Standby power consumption	P _{SB}	0.5	W						
Fan sound power level	L _{wA}	65	dB(A)						
Maximum air velocity	С	8	meters/sec						
Measurement standard for service value	ISO 5801:1997								
Contact details for obtaining more information Arcelik: Arcelik A.S. Sutluce, Karaagac Cd. 2, 34445 Beyoglu Istanbul Turkey									

Air cooler / User Manual 9 / 32 EN

4 Other

4.4 Remark

Ensure that the fan is switched off from the supply mains before removing the guard.

Importer in Poland Importer W Polsce Beko S.A. ul. Puławska 366 02-819 Warszawa www.beko.pl	Importer in Czech Republic Dovozce do České republiky BEKO S.A., organizační složka Bucharova 1423/6, Praha 13 - Nové Butovice,158 00 www.bekocr.cz		Importer in Slovakia Dovozca na Slovensko BEKO Slovakia s.r.o. Suché mýto 1 811 03 Bratislava www.bekosk.sk		Importer in Estonia Importija Eesti Beko S.A. Tänav Puławska 366 02-819 Varssavi (Poola)	
Importer in Germany Beko Deutschland GmbH Thomas-Edison-Platz 3 63263 Neu-Isenburg	Importer in UK BEKO Plc, Beko House, 1 Greenhill Crescent, Watford, Herts, WD18 8QU KSA Importer AL BABTAIN TRADING CO. P.O Box#181, Riyadh 11411-KSA +966-11-4744788		DING CO. P.O. n 11411 - KSA	Importer in France BEKO France / Immeuble Stadium 266, Avenue du Président Wilson 93218 La Plaine Saint-Denis Cedex		
Importer in Spain BEKO ELECTRONICS ESPANA S.L.C/ Provenza 388 1° Piso/08025 Barcelona	Importer for Malta ETV LTD 119/120 a Archbishop Street VALLETTA MALTA		Importer in Importētāja Beko S Ielas Puławska I Varšava (F	Latvijā .A. 866 02-819	Importer in Lithuania Importuotojas Lietuvoje Beko S.A. Gatvė Puławska 366 02-819 Varšuva (Lenkija)	
Importer in Austria ELEKTRA BREGENZ AG PFARRGASSE 77 VIENNA post code 1230	Importer in Switzerland Grundig Nordic AB Isafjordsgatan 39B 16440 Kista SWEDEN	Importer in Hungary Hauser Magyarorszag imited Baross utca 89 PC: 2040 Budaörs/Hungary		Importer in BIG BANG Šmartinska PC: 10 Ljubljana/S	, D.O.O. cesta 152 100	Importer in Italy BEKO ITALY SRL Viale Del Ghisallo, 20/I-20151 Milano (MI)
Importer in Romania ARCTIC S.A. Str. 13 Decembrie, nr. 210 Găești, 135200, România www.arctic.ro	Importer in Benelux Schaliënhoevedreef B - 2800 Mechelen - Belgium	PAR. Polist	orter in Greece . SEITANIDIS S.A. ilo, P.O. Box:1402 avala, 64003	Importer in Videolux LT 2109/210	D/PO Box	Importer in Croatia E PLUS doo ZA Unutarnju/ GOSPODARSKA 16c/10225 GORNJI STUPNIK/ZAGREP

Importer in Russia Импортер на территории РФ: ООО «БЕКО», 601021, Россия, Владимирская область, Киржачский район, деревня Федоровское, улица Сельская, 49

Бесплатная линия сервисного обслуживания и информационной поддержки по установке и эксплуатации (только для звонков по России) 8-800-200-23-56

Изготовитель: Arcelik A.Ş. Турция, Karaagac caddesi No: 2-6 Istanbul 34445 Sutluce, Istanbul

Виробник: «Arçelik A.Ş» Karaağaç Caddesi No: 2-6, Sütlüce, 34445 İstanbul, Turkey, «Arçelik A.Ş», м. Стамбул, Сютлюдже, вул. Караагач № 2-6, 34445, Туреччина

Імпортер на території України:

ТОВ «Беко Україна», адреса: 03150, м. Київ, вул. Антоновича, буд. 72, тел/факс.: 0-800-500-4-3-2 Термін служби 3 роки

Manufactured by Arcelik A.S. Karaagac Cd. No: 2-6 34445 Sutluce, Beyoglu, Istanbul, Turkey 19/10 Rev: 01

10 / 32 EN Air cooler / User Manual