




EN

USER MANUAL

REFRIGERATOR Bottom Freezer

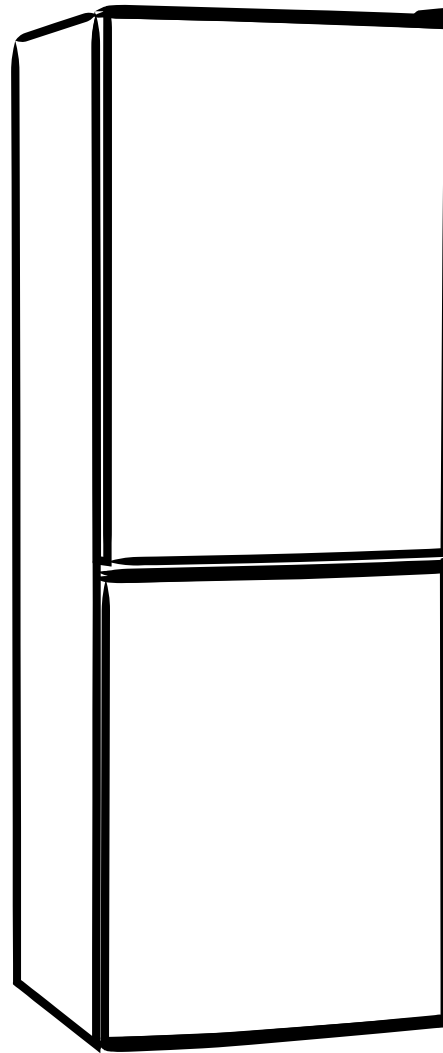


Warning:
Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice. Consult with your dealer or manufacturer for details.


**MODEL: MDRE353FGE01
MDRE353FGF01**

2 Proper use of refrigerators


2.1 Placement

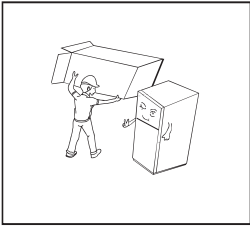


- Before use, remove all packing materials, including bottom cushions, foam pads and tapes inside of the refrigerator; tear off the protective film on the doors and the refrigerator body.

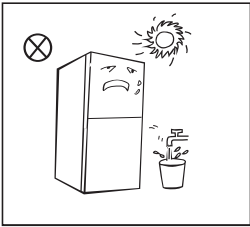

- Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.
- Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

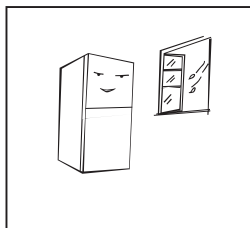

- The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy.

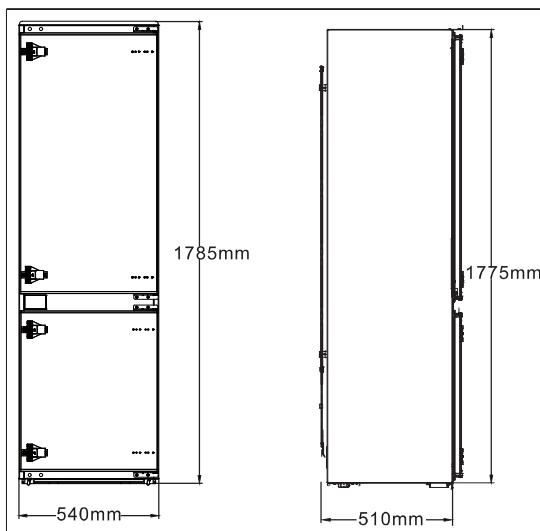


- Outer cabinet dimensions, please refer to shown as the left picture


❗ **Precautions before installation:**
Information in the Instruction Manual is only for reference. The physical product may differ. Before installation and adjusting of accessories, it shall be ensured that the refrigerator is disconnected from power.

2. 2 Installation in cabinet


- Cabinet size requirement.

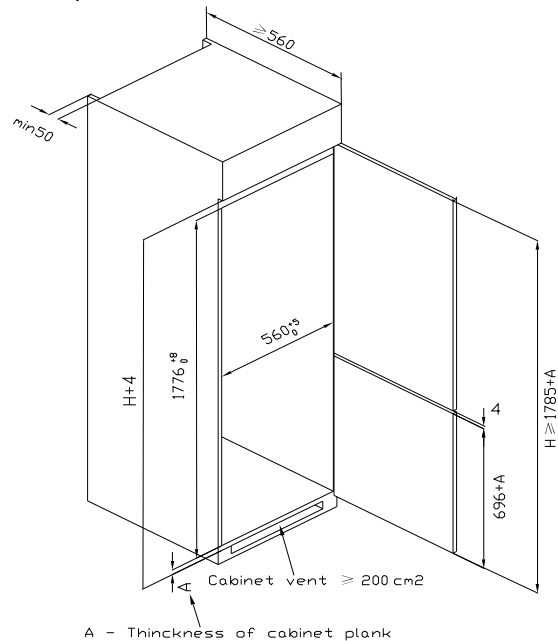



- Push the refrigerator into the cabinet and adjust it to make sure the edge fold of top baffle completely touch the top edge of the cabinet, and the limit hook of supporting leg completely touch the bottom edge of the cabinet.

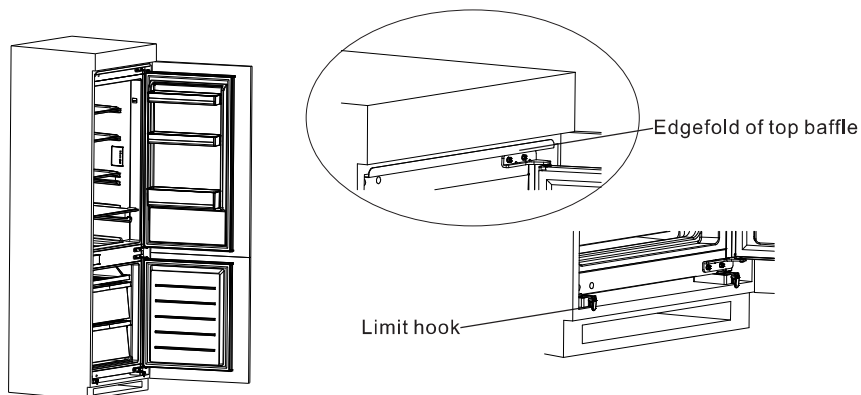



- Fix the supporting leg with screws, then install the screw caps.

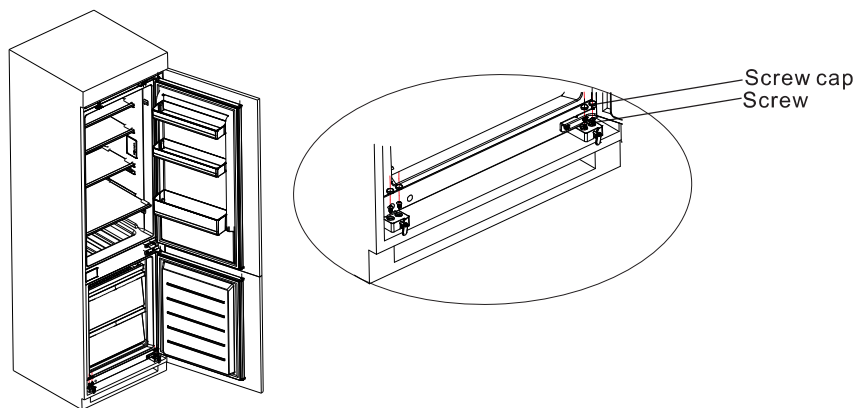



- Fix the top baffle to the top of the cabinet inner with screws, then install the screw caps.

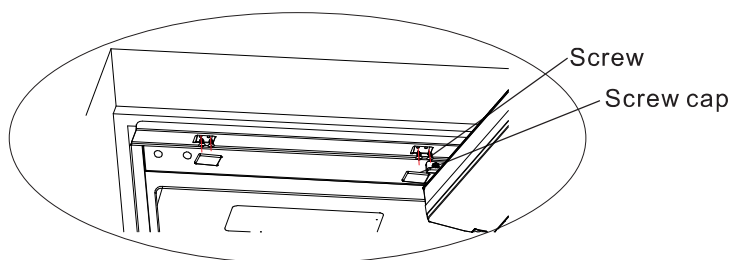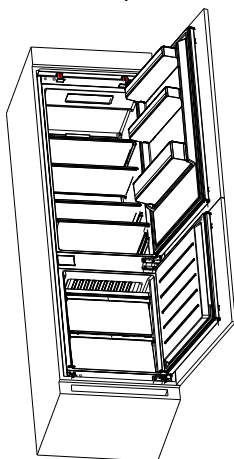


- Open the lower door of cabinet the maximum angle, and open the lower door of the refrigerator to the corresponding position. Sliding the block to make sure inner edge align with the lower door edge of refrigerator, then fix the block to the door of cabinet with screw and install screw caps. Fix the upper refrigerator door to the cabinet door in the same way.

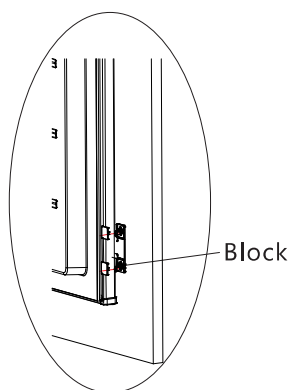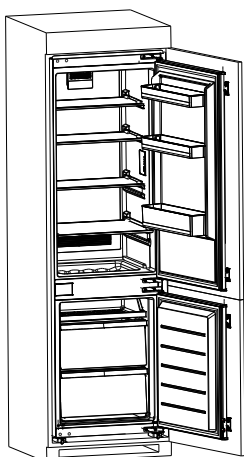

- Take out the sealing strip from accessory bag, and press it in the gap between the cabinet and the refrigerator. Installation is completed.

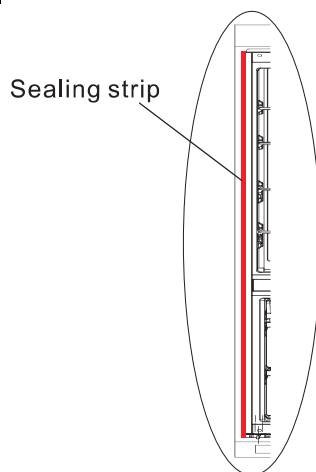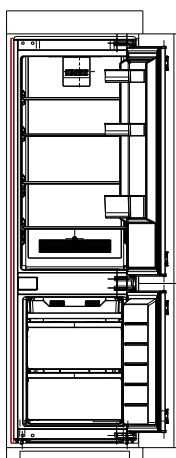




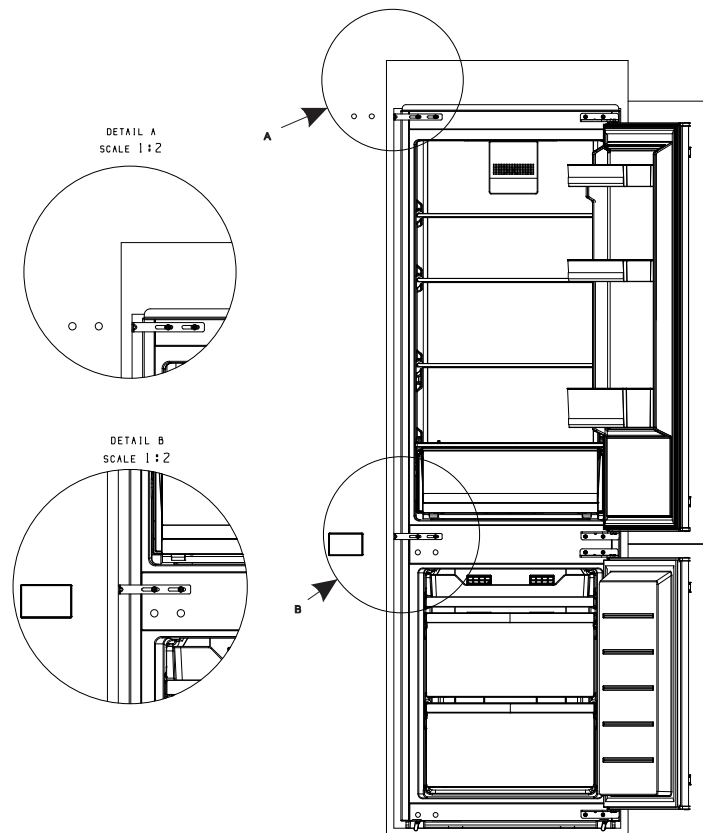

- Remove the decorative cover on the left side of the beam in the refrigerator and take out the middle beam fixing block, screws and plastic inserts in the attachment. Then insert the plastic inserts into two upper holes of the middle beam (or the lower holes), and then fix the middle beam fixing block to two lower holes (or the upper holes) of the middle beam with screws. When the screw is half tightened, move the fixing block to the cabinet and tighten the screws. Finally, tighten the fixing block on the cabinet with the small screws. The installation is completed. (This item is optional for the middle beam fixing block)




(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)


2. 3 Door Right-Left Change

List of tools to be provided by the user			
	Cross screwdriver		Putty knife
	5/16" socket and ratchet		thin-blade screwdriver
			Masking tape

- 1) Power off the refrigerator, and remove all objects from the door trays.
- 2) Remove the upper hinge and hole caps of refrigerator door.

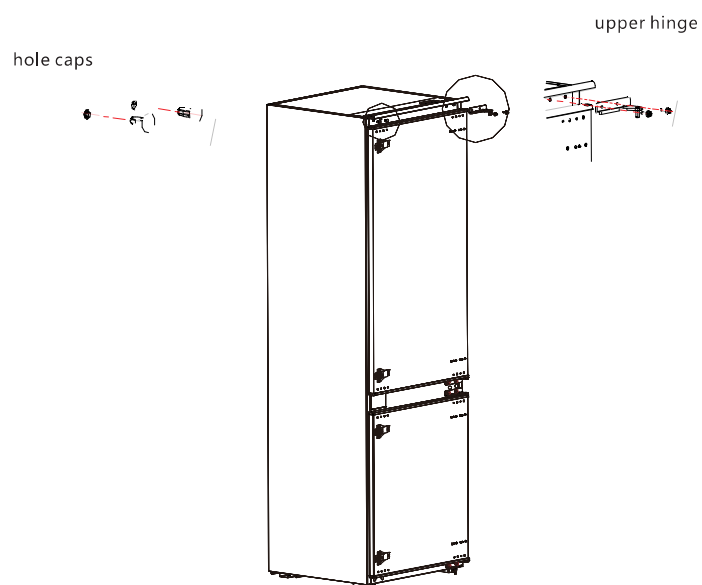


- 3) Remove the refrigerator door, the bottom hinge and the hole cover.

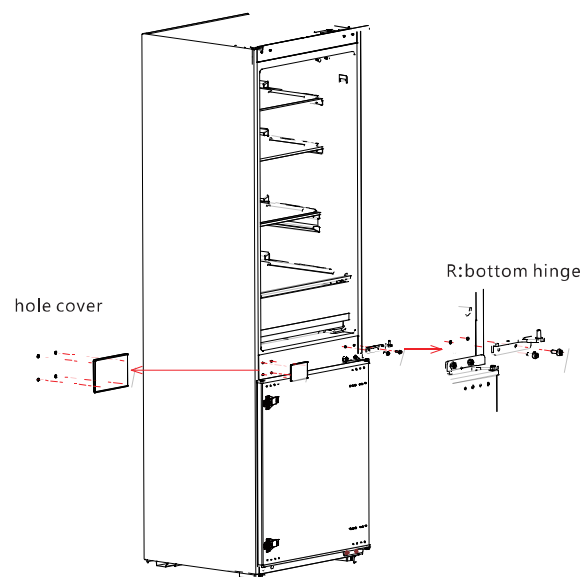


4) Exchange the R:bottom hinge and R:upper hinge , then install them according to below steps, and install the top hole caps.


5) Remove the two fixed blocks of refrigerator door and rotate them for 180° , and install them on other side of refrigerator door.

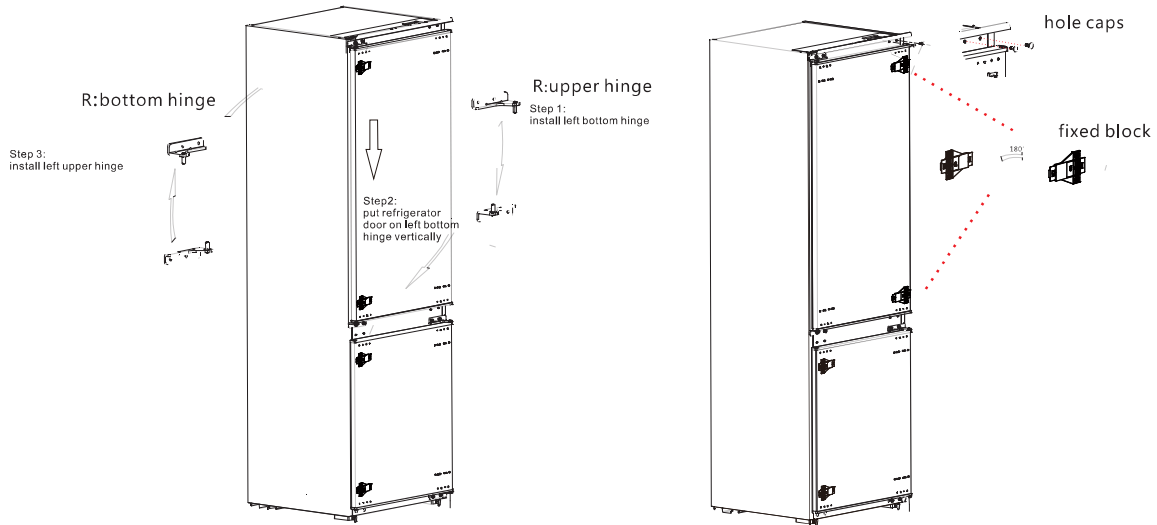

6) Remove the the upper hinge of freezer door.

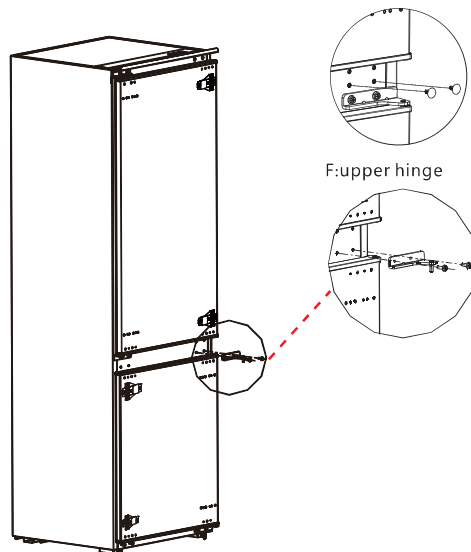


7) Remove the freezer door, the bottom hinge and the hole caps.

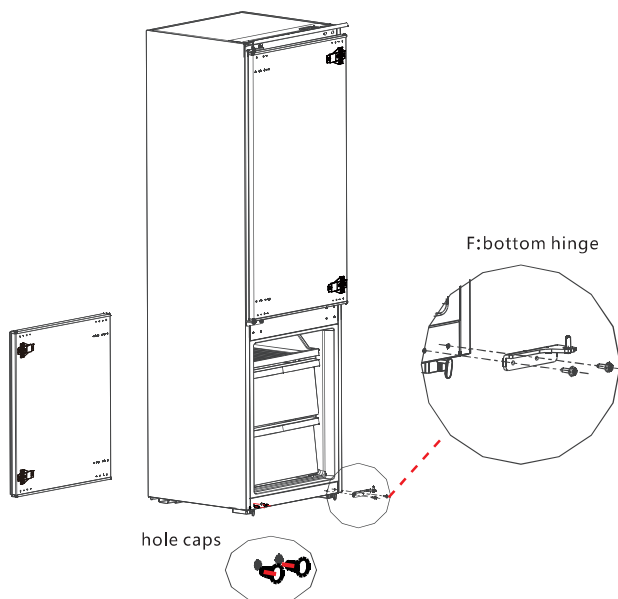


8) Exchange the F:bottom hinge and F:upper hinge , then install them according to below steps, and install the top hole cover and lower hole caps.

9) Remove the two fixed blocks of freezer door and rotate them for 180° , and install them on other side of freezer door.

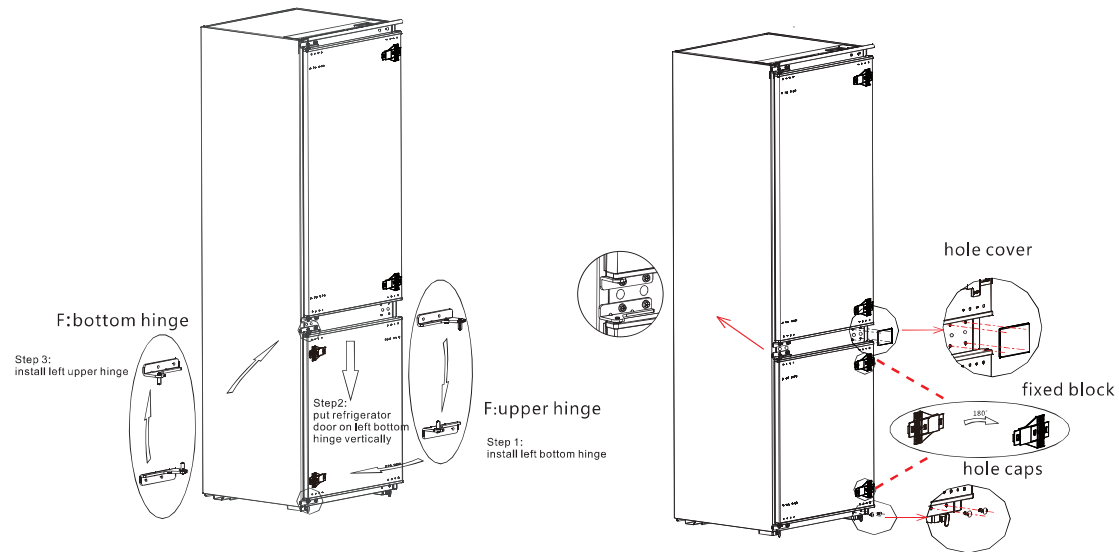

10) The picture after completion is shown as below

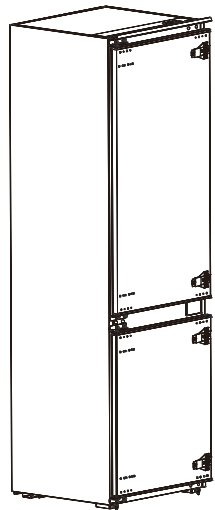

(The picture above is only for reference. The actual configuration will depend on the physical product or statement by the distributor)